

### SECTION DR-1 830/840 DRIVE COMPONENT INSTALLATION

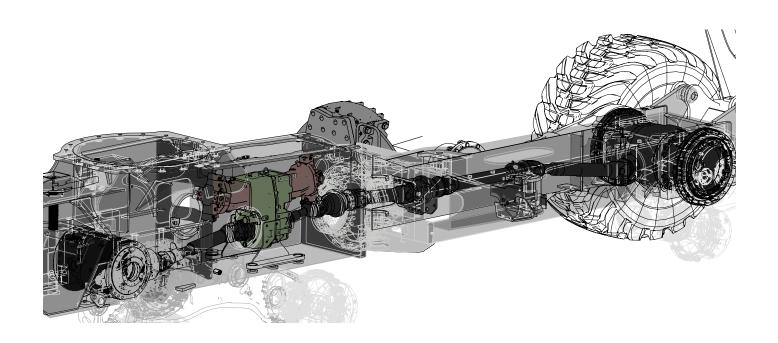

### **DRIVE COMPONENT INSTALLATION**

### DRIVE COMPONENT INSTALLATION FRAME LOCK BRAKE ASSEMBLY AND INSTALLATION

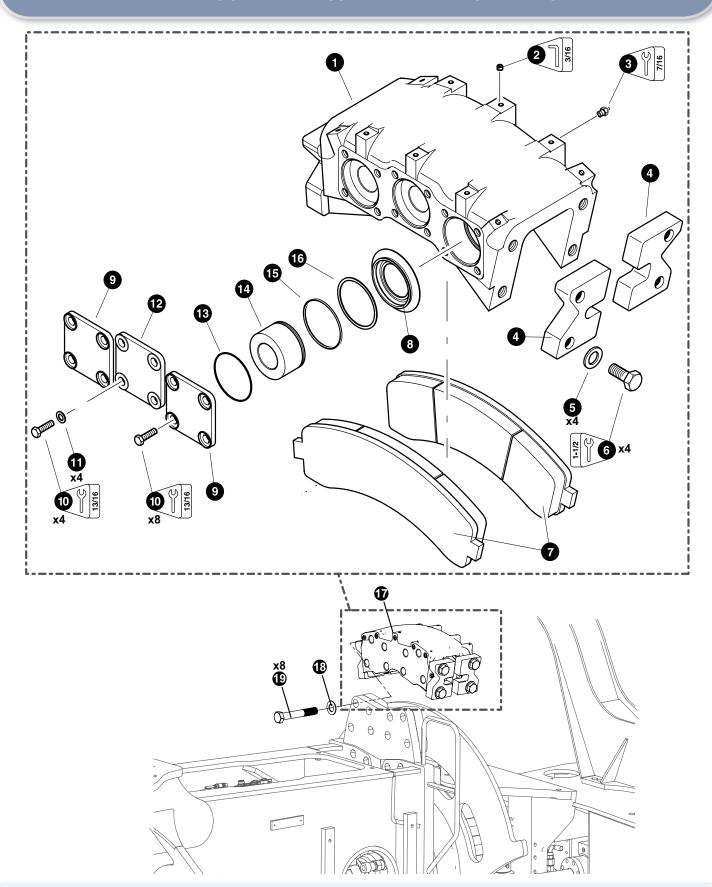


### DRIVE COMPONENT INSTALLATION FRAME LOCK BRAKE ASSEMBLY AND INSTALLATION

REF	PART #	QTY		DESCRIPTION	SEE SECTION
17	20953	1		FRAME LOCK BRAKE (Assembled)	
1	NSS	1		HOUSING	
2		13		PLUG	
3		1		SCREW, bleed	
4		4		RETAINER, brake pad	
5		8		WASHER	
6		8		BOLT	
7	24406	1		PAD, brake (pair)	
8	NSS	6	$\mathfrak{H}$	BOOT, piston	
9	23445	2		COVER, piston (Machined special to countersink	
				bolt heads)	
10	24088	12		BOLT - 9/16" x 1-1/4"	
11		4		WASHER	
12	23444	1		COVER, piston	
13	NSS	6	$\mathfrak{H}$	O-RING, piston cover	
14	24434	6		PISTON, brake caliper	
15	NSS	6	$\mathfrak{H}$	SEAL, piston	
16	NSS	6	$\mathfrak{H}$	RING, back-up	
-	23113	1		KIT, seal repair - frame lock brake	
18	22531	8		WASHER - 1-1/4"	
19	23351	8		BOLT - 1-1/4" x 4-1/2" NF	

See referenced page for component or assembly breakdown.

<sup>₩</sup> Included in seal repair kit Part # 20953.

## DRIVE COMPONENT INSTALLATION TRANSFER CASE/GEARBOX AND MOTOR AND INSTALLATION

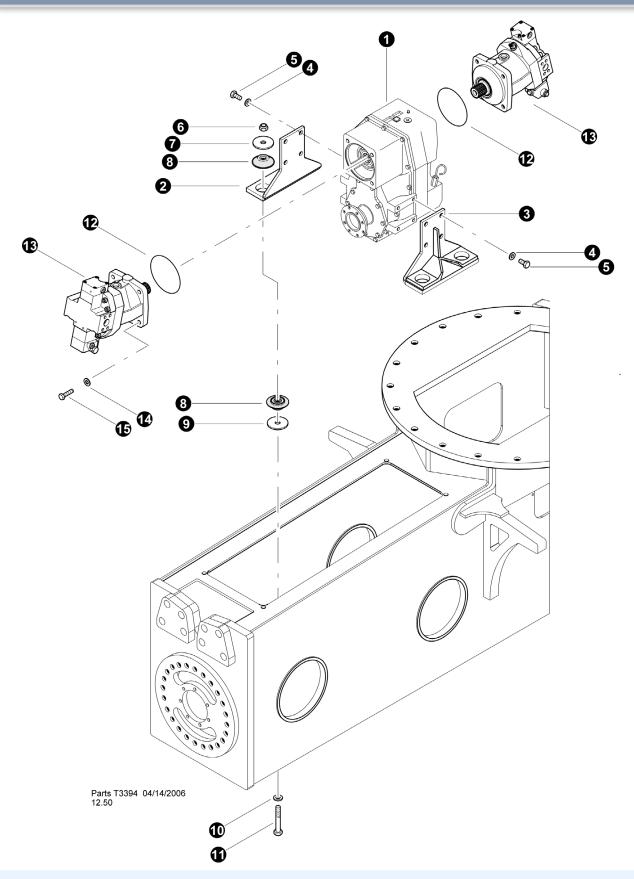

## DRIVE COMPONENT INSTALLATION TRANSFER CASE/GEARBOX AND MOTOR AND INSTALLATION

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	(Click Here)	1	Transfer Case NAF	AX-4
2	52119	1	MOUNT, TRANSMISSION TIM-15 TF810-840	
3	52119	1	MOUNT, TRANSMISSION TIM-15 TF810-840	
4	50447	8	WASHER, FLAT - 16MM	
5	50382	8	BOLT - 16mm 2.00 X 40mm (Torque to 180 ft-lbs) (See Note #1 Below)	
6	10817	4	NUT, lock 3/4"	
7	17918	8	WASHER, isolator mount .875"	
8	17904	8	ISOLATOR	
9	17918	8	WASHER, isolator mount .875"	
10	15550	8	WASHER, SAE flat - 3/4"	
11	10844	4	BOLT - 3/4" x 5"	
12	20967	2	O-RING, WHEEL DRIVE MOTOR PILOT (FWD)	
13	(Click Here)	1	WHEEL DRIVE MOTOR	LH-1
14	42110	8	WASHER, FLAT - 20MM	
15	18525	8	BOLT, - 20mm X 50 mm (See Note #1 Below) (Torque to 180 ft-lbs)	

- See referenced page for component or assembly breakdown.
- ☐ Kit or Assembly includes all items indented underneath.


#### Note #1:

Use Loctite 243 (blue) on threads during installation.

#### Note #2:

Use Loctite 271 (red) on threads during installation.

### DRIVE COMPONENT INSTALLATION FRONT DRIVE-SHAFT INSTALLATION

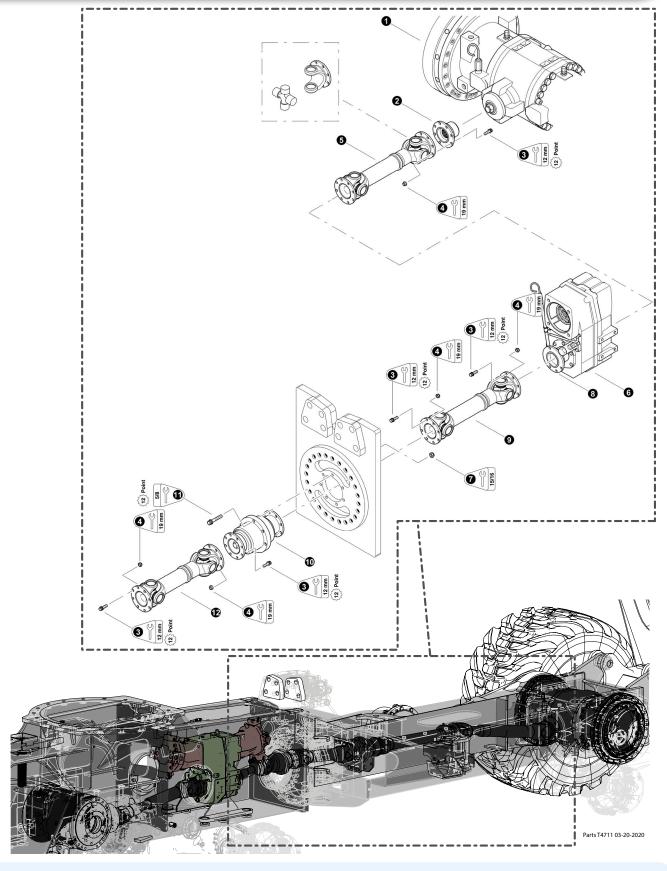

### DRIVE COMPONENT INSTALLATION FRONT DRIVE-SHAFT INSTALLATION

REF	PART #	QTY	DESCRIPTION SEE SECTION
1	REF.	1 🖺	<b>☐ FRONT AXLE AX-1</b>
2	23997	1	YOKE, companion flange - axle (Torque nut to 590 ft lbs.(800 Nm) (see note #2))
3	50261	48	BOLT, 12 point - 12mm-1.75P x 35mm (See Note #1 Below)
4	50262	48	NUT, lock - 12mm
5	50283	1 🗆	DRIVE SHAFT, (Transfer Case to front axle)(464295-61)
		2	FITTING, 90° grease - 10mm
	50466	2	KIT, CROSS & BEARING
	50467	2	YOKE, FLANGE (90mm)
6	REF	1	Transfer Case NAF
7	10816	6	NUT, lock - 5/8"
8	-FF	2	YOKE, HD flange - NAF Transfercase (7521.238)
9	23996	1 🗆	DRIVE SHAFT (Transfer Case to Carrier Bearing) (445731-61)
		2	FITTING, 90° grease - 10mm
	50466	2	KIT, CROSS & BEARING
	50467	2	YOKE, FLANGE (90mm)
10	25218	1	IDLER, driveshaft (HD)
11	50050	6	BOLT, 12 point - 5/8" x 3" (See Note #1 Below) (Torque to 130 ft.lbs. (175 Nm))
12	25968	1 🗆	DRIVE SHAFT (Center joint) (20" (503mm) C/L-C/L) (fits all TF front frames with HD
			driveshafts) (457176-61)
		2	FITTING, 90° grease - 10mm
	50466	2	KIT, CROSS & BEARING
	50467	2	YOKE, FLANGE (90mm)

- See referenced page for component or assembly breakdown.
- ☐ Kit or Assembly includes all items indented underneath.


#### Note #1:

Use Loctite 243 (blue) on threads during installation.

#### Note #2:

Use Loctite 271 (red) on threads during installation.

## DRIVE COMPONENT INSTALLATION DRIVE SHAFT INSTALLATION

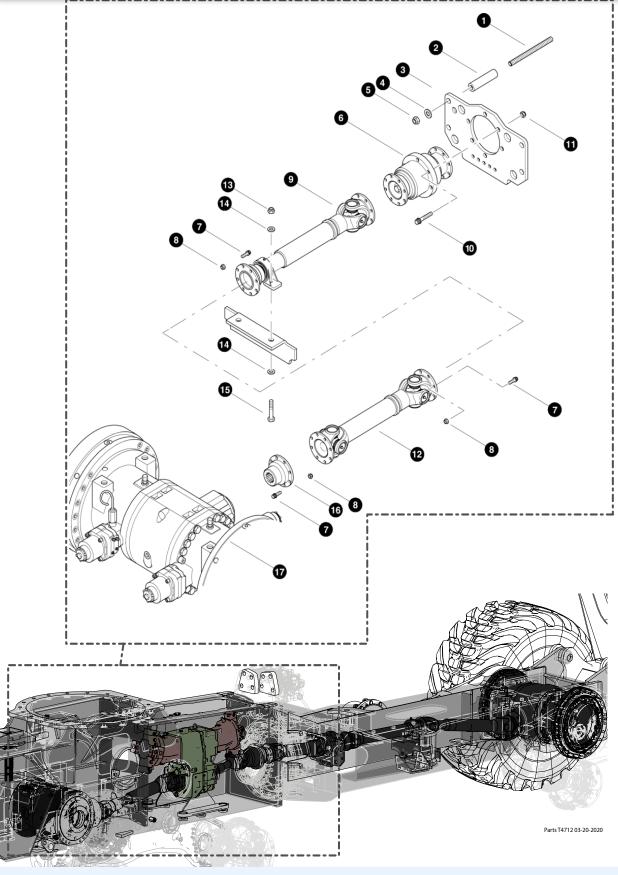

## DRIVE COMPONENT INSTALLATION DRIVE SHAFT INSTALLATION

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	26037	4	STUD, 3/4 X 8.5 (see note #2)	
2	80721	4	SPACER	
3	52486	1	BRACKET, bearing mount	
4	15550	4	WASHER, SAE flat 3/4	
5	10817	4	NUT, lock - 3/4"	
6	25218	1	IDLER, driveshaft (HD)	
7	50261	24	BOLT, 12 point - 12mm-1.75P x 35mm (See Note #1 Below)	
8	50262	24	NUT, lock - 12mm	
9	50791	1	DRIVE SHAFT (Gearbox to Center) (500793-61)	
	50466	2	KIT, CROSS & BEARING	
	50467	2	YOKE, FLANGE (90mm)	
	51594	1	BEARING, PILLOW BLOCK	
10	50050	6	BOLT, 12 point - 5/8" x 3" (See Note #1 Below)(Torque to 130 ft.lbs. (17	75 Nm))
11	10816	6	NUT, lock - 5/8"	
12	50791	1	DRIVE SHAFT (Gearbox to Center) (498347-61)	
	50466	2	KIT, CROSS & BEARING	
	50467	2	YOKE, FLANGE (90mm)	
13	10816	2	NUT, LOCK625"	
14	23210	4	WASHER, SAE FLAT625" (EXTRA THICK)	
15	15517	2	BOLT625" X 2.5"	
16	23997	1	YOKE, companion flange - AXLE	
17	(Click Here)	1	AXLE ASSY	AX

- $\hfill \square$  See referenced page for component or assembly breakdown.
- ☐ Kit or Assembly includes all items indented underneath.


#### Note #1:

Use Loctite 242 (blue) during installation.

#### Note #2:

Use Loctite 262 (red) during installation.

### DRIVE COMPONENT INSTALLATION REAR AXLE INSTALLATION

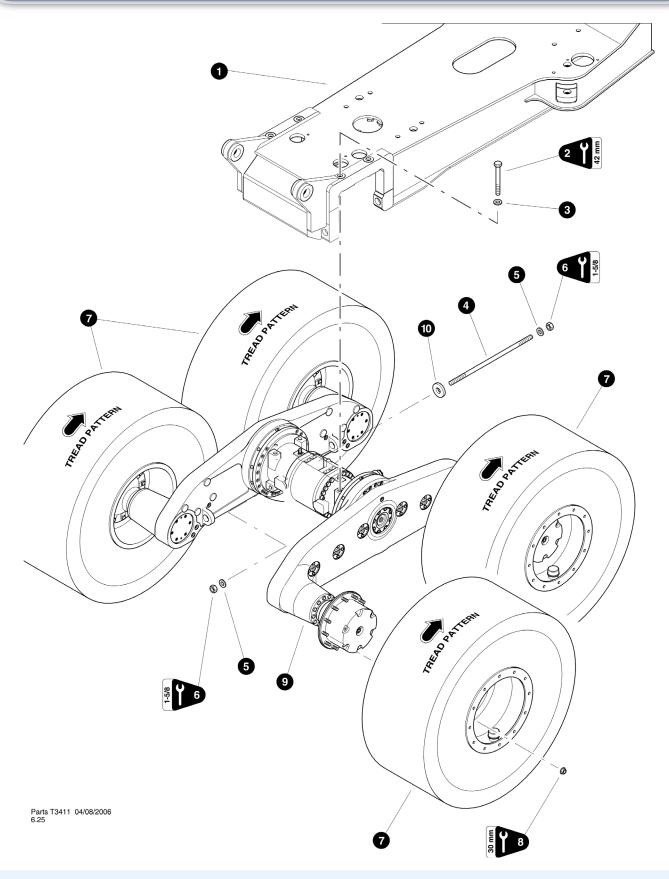

# DRIVE COMPONENT INSTALLATION REAR ALXE INSTALLATION

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	(Click Here)	1	REAR FRAME WELDMENT	L-2-1
2	23567	4	BOLT - 30mm-3.5P x 220mm (Torque to 1100 ft.lbs. (1465 Nm))	
3	23990	4	WASHER, SAE FLAT - 1.25" (EXTRA THICK)	
4	52485	2	STUD - 1.25" - 7 X 27.50" (Torque to 1200 ft.lbs. (1600 Nm))	
5	22531	4	WASHER, SAE flat - 1-1/4"	
6	23989	4	NUT, lock - 1-1/4" (Torque to 1200 ft.lbs. (1600 Nm))	
7	(Click Here)	4	WHEEL ASSEMBLY	AX-5
8	19361	48	NUT, lug (Torque to 600 ft.lbs. (800 Nm))	
9	(Click Here)	1	REAR AXLE	AX-1
10	24003	2	SPACER, axle spreader box	

See referenced page for component or assembly breakdown.

### **PAGE INTENTIONALLY LEFT BLANK**