



SECTION UP-1

UPPER TURNTABLE STRUCTURAL COMPONENTS, DOORS, AND COVERS

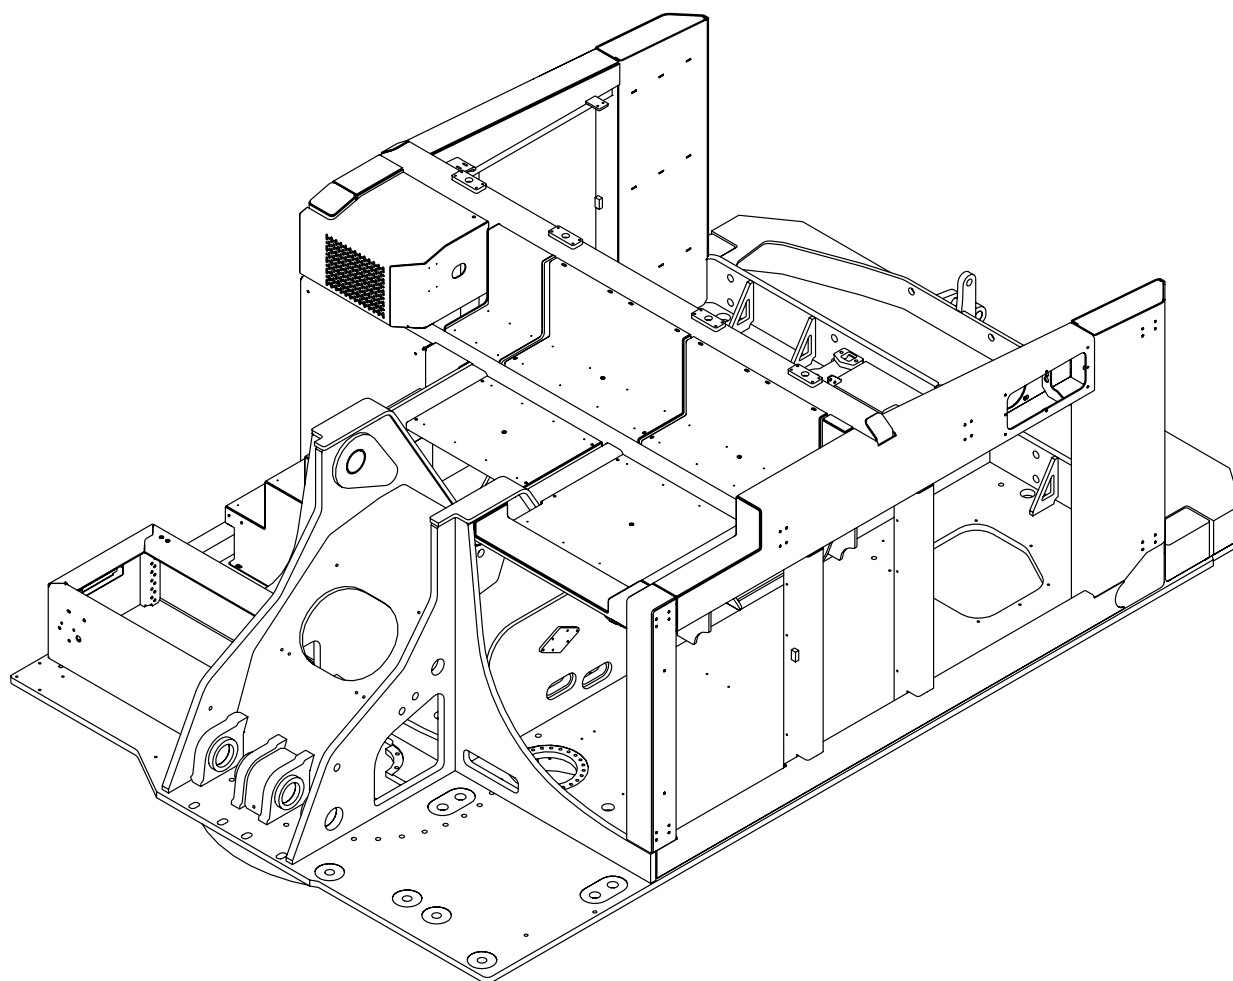

UPPER TURNTABLE

ROTARY MANIFOLD AND SWING BEARING INSTALLATION

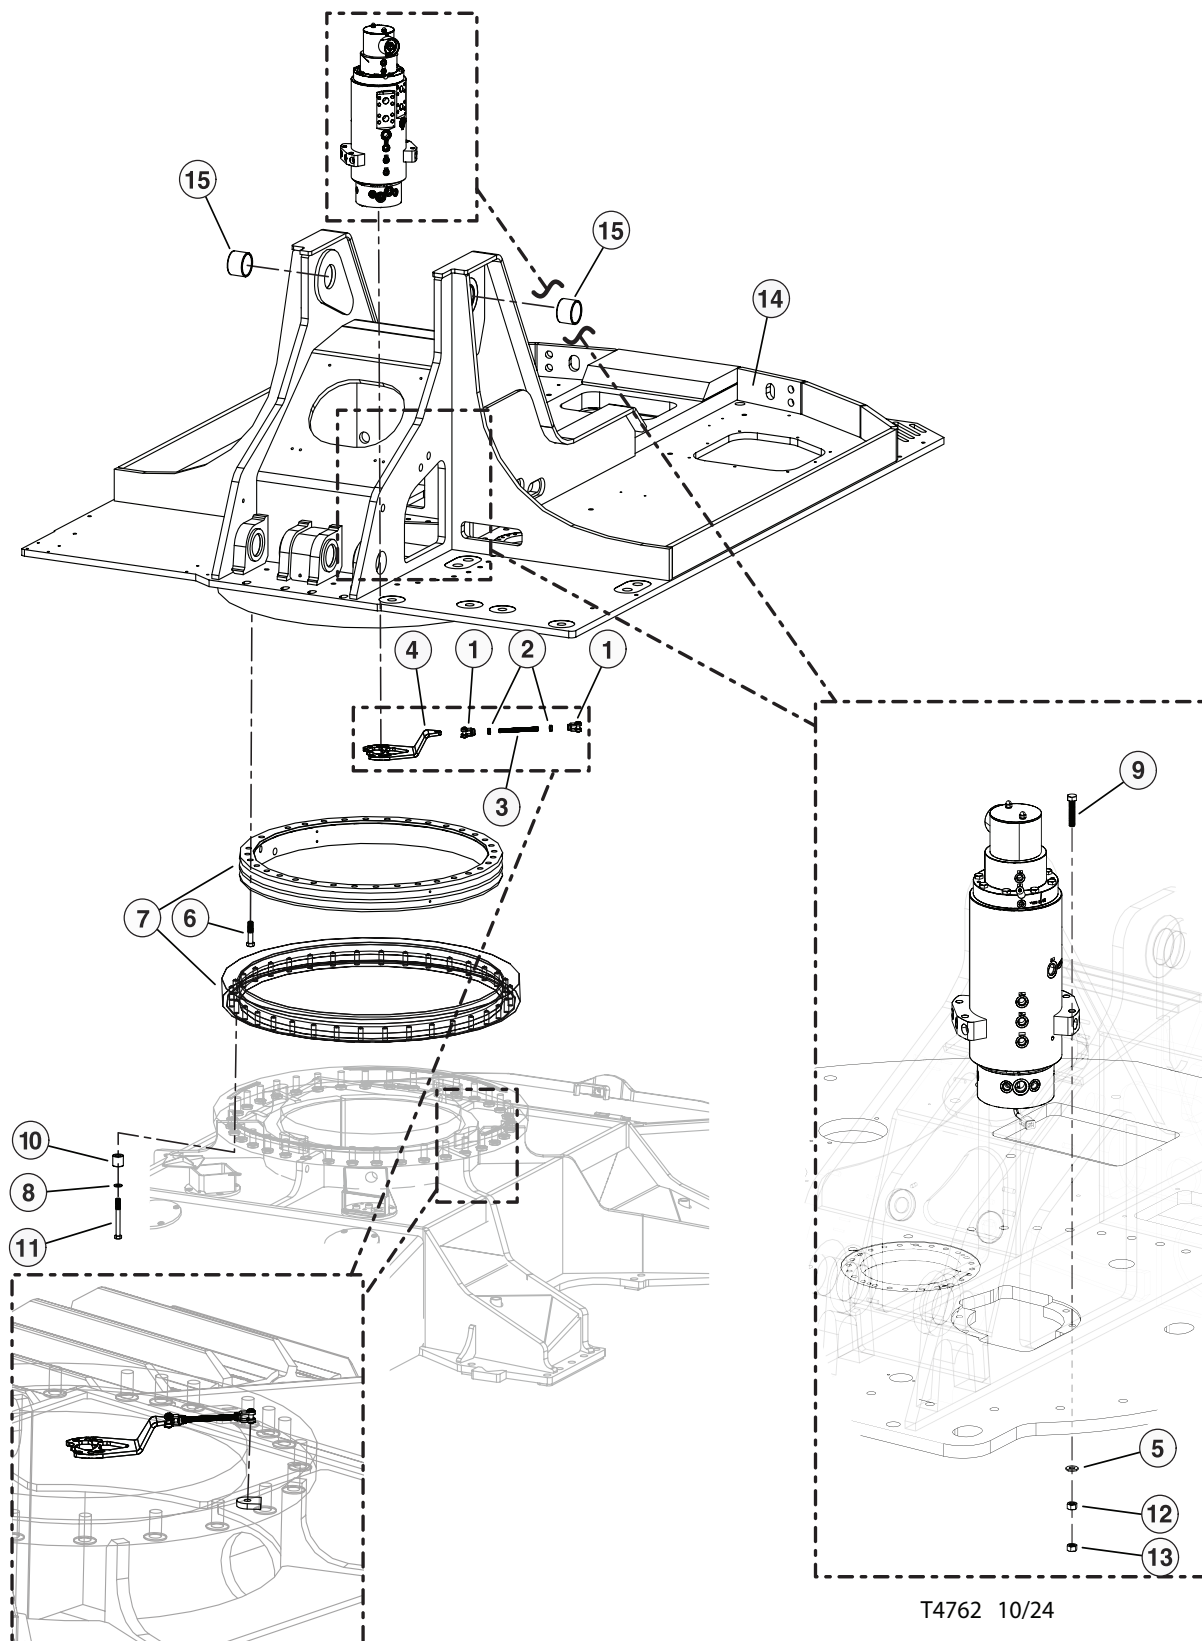


UPPER TURNTABLE

ROTARY MANIFOLD AND SWING BEARING INSTALLATION

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	52381	2	YOKE, ROTARY MANIFOLD 5/8 X 5/8 (Assembly includes pin)	
2	52395	2	NUT, JAM .63-18NF HEX (PLATED)	
3	52394	1	STUD, 5/8"-18NF X 7.5 LG (ZINC PLATED)	
4	60506	1	BRACKET, SWIVEL LOCK ARM - T/M TAIL	
5	23210	4	WASHER, SAE FLAT - .625" (EXTRA THICK)	
6	51690	34	BOLT, ALLEN HEAD - 1" X 4.5" (SWING BRG)	
7	58591	1	BEARING, SWING - DOUBLE BALL LOG LOADER	
8	18532	36	WASHER, 1" SAE	
9	10838	4	BOLT - .625" X 5"	
10	53143	36	SPACER, BOLT - LOWER TURNTABLE 1.50 LG	
11	18535	36	BOLT - 1" X 5"	
12	17515	4	NUT, HEX - .625"	
13	10816	4	NUT, LOCK - .625"	
14	660050	1	WELDMENT, LOG LOADER UPPER TURNTABLE	
15	62488	2	BUSHING, 4.5" X 4.0" X 3.19 LG - MAIN BOOM	


UPPER TURNTABLE

(SWING MOTOR INSTALLATION)

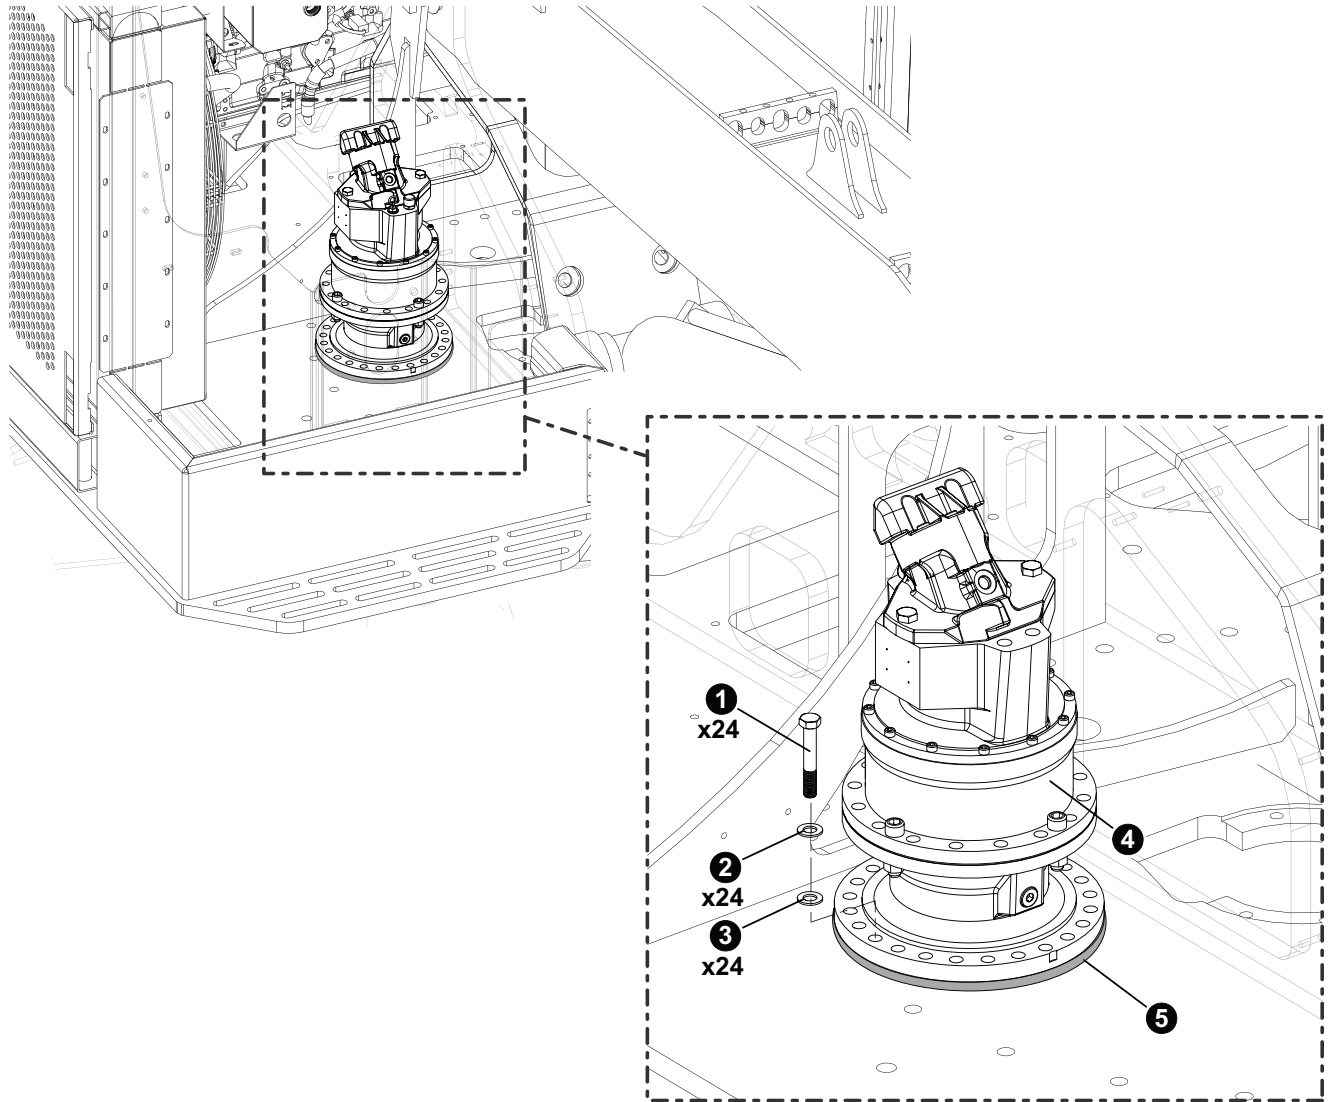

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	57870	24 (per motor)	BOLT - .625" X 2.75" (Torque to 230 ft.lbs (310 Nm))	
2	57871	24 (per motor)	WASHER, SURELOK - 5/8" (SWING GEARBOX)	
3	23210	24 (per motor)	WASHER, SAE FLAT - .625" (EXTRA THICK)	
4	57213	2	MOTOR, SWING - L&S 32.5:1 / 56CC	
5	54026	1	RING, SPACER SWING GEARBOX	

UPPER TURNTABLE (SWING MOTOR INSTALLATION)

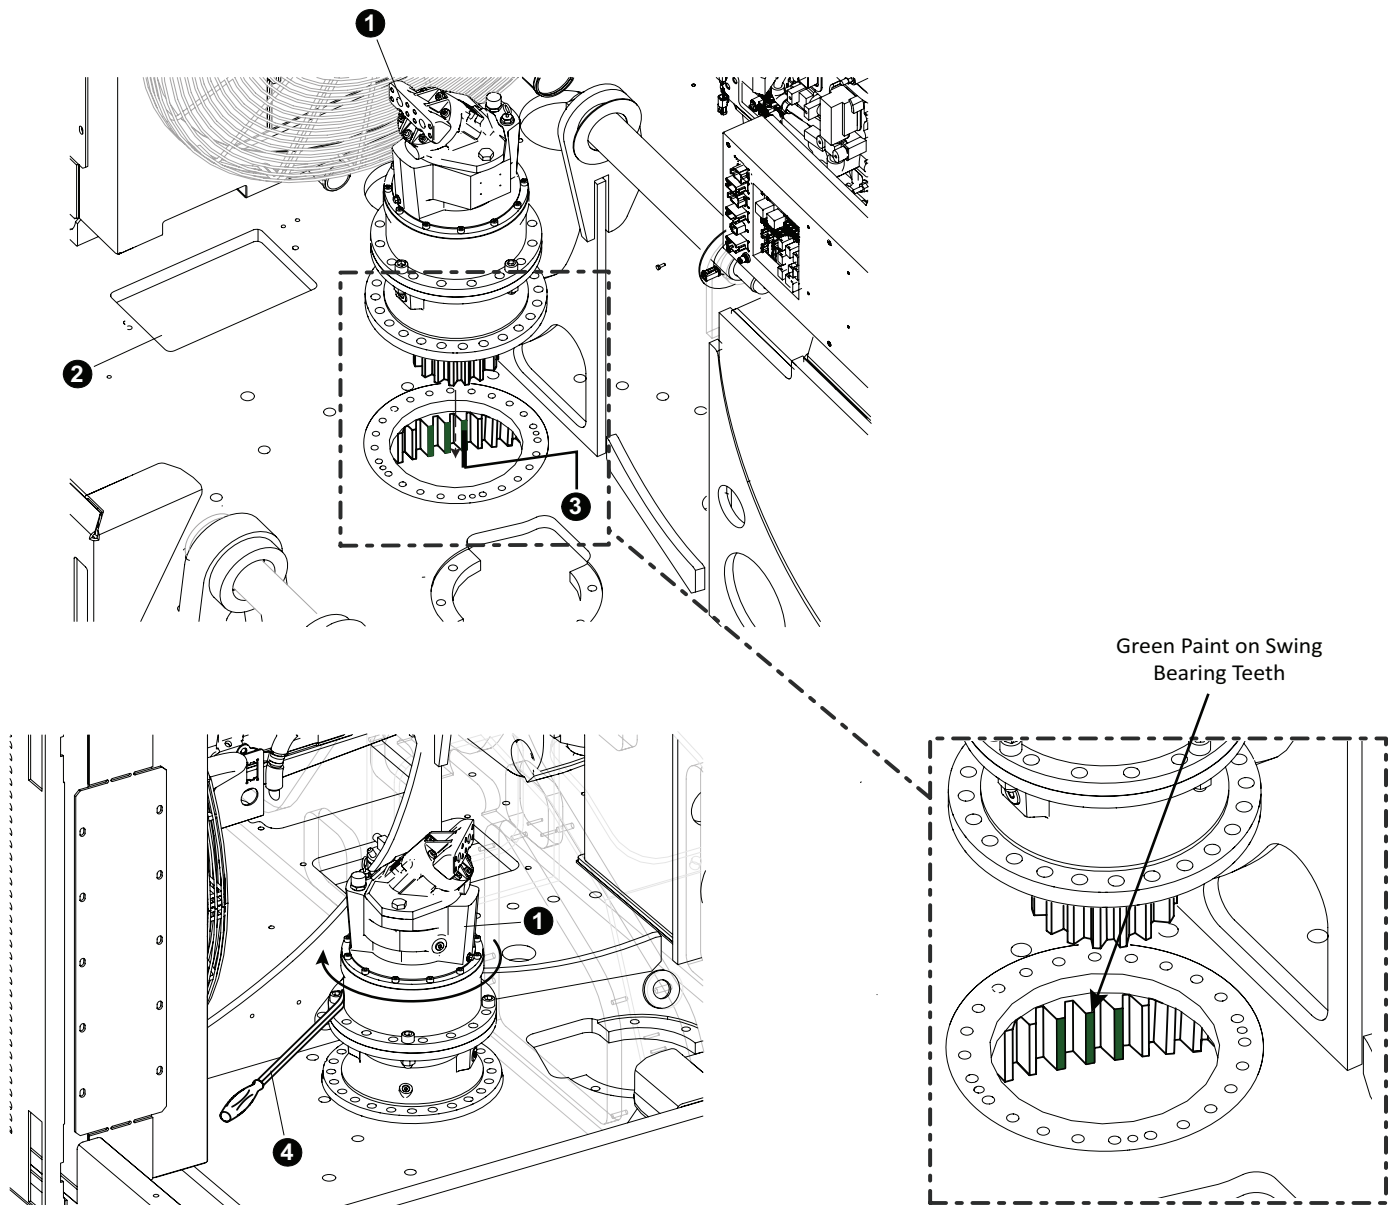


INSTALLING THE ECCENTRIC SWING MOTOR:

IMPORTANT:

1. Locate the green paint on the swing bearing teeth (3) by rotating the swing bearing until the green teeth are centered below the upper turntable (2).
2. Using a lifting device, lower the Eccentric swing motor (1) onto the upper turntable (2).
 - a. Note: It may be necessary to lift the swing motor back out of position and rotate the motor until the motor fits snug with the upper turntable.
2. Once the swing motor is in place, using a pry bar (4), turn the motor clockwise until tight.
3. Additional adjustments may be required. Use the closest set of bolt holes to fasten the motor to the upper turntable.

UPPER TURNTABLE

(AUTO GREASE SYSTEM INSTALLATION)(SWING DRIVE GEARCASE BEARING)

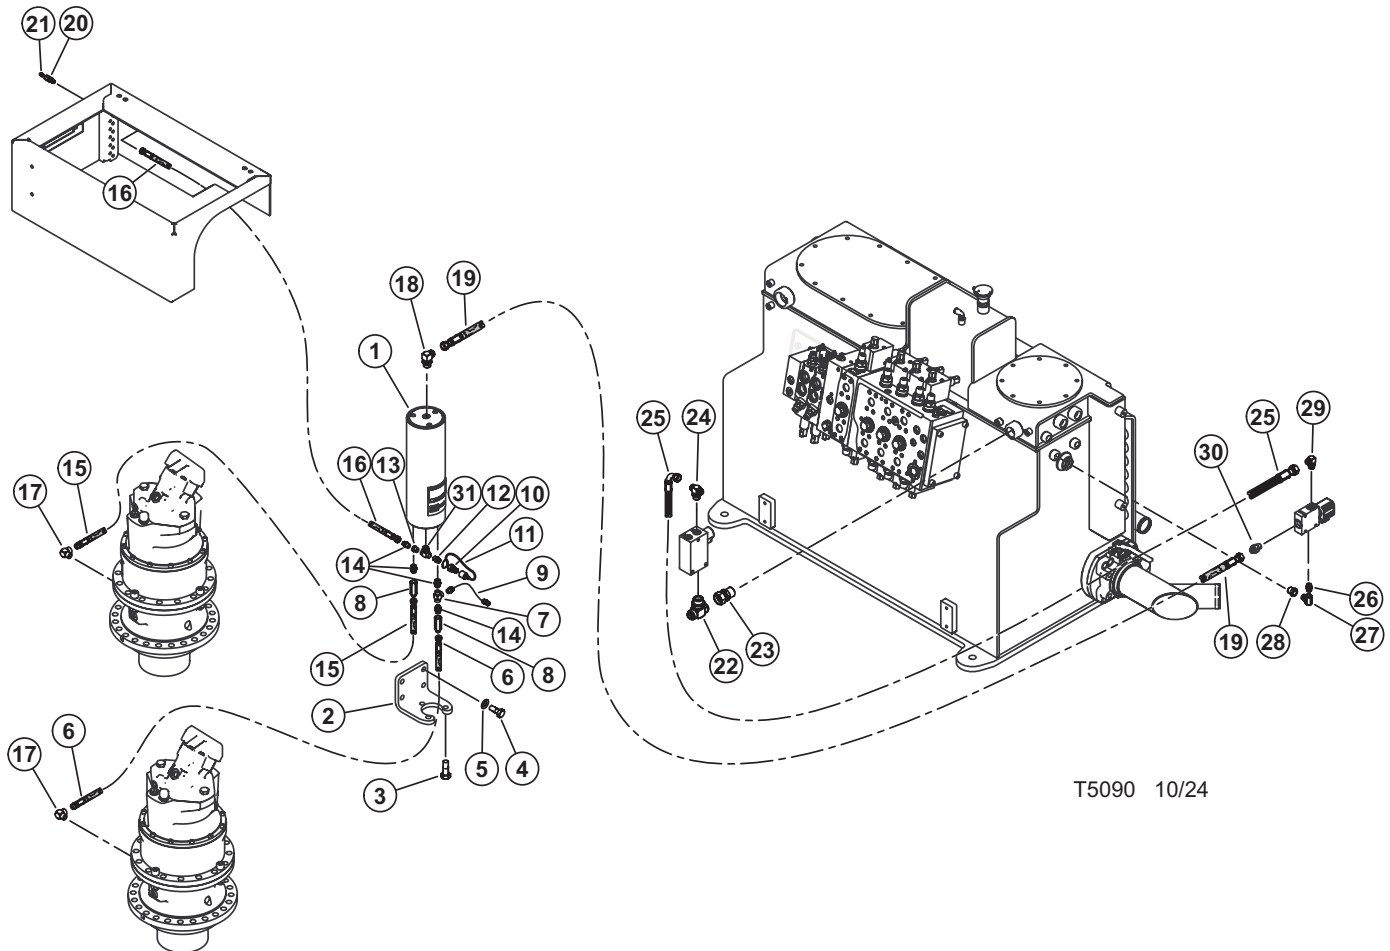

T5090 10/24


UPPER TURNTABLE

(AUTO GREASE SYSTEM INSTALLATION)(SWING DRIVE GEARCASE BEARING)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	57303	1	ACCUMULATOR, GREASE SYSTEM	
2	48344	1	PLATE, GREASE TUBE MOUNT	
3	(CALL)	2	BOLT - M12-1.75 X 30MM	
4	10402	2	BOLT - .375" X 1.25"	
5	15528	2	WASHER, SAE FLAT - .375"	
6	(See Description)	1	HOSE ASSY. - (PART # HLB0115 02-02PS-04JS-W) - Grease acc to right swing	
7	55633	1	FITTING, TEE - MALE RUN #6 - 6 AOG5JG5-S	
8	57498	2	VALVE, CHECK - ORIFICE GREASE SYSTEM	
9	57596	1	TRANSDUCER, PRESSURE - GREASE SYSTEM	
10	17307M	1	QUICK DISCONNECT - .5" (MALE)	
11	17323F	1	COVER, DUST - QUICK DISCONNECT (FEMALE)17307M	
12	53107	1	CONNECTOR, STR - 1/2 X 3/8 FF-S	
13	16294	1	BUSHING, REDUCER - 6410-6-4	
14	18034	2	CONNECTOR, STR - FF1852T-0606S	
15	(See Description)	1	HOSE ASSY. - (PART # HLB0117 02-02PS-04JS-W) - Grease acc to left swing	
16	(See Description)	1	HOSE ASSY. - (PART # HLB0130 02-02PS-04JS-W) - Grease acc fill	
17	22281	2	ELBOW, 90 - 5546132	
18	57586	1	ELBOW, 90 4-5 GREASE ACCUMULATOR	
19	(See Description)	1	HOSE ASSY - (PART # 387TC102 04-04OS-04OS-W) - Greaser valve to acc	
20	15658	1	CONNECTOR, STR BULKHEAD - 2239-2-4S	
21	10704	1	GREASE ZERT - STR	
22	55622	1	TEE, BRANCH - STRAIGHT THREAD #16	
23	15497	1	CONNECTOR, STR - 16 F5OX-S	
24	55701	1	FITTING, TEE - 6 R5OX-S	
25	(See Description)	1	HOSE ASSY - (PART # 387TC16.5 06-06JS-06J9-W) - Grease valve to charge	
26	18034	2	CONNECTOR, STR - FF1852T-0606S	
27	55633	1	FITTING, TEE - MALE RUN #6 - 6 AOG5JG5-S	
28	22909	1	BUSHING, REDUCER - 6410-8-6	
29	15480	1	ELBOW, 90 - 6801-6	
30	54809	1	CONNECTOR, STR - 4 JIC x -6 ORB	
31	55633	1	FITTING, TEE - MALE RUN #6 - 6 AOG5JG5-S	

UPPER TURNTABLE

AUTOGREASE MANIFOLD

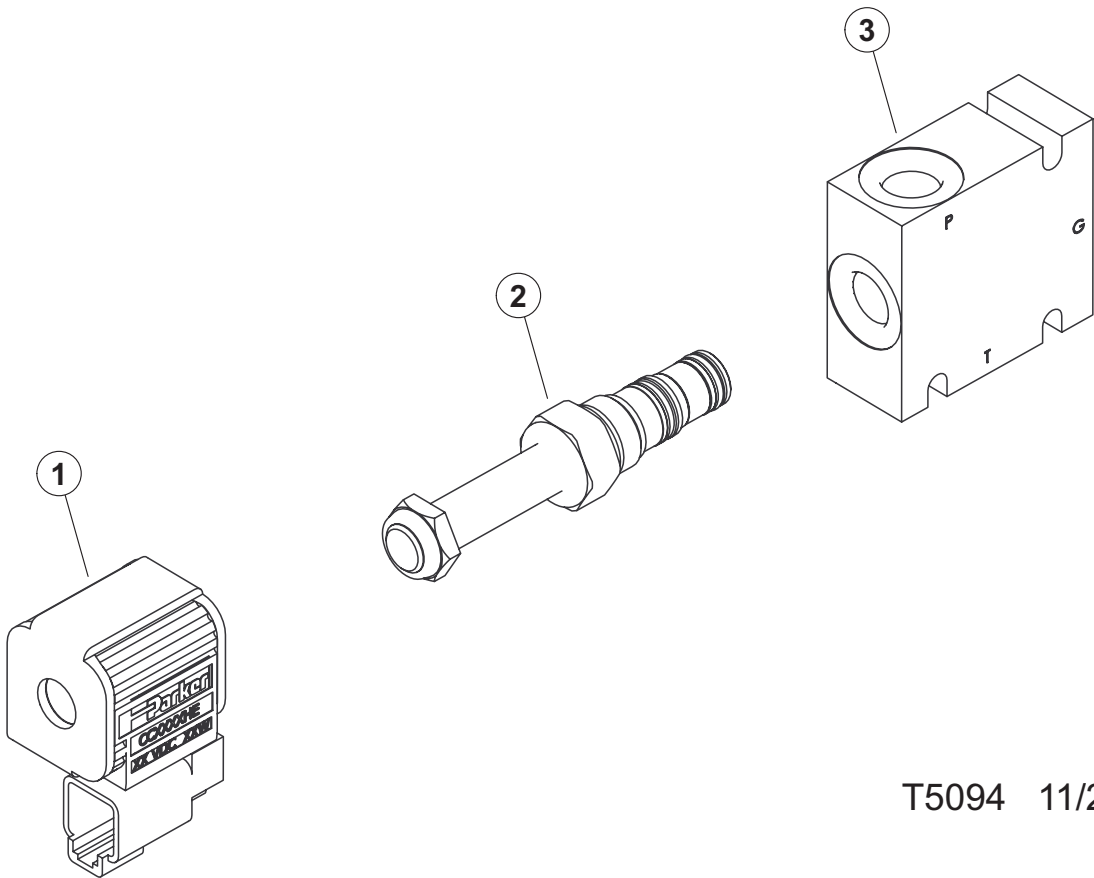


T5094 11/23

REF	PART #	QTY	DESCRIPTION	SEE SECTION
	57509	1	VALVE, AUTO GREASE SYSTEM	
1	CCXXXXHE-57509	1	COIL - 24V	
2	DSL083A-57509	1	CARTRIDGE	
3	57509-BODY	1	BODY	

PAGE INTENTIONALLY LEFT BLANK

UPPER TURNTABLE

SWING BEARING & BULL GEAR GREASE LINES

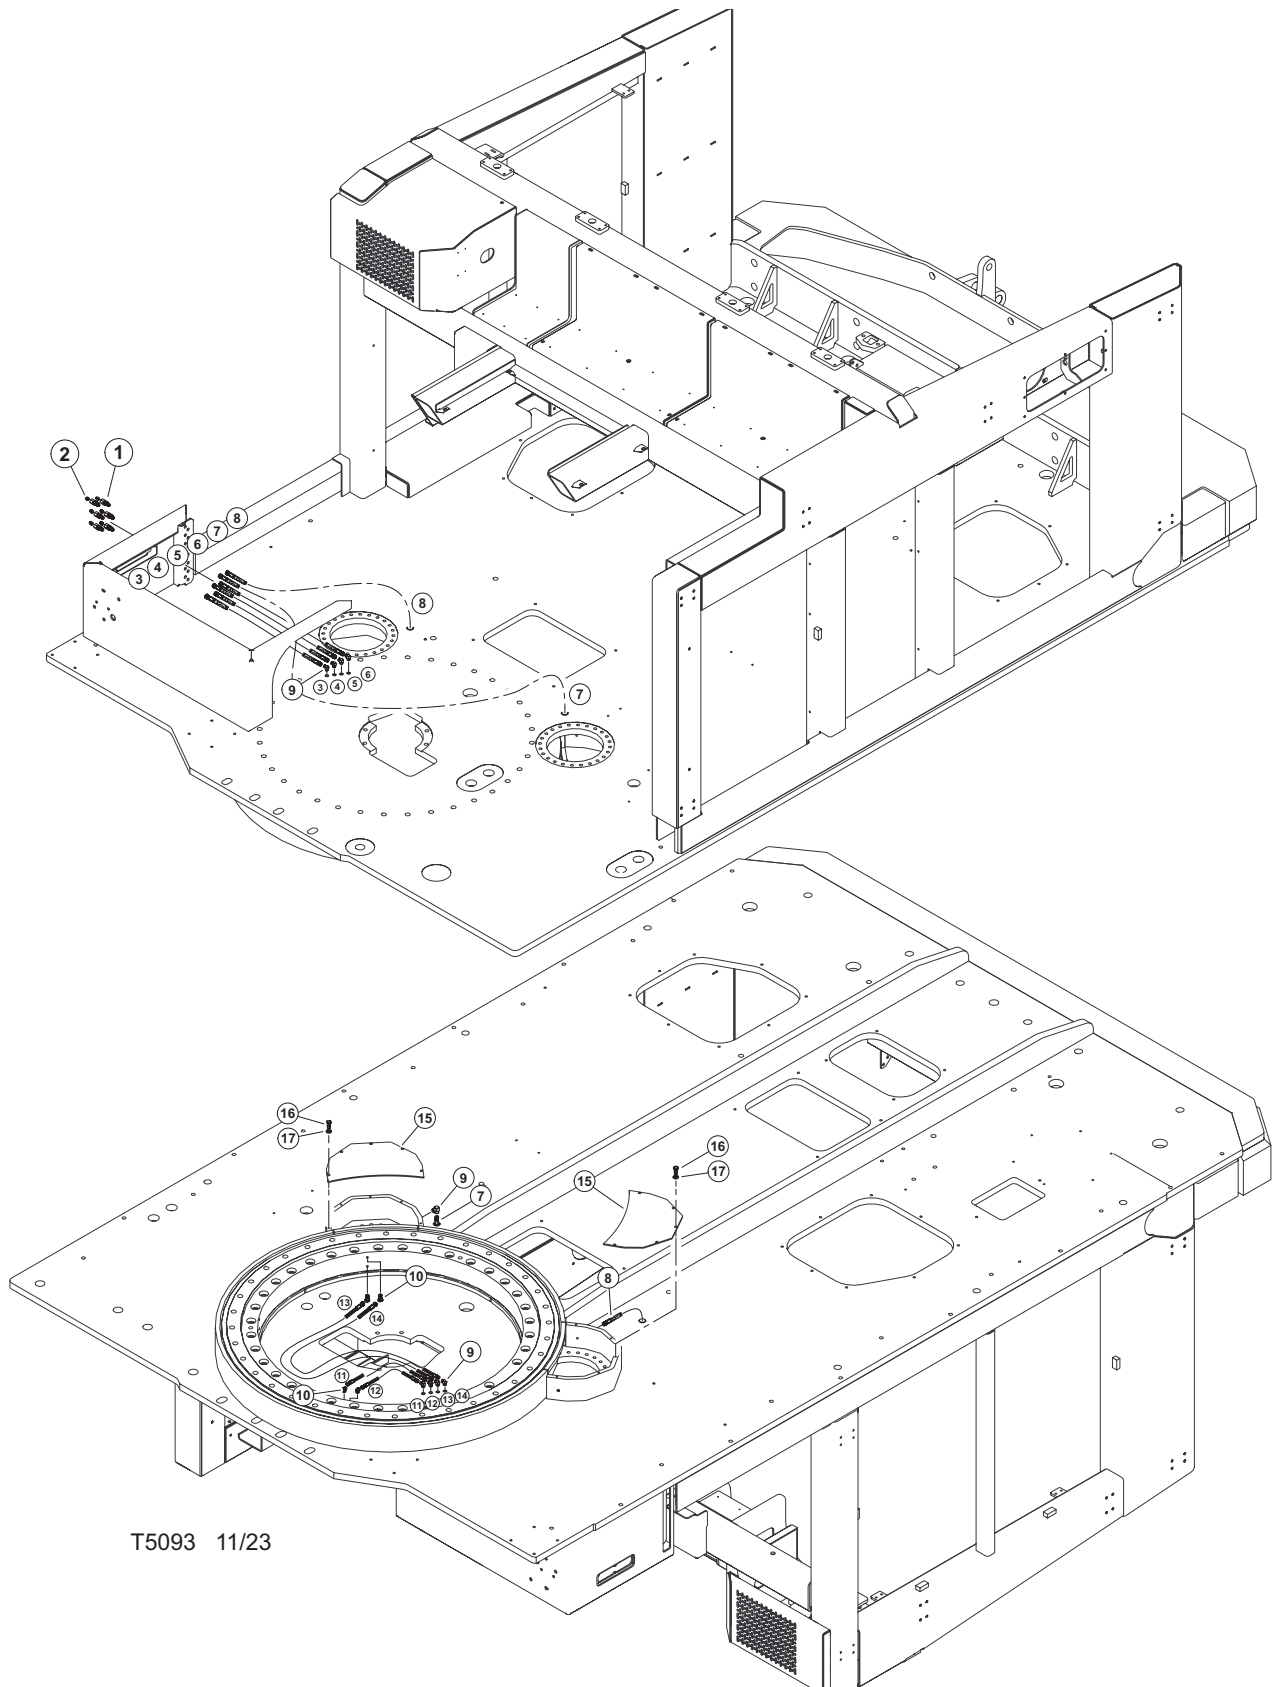

T5093 11/23


UPPER TURNTABLE

SWING BEARING & BULL GEAR GREASE LINES

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	15658	6	CONNECTOR, STR BULKHEAD - 2239-2-4S	
2	10704	6	GREASE ZERT - STR	
3	(See Description)	1	HOSE ASSY. - (PART # HLBD37 02-02PS-04JS-W) (GREASE ZERT TO 90° FITTING)	
4	(See Description)	1	HOSE ASSY. - (PART # HLBD37.5 02-02PS-04JS-W)(GREASE ZERT TO 90° FITTING)	
5	(See Description)	1	HOSE ASSY. - (PART # HLBD38 02-02PS-04JS-W)(GREASE ZERT TO 90° FITTING)	
6	(See Description)	1	HOSE ASSY. - (PART # HLBD38.5 02-02PS-04JS-W)(GREASE ZERT TO 90° FITTING)	
7	(See Description)	1	HOSE ASSY. - (PART # HLBD138 02-02PS-04JS-W) (GREASE ZERT TO BULL GEAR)	
8	(See Description)	1	HOSE ASSY. - (PART # HLBD33 02-02PS-04JS-W) (GREASE ZERT TO BULL GEAR)	
9	22281	9	FITTING, 90° - 5546132	
10	16263	4	ELBOW, 45 SWIVEL FEMALE - 1504-2-2	
11	(See Description)	1	HOSE ASSY. - (PART # HLBD24 02-02PS-04JS) (90° FITTING TO SWING BEARING)	
12	(See Description)	1	HOSE ASSY. - (PART # HLBD24 02-02PS-04JS) 90° FITTING TO SWING BEARING)	
13	(See Description)	1	HOSE ASSY. - (PART # HLBD42 02-02PS-04JS) (90° FITTING TO SWING BEARING)	
14	(See Description)	1	HOSE ASSY. - (PART # HLBD42 02-02PS-04JS) (90° FITTING TO SWING BEARING)	
15	48691	2	COVER, ACCESS - PINION GEAR	
16	11707	10	BOLT - .375" X 1.00"	
17	15528	10	WASHER, SAE FLAT - .375"	

UPPER TURNTABLE

(BUTT PLATE, STAIRS & TREAD PLATE INSTALLATION)

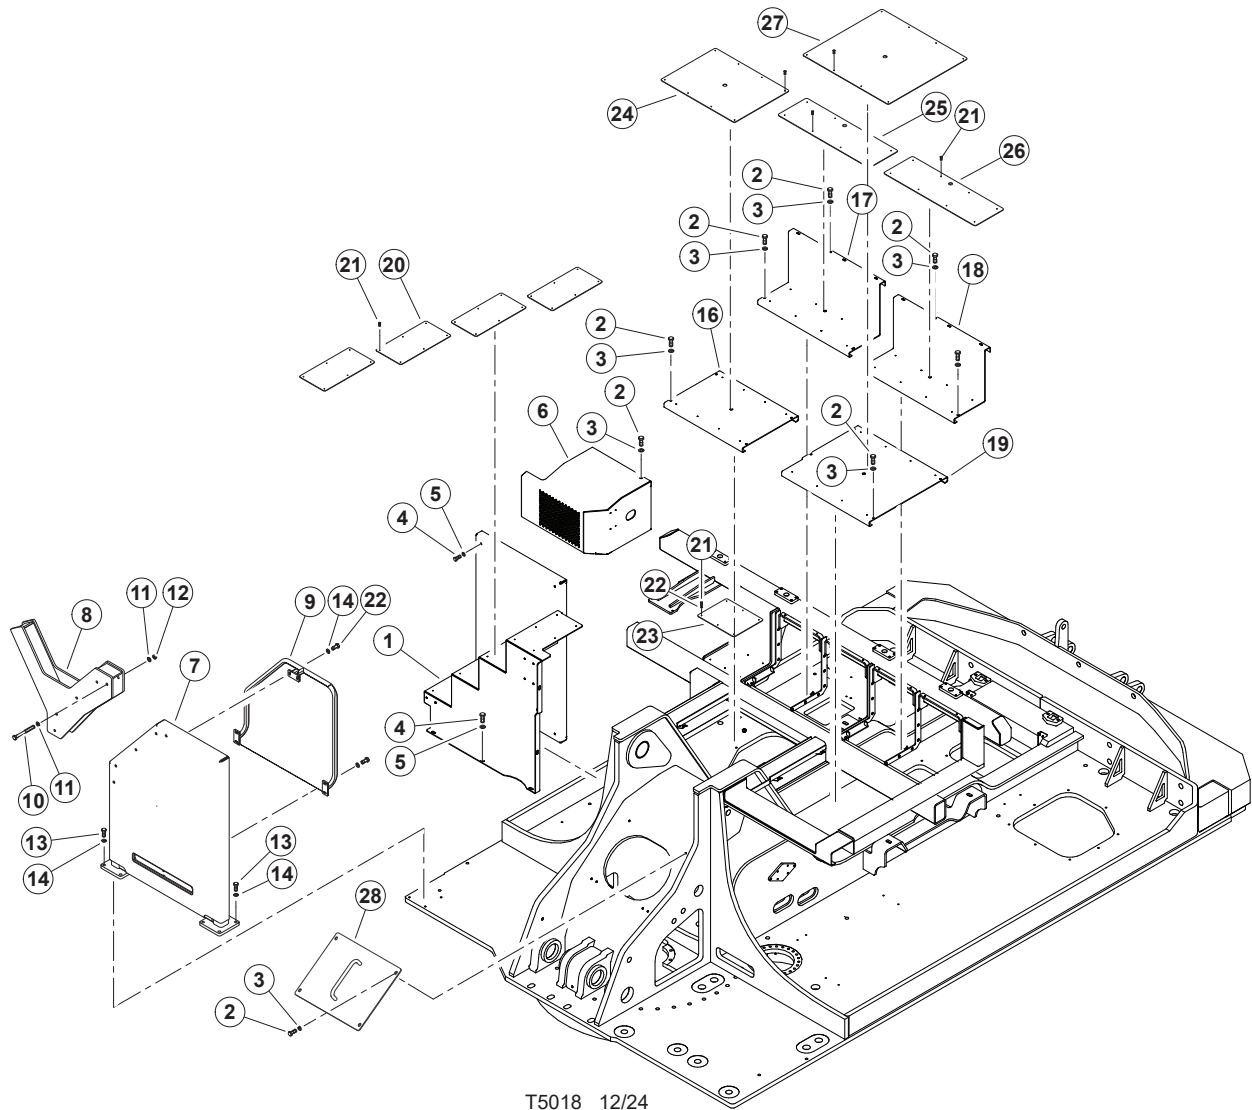


UPPER TURNTABLE

(BUTT PLATE, STAIRS & TREAD PLATE INSTALLATION)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	661880	1	WELDMENT, STEP-LL	
2	11707	20	BOLT - .375" X 1.00"	
3	15528	20	WASHER, SAE FLAT - .375"	
4	20050	7	BOLT - .4375" X 1.25"	
5	15548	7	WASHER, SAE FLAT - .4375"	
6	66135	1	WELDMENT, TOP DOOR-LL	
7	62380	1	WELDMENT, FRONT BUTT PLATE - LOG LOADER	
8	62382	1	WELDMENT, KICKER SRUP -LOG LOADER	
9	65564	1	WELDMENT, LL TOOLBOX HANDRAIL	
10	10834	5	BOLT - .5" X 4.00"	
11	10804	10	WASHER, FLAT - .5"	
12	15533	5	NUT, NYLOCK - .5"	
13	50100	8	BOLT - .5" X 1.25"	
14	15534	15	WASHER, SAE FLAT - .5"	
16	66175	1	WELDMENT, MID STEP	
17/18	66058	2	WELDMENT, REMOVABLE BOOM WALKWAY	
19	66185	1	WELDMENT, DOOR STEP	
20	66258	4	PLATE, TREAD	
21	81465 (Lawson)	AR	BUTTON HEAD SOCKET CAP SCREW STEEL #10-24 X 3/4"	
22	10783	6	BOLT - .5" X 1.00"	
23	62469	1	PLATE, TREAD	
24	66261	1	PLATE, TREAD	
25/26	66064	2	PLATE, TREAD	
27	66262	1	PLATE, TREAD	
28	66353	1	PLATE, COVER - ROTARY MANIFOLD - LL	

UPPER TURNTABLE

(SIDE DOORS & TOOL BOX COVER INSTALLATION)

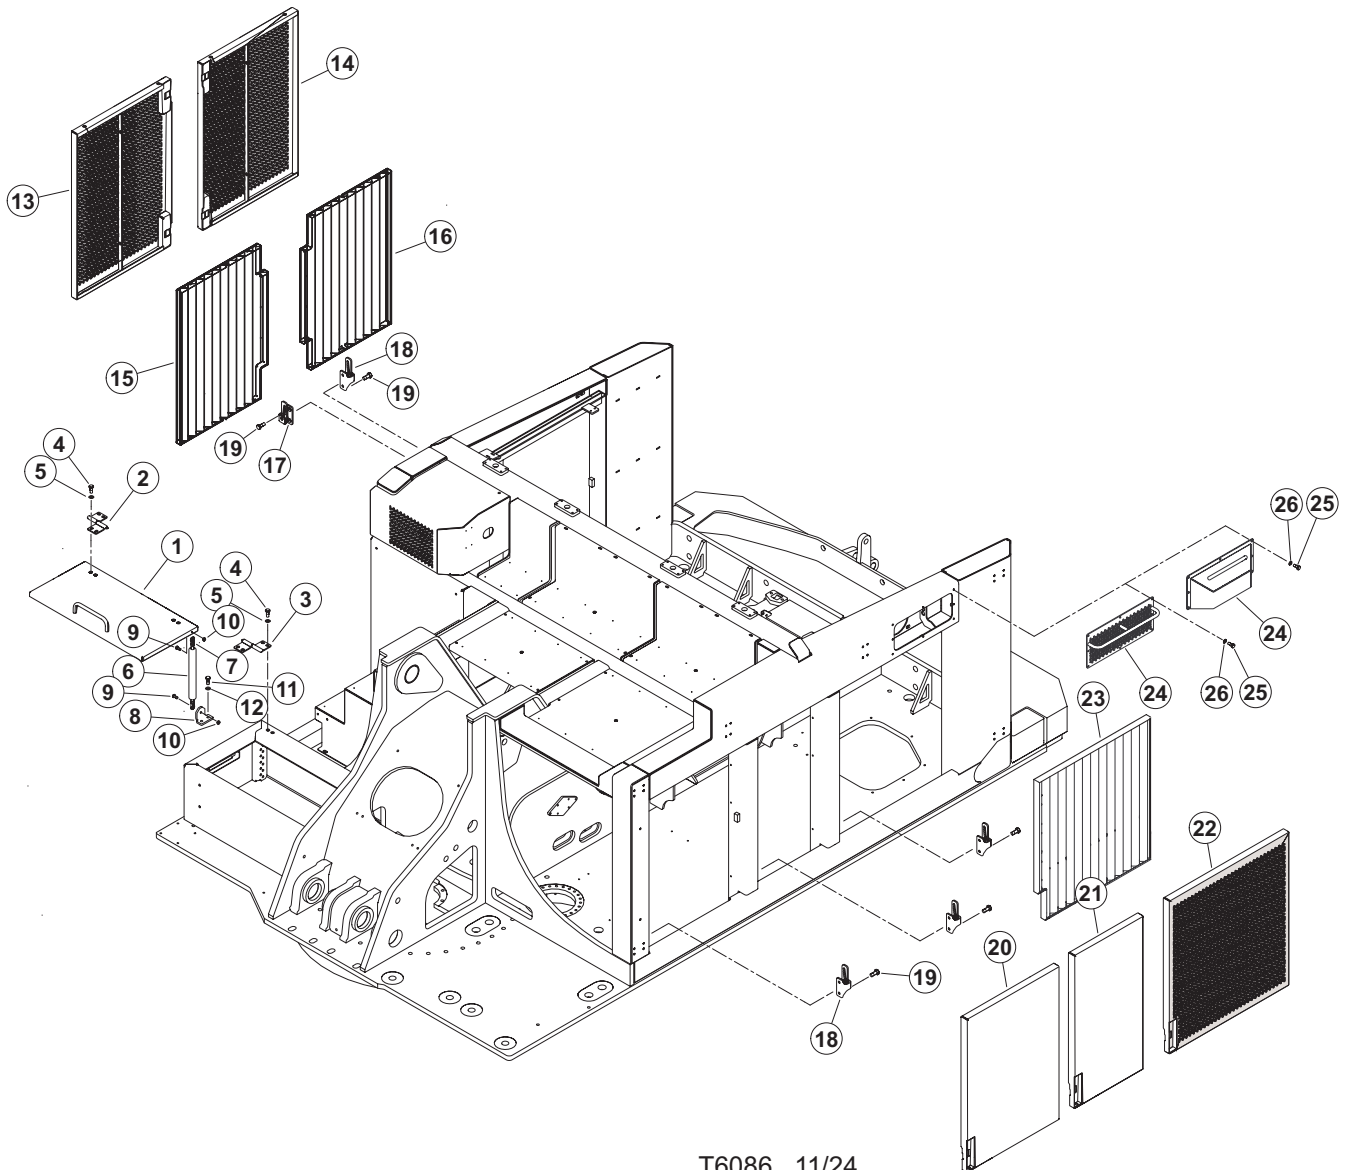

T6086 11/24


UPPER TURNTABLE

(SIDE DOORS & TOOL BOX COVER INSTALLATION)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	65558	1	WELDMENT, LL-TOOL BOX LID	
2	65531	1	HINGE ASSY, 2 BOLT, RH	
3	65530	1	HINGE ASSY, 2 BOLT, LH	
4	50100	8	BOLT - .5" X 1.25"	
5	10800	8	WASHER, FLAT - .5"	
6	57963	1	SHOCK, GAS	
7	54108	4	STUD, ROD END - GAS SPRING	
8	65559	1	STRUT MOUNT BRACKET 90 DEG	
9	10822	2	BOLT - .3125" X 1.25"	
10	10812	2	NUT, LOCK - .3125"	
11	11707	2	BOLT - .375" X 1"	
12	10802	2	WASHER, FLAT - .375"	
13/14	62177	2	DOOR, COOLER - LOG LOADER	
15/16	62327	2	PLATE, LUG STICK - LL	
17	51657	2	LATCH, CAM - DOOR R.H.	
18	51658	8	LATCH, CAM - DOOR L.H.	
19	58225	16	BOLT, CAM LATCH 3/8-16X3/4 COUNTERSUNK	
20	660960	1	WELDMENT, DOOR ELECTRICAL - LOG LOADER	
21	66094	1	DEF COMPARTMENT DOOR	
22	62172	1	DOOR, HYDRAULIC COMPARTMENT LL	
23	62173	1	SCREEN, HYDRO DOOR LOG LOADER	
24	48927	1	GUARD, AIR INTAKE - (UP TP SN. 1154)	
24	65429	1	GUARD,AIRINTAKE W/HANDLE HOLES - (SN. 1169 AND FORWARD)	
25	15589	6	BOLT - .3125" X 1.00"	
26	15559	6	WASHER, SAE FLAT - .3125"	

UPPER TURNTABLE

(GUARDS, PANELS AND COVERS INSTALLATION)

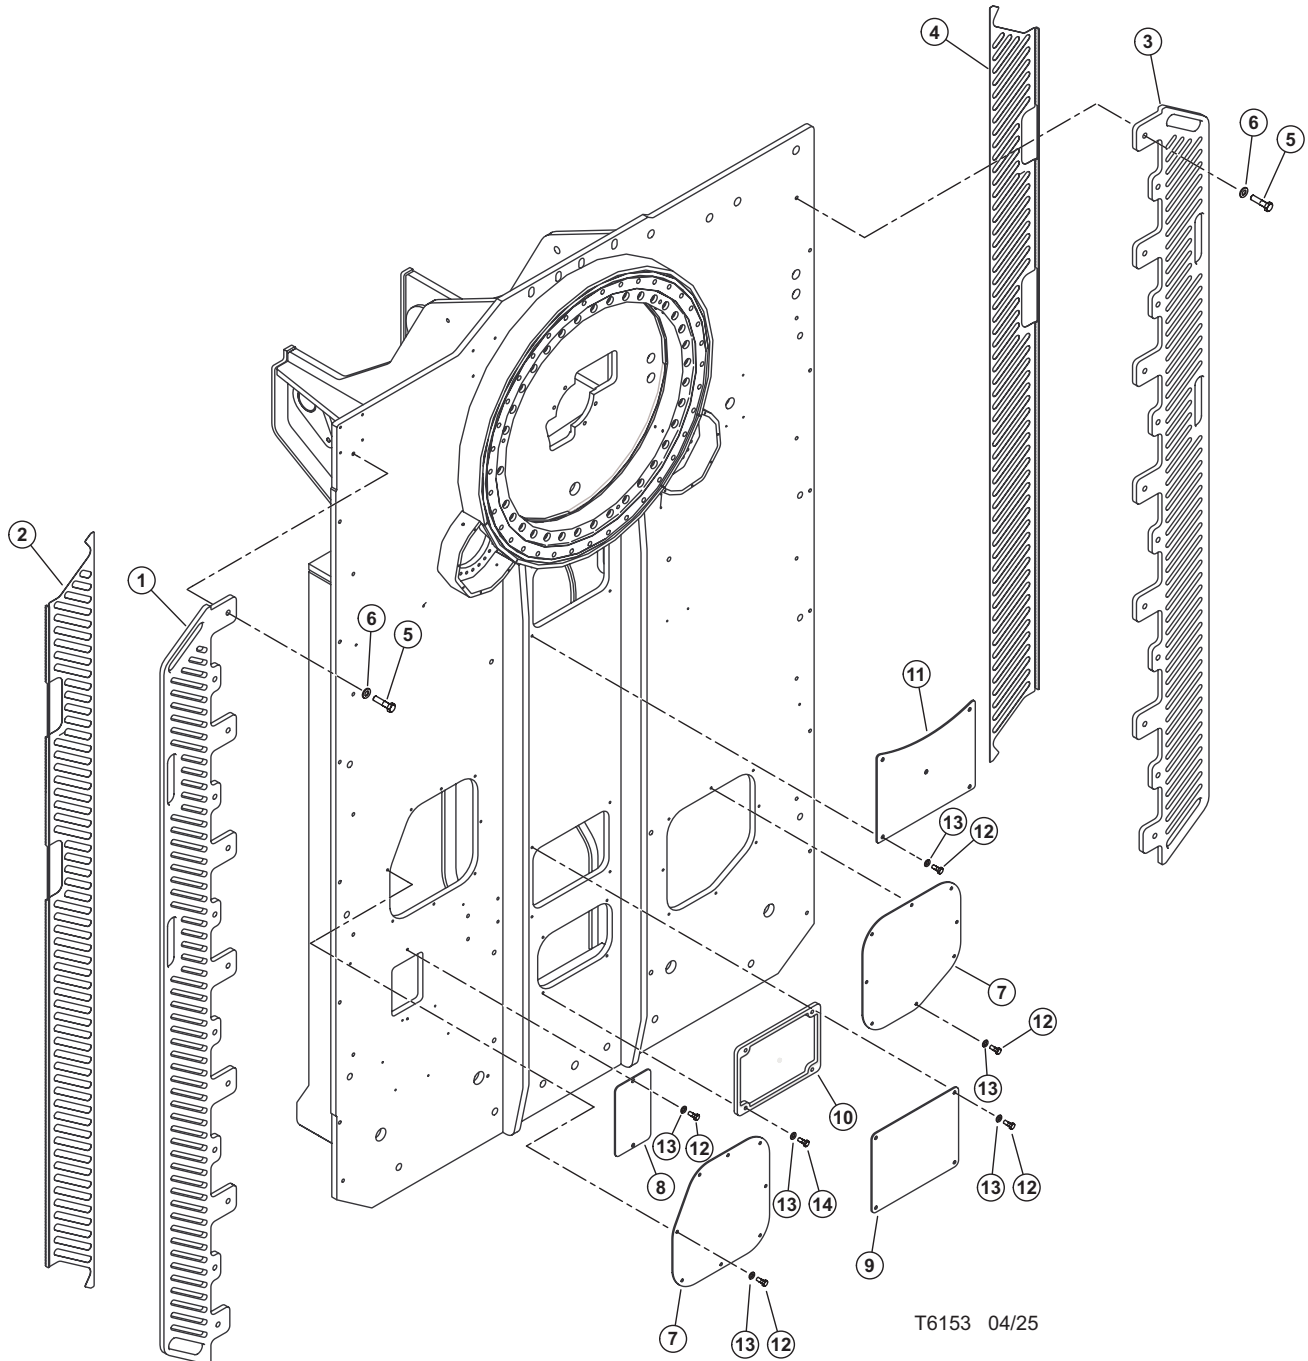


UPPER TURNTABLE

(GUARDS, PANELS AND COVERS INSTALLATION)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	669220	1	CATWALK-LOG LOADER, RH	
2	671290	2	TAPE, CATWALK-LOG LOADER, STEP, RH	
3	669210	1	CATWALK-LOG LOADER, LH	
4	671280	1	TAPE, CATWALK-LOG LOADER, STEP, LH	
5	23000	26	BOLT - .75" X 2.25"	
6	15550	26	WASHER, SAE FLAT - .75"	
7	48976	2	COVER, PUMP GROUP	
8	52630	1	PLATE, COVER	
9	65591	1	COVER, SCR BASE ACCESS - LL	
10	62003	1	COVER, OIL PAN	
11	62677	1	PLATE, COVER	
12	50100	26	BOLT - .5" X 1.25"	
13	15534	30	WASHER, SAE FLAT - .5"	
14	10739	4	BOLT - .5" X 1.5"	

UPPER TURNTABLE

(GUARDS, PANELS AND COVERS INSTALLATION)

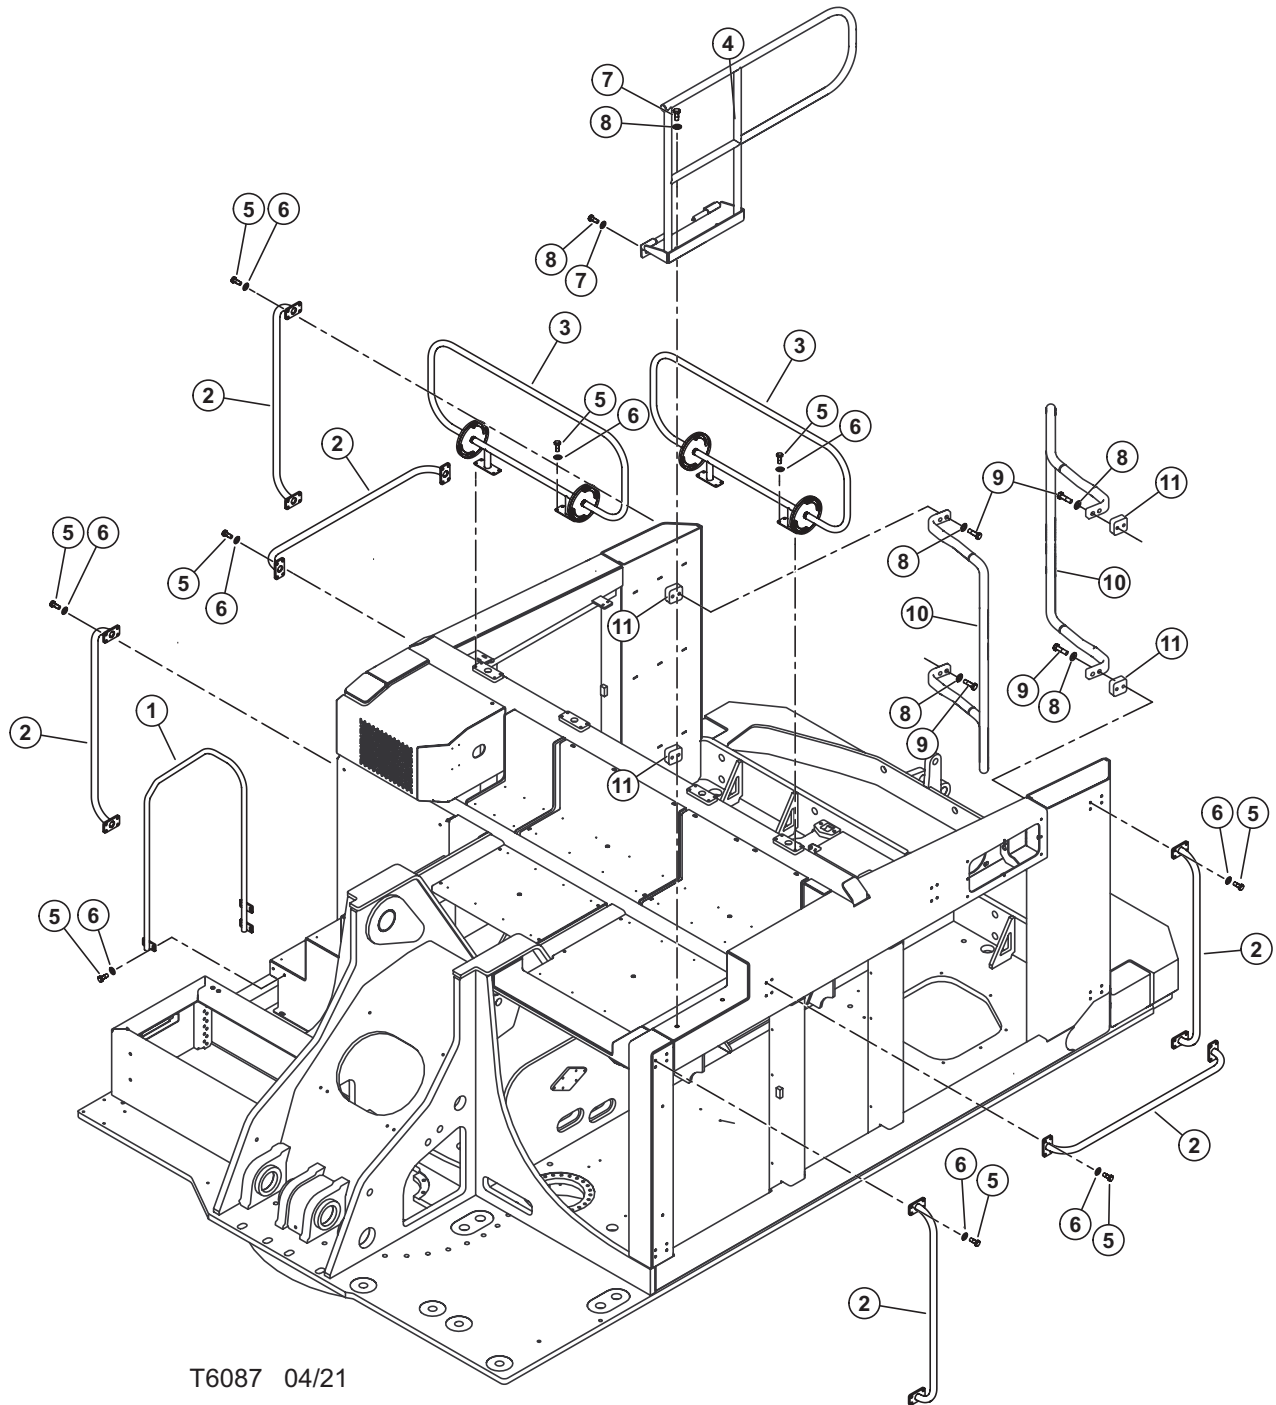


UPPER TURNTABLE

(GUARDS, PANELS AND COVERS INSTALLATION)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	61660	1	WELD, GRAB HANDLE	
2	66255	6	WELDMENT, HANDRAIL	
3	660850	2	WELD, HANDRAIL, UPPER	
4	662750	1	WELDMENT, H-RAIL-LL	
5	10731	38	BOLT - .375" X 1.5"	
6	10802	38	WASHER, FLAT - .375"	
7	50100	4	BOLT - .5" X 1.25"	
8	15534	12	WASHER, SAE FLAT - .5"	
9	18933	8	BOLT - .5" X 1.75"	
10	667570	2	WELDMENT, 785 REAR HANDRAIL	
11	673410	4	HAND RAIL MOUNT	

UPPER TURNTABLE

(COUNTER WEIGHT INSTALLATION)

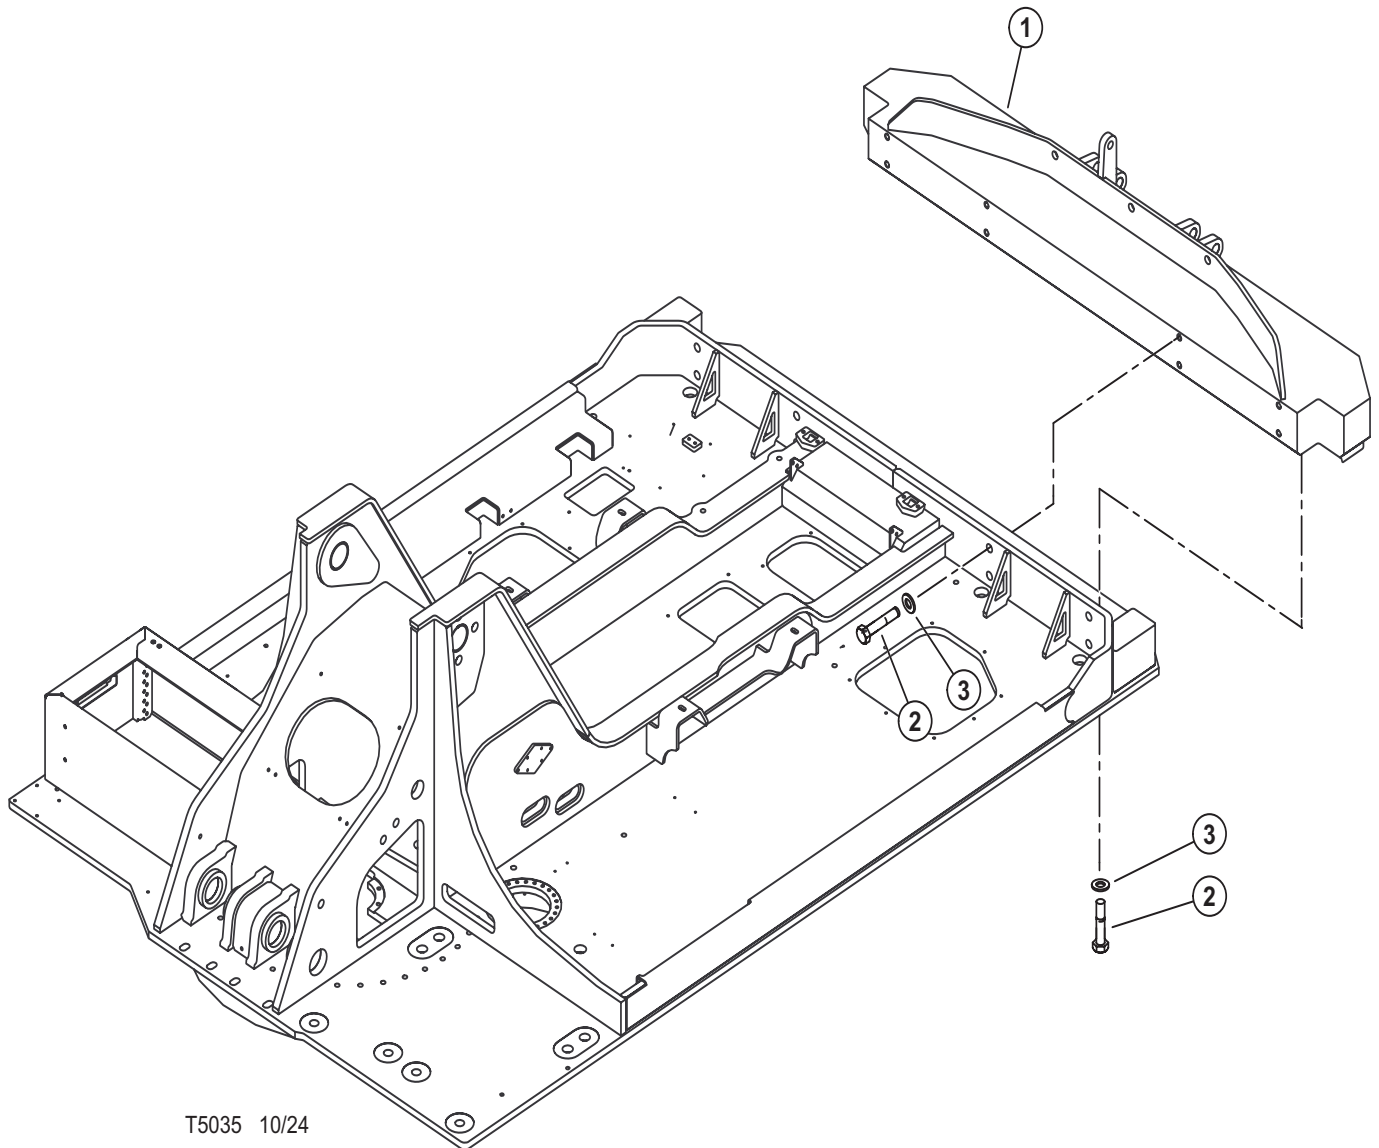


UPPER TURNTABLE

(COUNTER WEIGHT INSTALLATION)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	66070	1	COUNTERWEIGHT	
2	10733	12	BOLT - 1.00" x 3.00"	
3	18532	12	WASHER, SAE FLAT - 1.00" (EXTRA THICK)	

UPPER TURNTABLE

GULLWING INSTALLATION

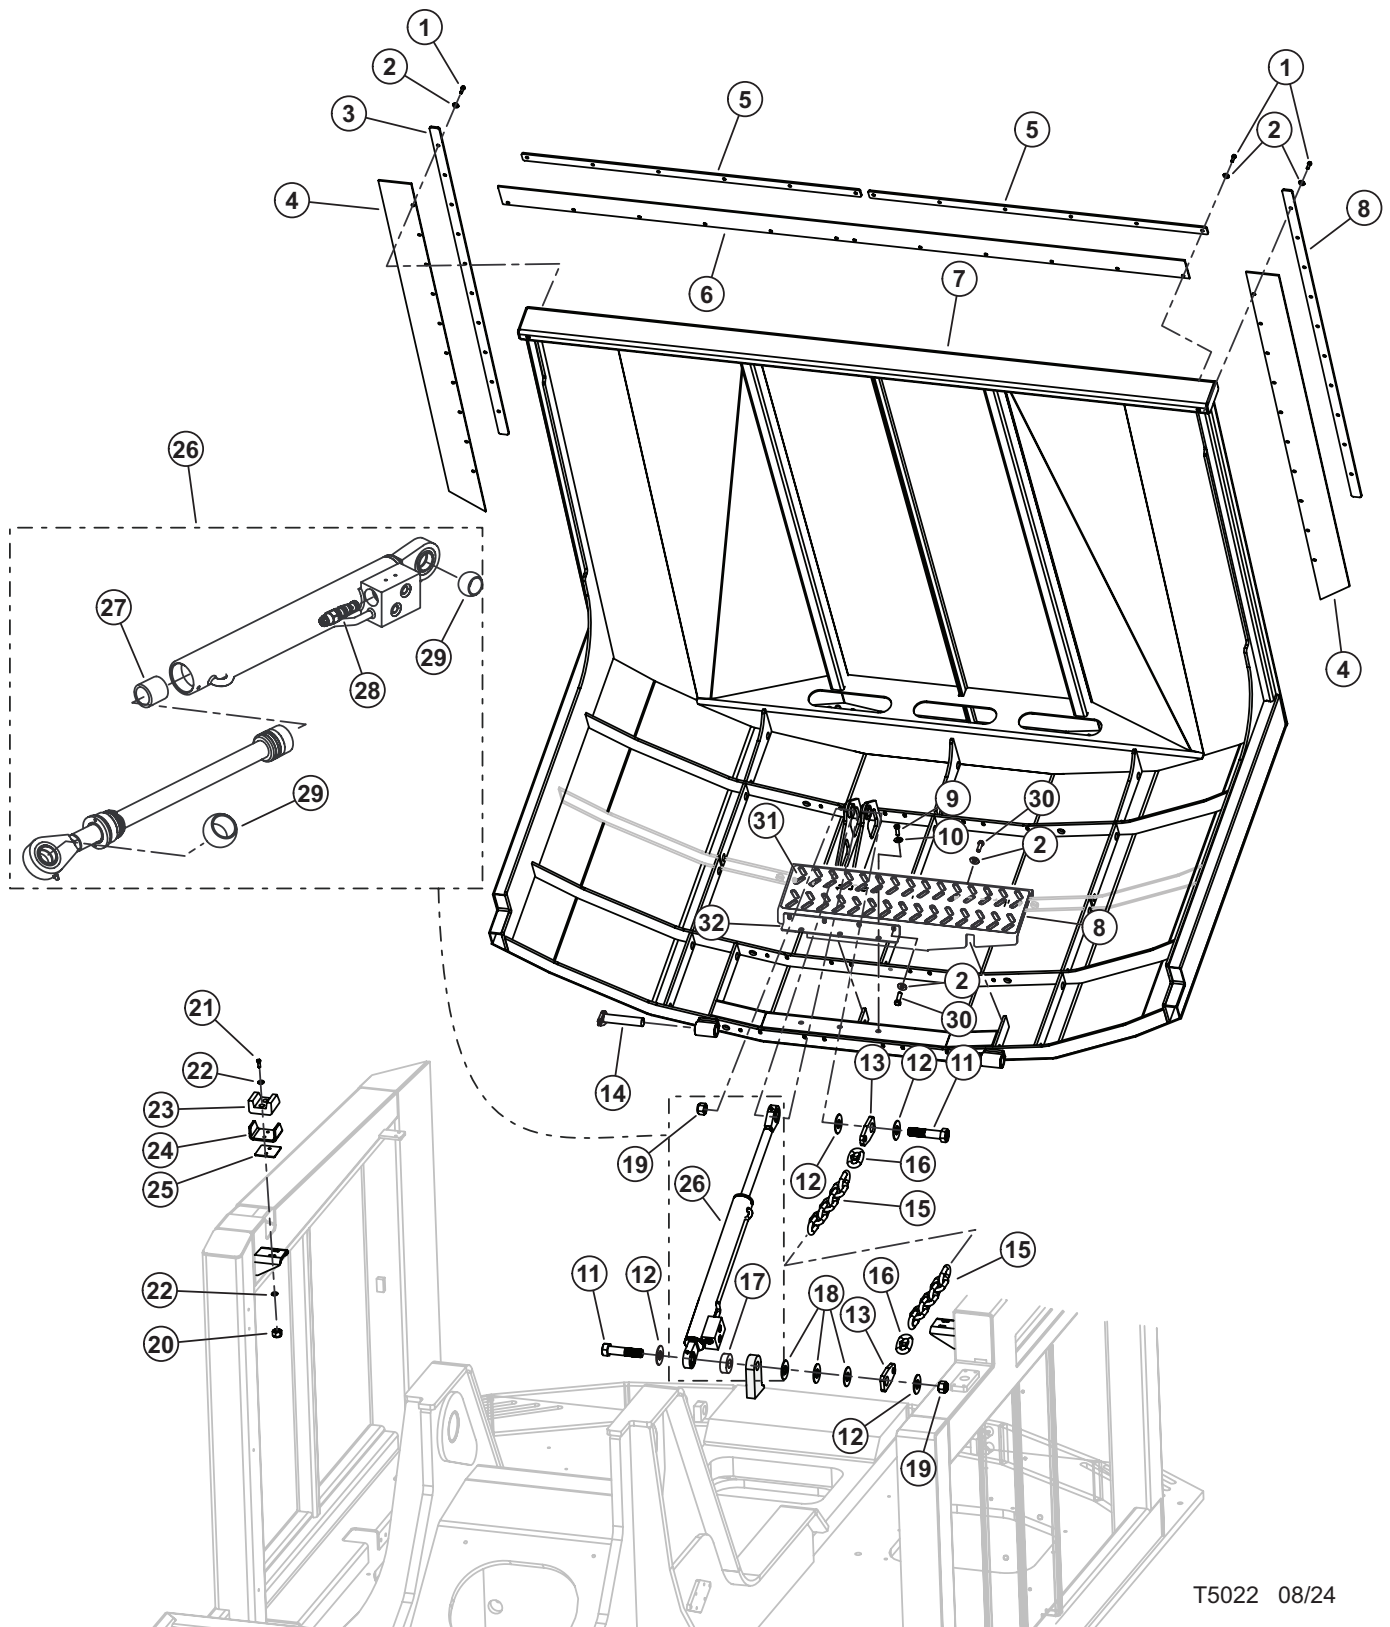


T5022 08/24

UPPER TURNTABLE GULLWING INSTALLATION

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	11707	27	BOLT - .375" X 1"	
2	10802	35	WASHER, FLAT - .375"	
3	62168	2	PLATE, GULLWING, RUBBER HOLDOWN	
4	62169	2	RUBBER, GULLWING	
5	48457	2	PLATE, GULLWING - RUBBER HOLD DOWN	
6	48626	1	RUBBER, GULLWING FRONT - TAIL	
7	66035	1	DOOR, LL GULLWING	
8	66360	1	WELDMENT, GW STEP	
9	50100	3	BOLT - .5" X 1.25"	
10	10802	3	WASHER, FLAT - .375"	
11	52025	2	BOLT, GULLWING CYL. - 1.25" - 7 X 7"	
12	22531	5	WASHER, SAE FLAT - 1.25"	
13	54515	1	LINK, GULLWING SAFETY CHAIN	
14	48390	2	PIN, GULLWING PIVOT - WELDMENT	
15	55715	1	CHAIN, 23 LINK - GULLWING GR 8100	
16	54260	2	CLEVIS, 3/8" - GULLWING (2 PER) NEW	
17	65039	1	GULLWING PIVOT SPACER	
18	23990	3	WASHER, SAE FLAT - 1.25" (EXTRA THICK)	
19	52026	2	NUT, HEX GULLWING CYL. - 1.25" - GRD 9	
20	10812	2	NUT, LOCK - .3125"	
21	10823	4	BOLT - .3125" X 2"	
22	10801	4	WASHER, FLAT - .3125"	
23	54511	2	ISOLATOR, GULLWING MOUNTING-UHMW BLOCK	
24	54512	2	CHANNEL, ISOLATOR MOUNT - GULLWING	
25	54520	2	SPACER, GULLWING ISOLATOR	
26	57848	1	CYLINDER, GULLWING LIFT - COLUMBUS	
27	(See Description)	1	SPHERICAL BUSHING	
28	58009	1	CARTRIDGE, COUNTER BALANCE	
29	(See Description)	1	BUSHING	
	59046	1	SEAL KIT,	
30	10402	8	BOLT - .375" X 1.25"	
31	66362	1	TAPE, GULLWING STEP	
32	66359	1	BRACKET, SUPPORT	

UPPER TURNTABLE

GULLWING CYLINDER HYDRAULICS

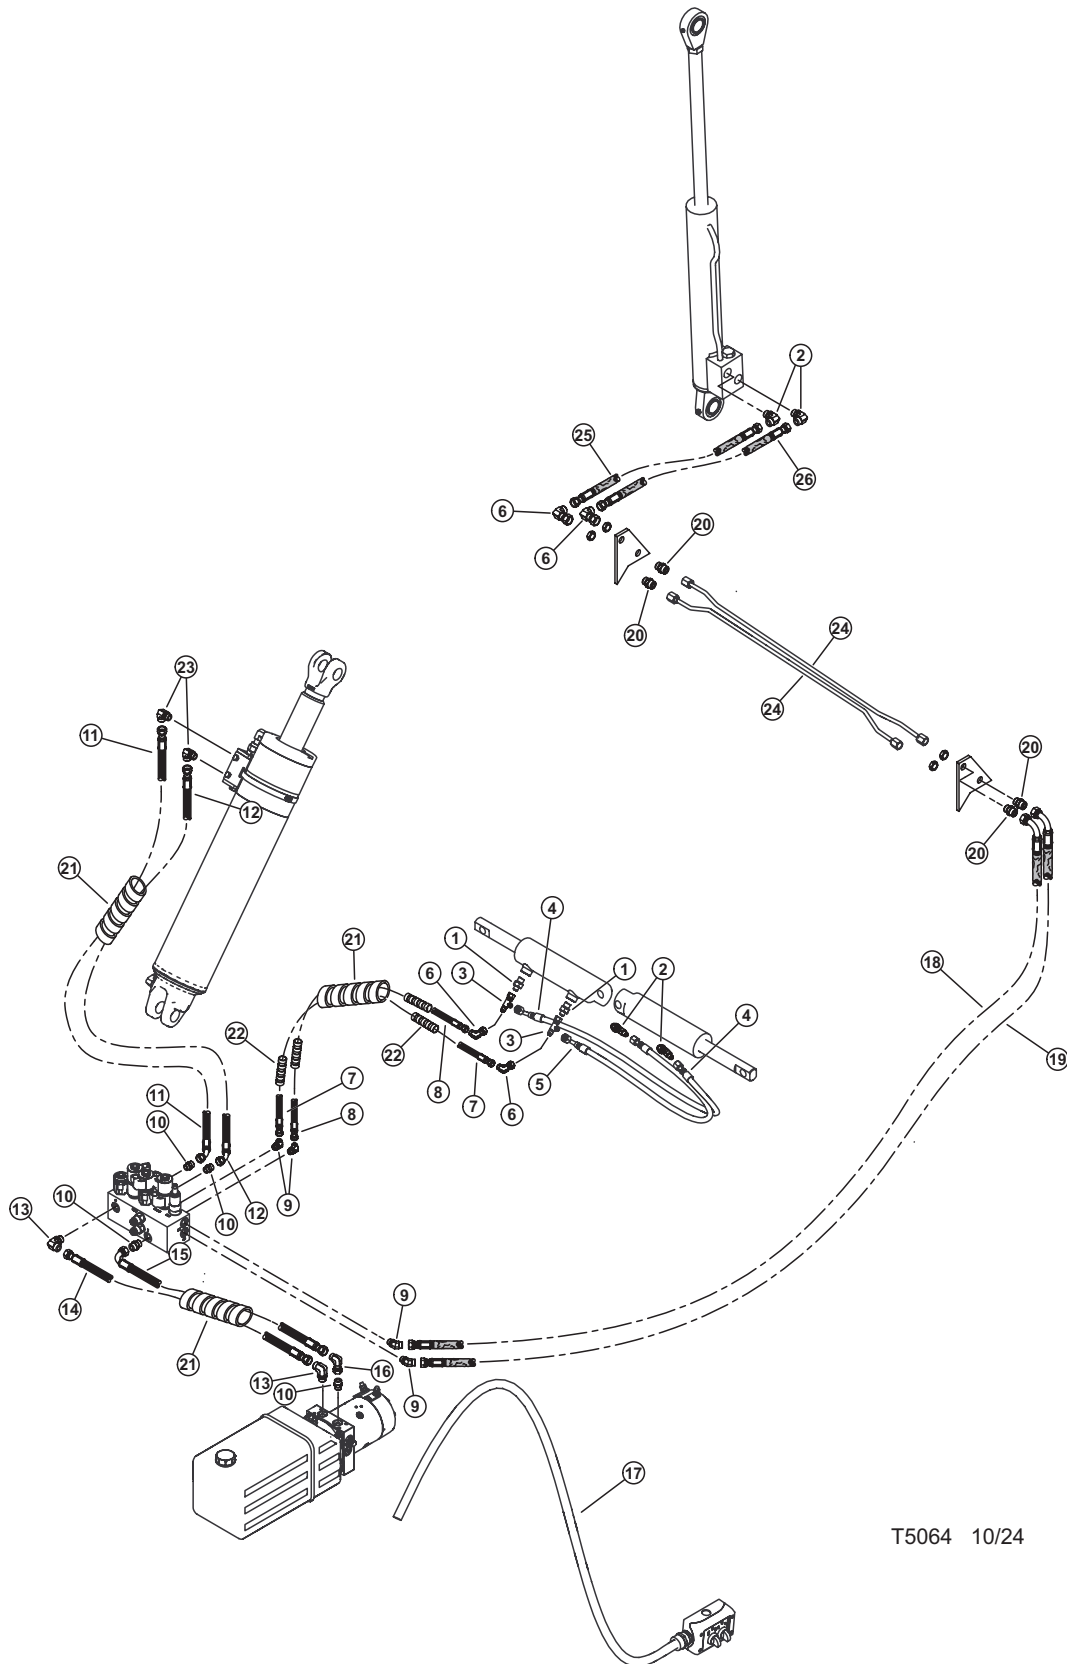


T5064 10/24

UPPER TURNTABLE GULLWING CYLINDER HYDRAULICS

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	15124	2	CONNECTOR, STR - FF1852T-0406S	
2	15133	4	ELBOW, 90 - FF1868T-0406S	
3	15176	2	TEE - FF2114T-0404S	
4	(KIT - 59057)	1	HOSE ASSEMBLY - 387TC30.5 04-04OS-04O9	
5	(KIT - 59057)	1	HOSE ASSEMBLY - 387TC20.5 04-04OS-04O9	
6	15145	2	ELBOW, 90 SWIVEL - FF2098T-0404S	
7	(KIT - 59057)	1	HOSE ASSEMBLY - 387TC31.5 04-04OS-04OS	
8	(KIT - 59057)	1	HOSE ASSEMBLY - 387TC27 04-04OS-04OS	
9	17646	4	ELBOW, 45 - FF2068T-0406S	
10	18034	4	CONNECTOR, STR - FF1852T-0606S	
11	(KIT - 59057)	1	HOSE ASSEMBLY - 387TC65.5 06-06OS-06O4	
12	(KIT - 59057)	1	HOSE ASSEMBLY - 387TC63 06-06OS-06O4	
13	16296	2	ELBOW, 90 - FF1868T-0606S	
14	(KIT - 59057)	1	HOSE ASSEMBLY - 387TC24 06-06OS-06OS	
15	(KIT - 59057)	1	HOSE ASSEMBLY - 387TC23 06-06OS-06O9	
16	20035	1	ELBOW, 90 SWIVEL - 6 C6LO-S	
17	58606	1	PENDANT (CAB TILT)	
18	(KIT - 59057)	1	HOSE ASSEMBLY - 387TC194 04-04OS-04O9-W	
19	(KIT - 59057)	1	HOSE ASSEMBLY - 387TC194 04-04OS-04O9-W	
20	55383	4	FITTING, BULKHEAD - 4 WTX-WLN-S	
21	20843	AR	PROTECTOR, HOSE - SPRIAL (1.25")(BULK)	
22	20843	AR	PROTECTOR, HOSE - SPRIAL (.78")(BULK)	
23	18034	2	ELBOW, 90 - FF1868T-0606S	
24	57337	2	TUBELINE, CANOPY CYL BULKHEAD	
25	(CALL)	1	Gullwing Lift Pump Hose	
26	(CALL)	1	Gullwing Lift Pump Hose	

UPPER TURNTABLE (ROTARY MANIFOLD)

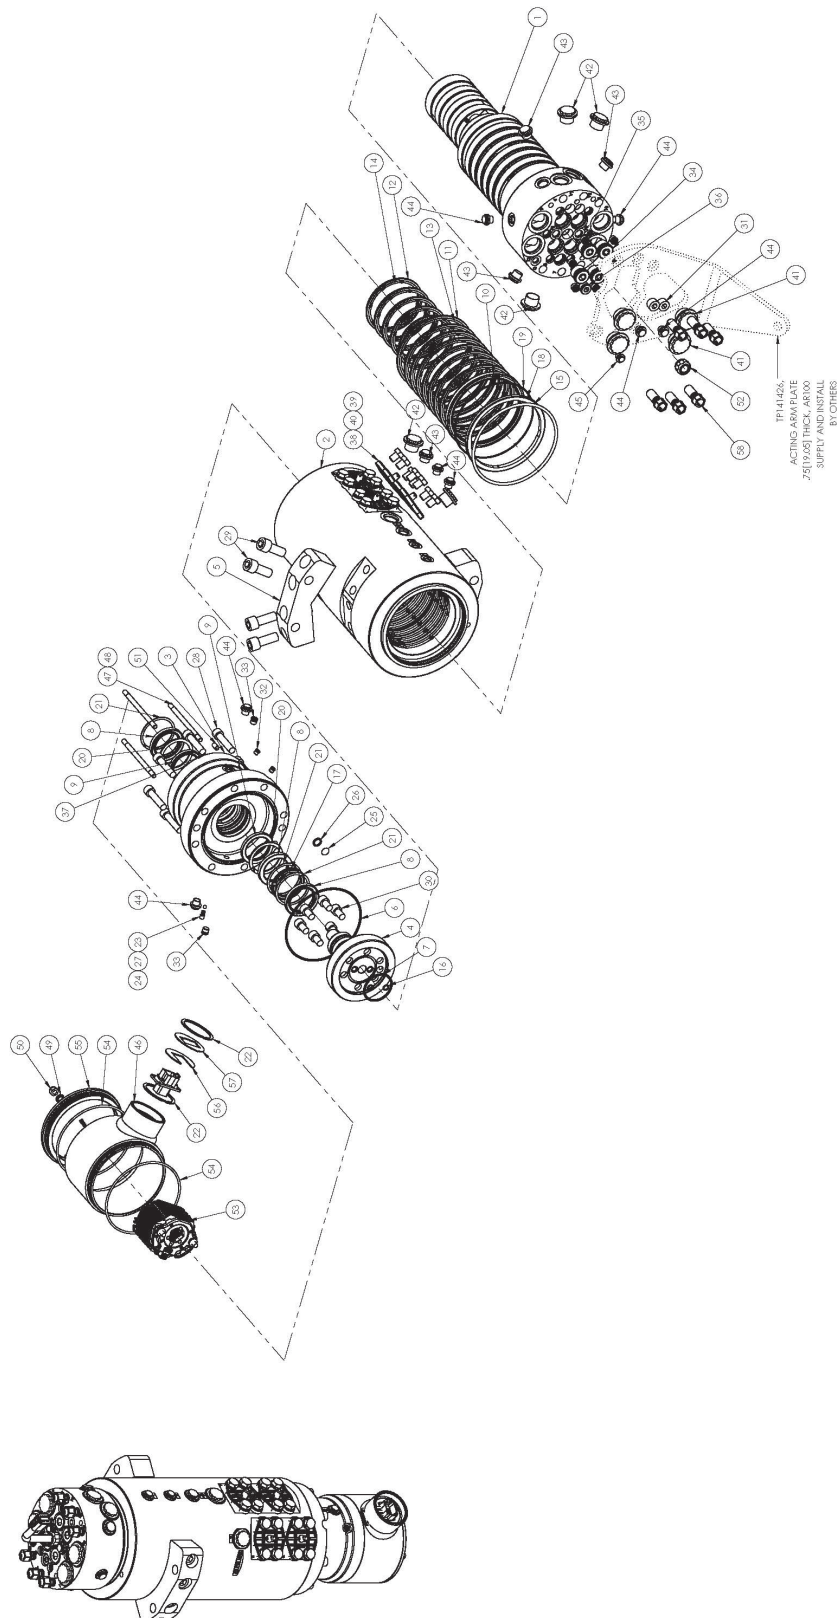


Item	Part #	Description	Qty.
	65067	MANIFOLD, ROTARY - 14 PORT TRACK	1
1	TP1414021	SPOOL, ROTARY	1
2	TP1414002	BARREL, ROTARY	1
3	HD141425	CAP, FUSE SECTION, OPEN, HD SLIP RING OPTION	1
4	HD1414006	RETAINER, SPOOL WITH FUEL	1
5	HD1214003	MOUNTING PLATE	2
6	N1470 - 258	ORING 6.000" x 6.250" x 0.125" c/s	1
7	N1470 - 227	ORING 2.125" x 2.375" x 0.125" c/s	1
8	HD050068080-V	ENVIRO SEAL 50mmX68X8 VITON	3
9	HD050065070-V	ENVIRO SEAL 50mmX65X7 VITON	2
10	HD141610	SEAL, ENVIRONMENTAL SHAFT, 140mm	1
11	N1173-70-359	ORING, HNBR 70, 5.750" x 6.125" x .188" c/s	8
12	N1173-70-346	ORING, HNBR 70, 4.125" x 4.500" x .188" c/s	5
13	RN 140-250-08GL	LOCSEAL, 140 MM	8
14	RN 100-250-08GL	LOCSEAL, 100 MM	5
15	U90 - 363	ORING URETHANE	1
16	V1476 - 012	ORING 1/2"X 3/8"X 1/16", VITON	2
17	HD141415	RING, ENVIROMENT SEAL SPPRT	1
18	HD140105	LOCKRING FOR 140mm ENVIRO	1
19	MOR1600020/N	ORING 160mm X 164mm X 2mm C/S NBR70	1
20	WHM-256	SPIRAL SNAP RING	2
21	WH-267	SPIRAL SNAP RING	3
22	WHM-250	SPIRAL SNAP RING	2
23	329-008	THREAD INSERT, 'E-Z' LOK, #8-32UNC-2B, 5/16-18UNC-2A	1
24	C0610-041-0095	SPRING	1
25	TL-C5-190-30	TEMPERATURE LABEL	1
26	N1470 - 112	ORING	1
27	BALL M6	STEEL BALL 6mm	1
28	SHCS M12 X 55	SHCS METRIC G12.9	8
29	SHCS M16 X 40	SHCS METRIC G12.9	8
30	SHCS M12 X 20	SHCS METRIC G12.9	6
31	81145	1/2" NPT HEX PLUG FLUSH	2
32	22S - S02	#02 ORB ZLG PLUG SH	3
33	22S - S04	#04 ORB ZLG PLUG SH	2
34	HD002282	#12 ORB CUSTOM PLUG SH	4
35	22S - S05	#05 ORB ZLG PLUG SH	6
36	22S - S08	#08 ORB ZLG PLUG SH	1
37	22S - S06	#06 ORB ZLG PLUG SH	1
38	HDCP-XP-1AI	PLUG	4
39	MOR0360040/N	ORING, 36.0mm X44.0mm X4.0mm	4
40	HHCS M12 X 16MM	HEXBOLT M12X16 G10.9	16
46	E0000176	COVER WELDMENT, SLIPRING	1
47	TR-0.31-05.25	5/16-18 x 5.25" LENGTH	3
48	HD091418	HEAT SHRINK TUBE	3
49	33156	SEAL WASHER 5/16	3
50	70961	ACORN NUT 5/16-18	3
51	SHSS 05-18-0.625	SET SCREW, 5/16-18UNC X 5/8LG	1
52	HD121437	FITTING, LT 0.500" GRN	1
53	E08080202	ELC SLIP RING, 6 POWER, 2 SIGNAL	1
54	N1470 - 257	ORING, 70 DUROMETER 5.875" X 6.125" X 0.125"C/S	2
55	E0000177	CAP, SLIP RING COVER	1
56	HD121419	PLATE, CONNECTOR MOUNT	1
57	HD121420	PLATE, CONNECTOR MOUNT	1
58	B-2005-02-01	BOLT, CONE LUG STYLE, M16 X 1.5 X 33mm SHANK LENGTH	6

UPPER TURNTABLE

(HOC-CONTROL-RETURN MANIFOLD BREAKDOWN)

NOTE: APPLY GREASE TO O-RINGS

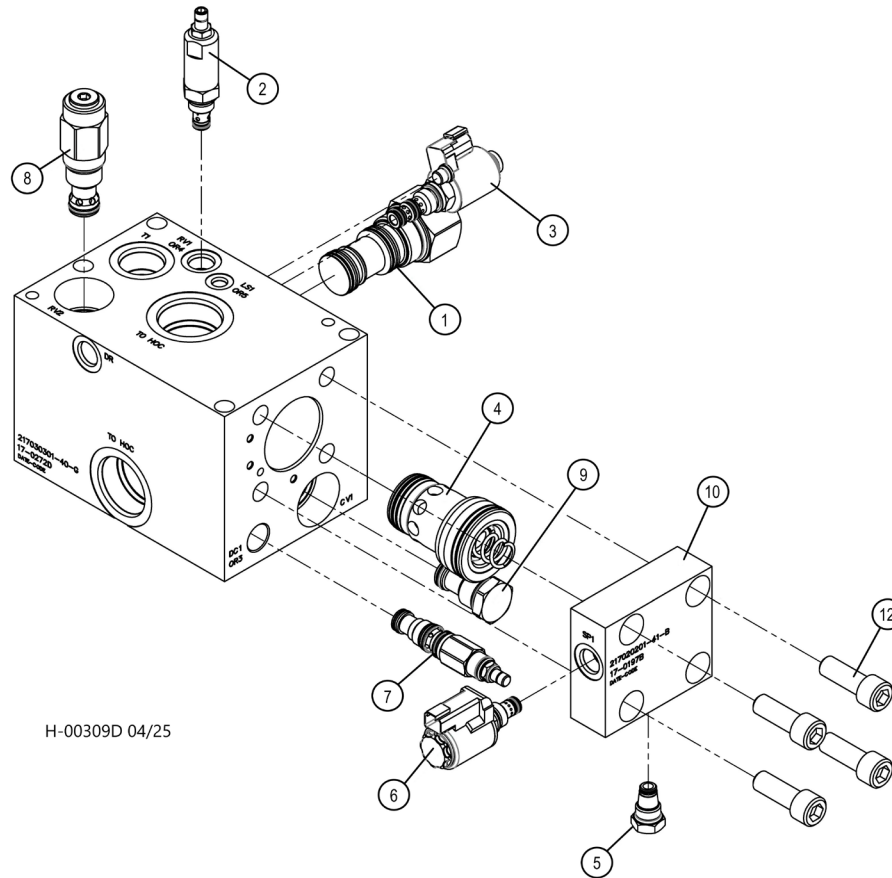


H-00309D 04/25

Item	Part #	Description	Qty.
	57849	MANIFOLD, HOC CONTROL-RETURN	1
1	EV20-S34-0-N-20	LOGIC VALVE	1
*	SK20-S3N-MN	SEAL KIT	1
2	DB08A-01-C-N-090V	PRESSURE RELIEF VALVE	1
3	OD133051A00	DIRECTIONAL CONTROL VALVE	1
*	OD.02.36-22-3P-OC-000	COIL	1
*	R901101723	SEAL KIT	1
4	LC32DB20E-7X/	LOGIC VALVE	1
*	R900313106	SEAL KIT	1
5	SC08-20-0-N-100	SCREEN CARTRIDGE	1
6	WK08W-01-C-N-0	SOLENOID VALVE CARTRIDGE	1
*	2022920	SEAL KIT	1
7	DRBB-LEN	CARTRIDGE VALVE	1
*	990011007	SEAL KIT	1
8	RV12-26H-0-N-4	PRESSURE RELIEF VALVE	1
*	SK12-2N-B	SEAL KIT	1
9	CV12-20-0-N-80	CHECK VALVE	1
*	SK12-2N-T	SEAL KIT	1

PAGE INTENTIONALLY LEFT BLANK

UPPER TURNTABLE


(HOC-CONTROL-RETURN MANIFOLD INSTALLATION)

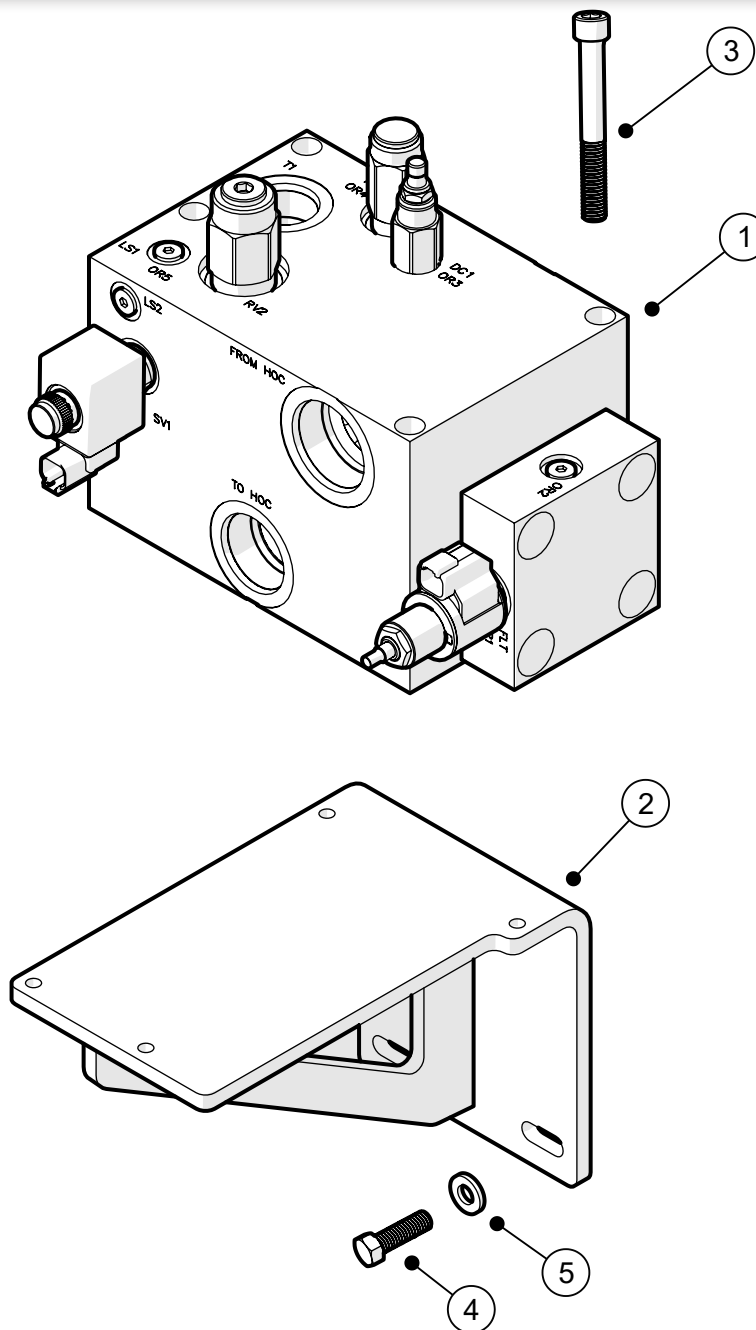

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	57849	1	MANIFOLD, HOC CONTROL-RETURN - D SERIES	
2	62528	1	BRACKET, MANIFOLD - HOC	
3	58219	4	SOCKET HEAD CAP SCREW	
4	10402	4	BOLT	
5	10802	4	WASHER, FLAT	

UPPER TURNTABLE
(CASE DRAIN / SWING LOCK MANIFOLD)

NOTE: APPLY GREASE TO O-RINGS

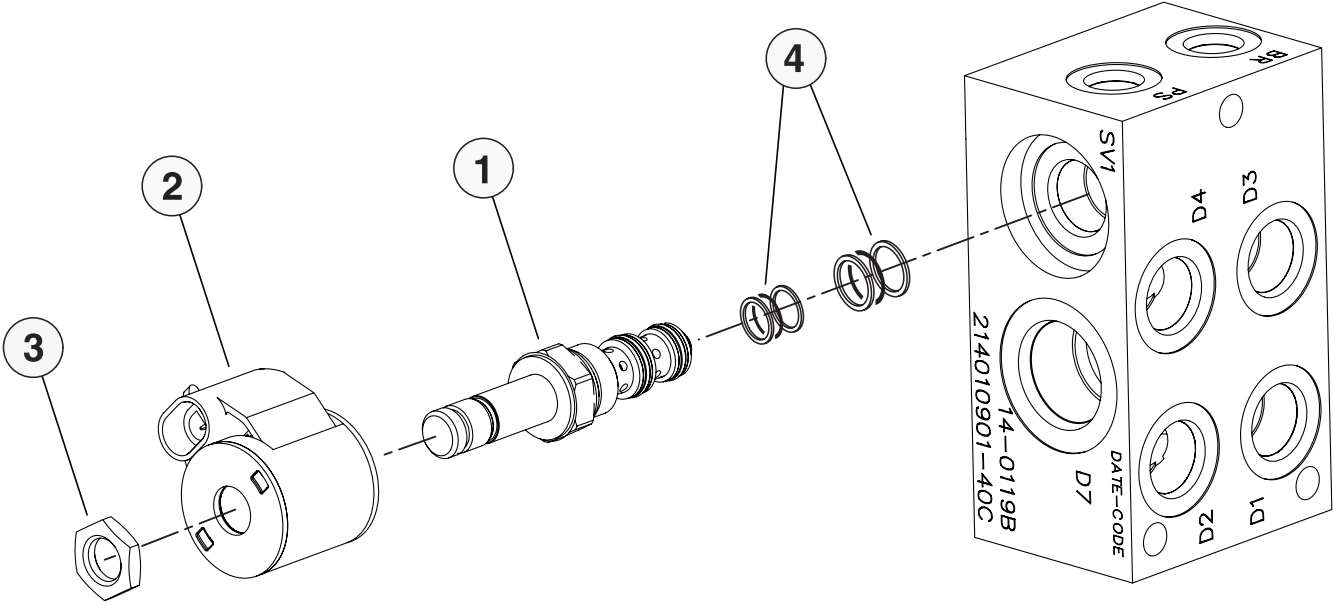


H-00145D 07/24

Item	Part #	Description	Qty.
	55259	MANIFOLD, CASE DRAIN/SWING LOCK	1
1	SV08-31-0-N-00	VALVE, SOLENOID - PARKING BRAKE	1
2	4304024	COIL	1
3	7004400	NUT	1
4	SK08-3X-MM	KIT, SEAL	1

UPPER TURNTABLE

(CHARGE MANIFOLD INSTALLATION)

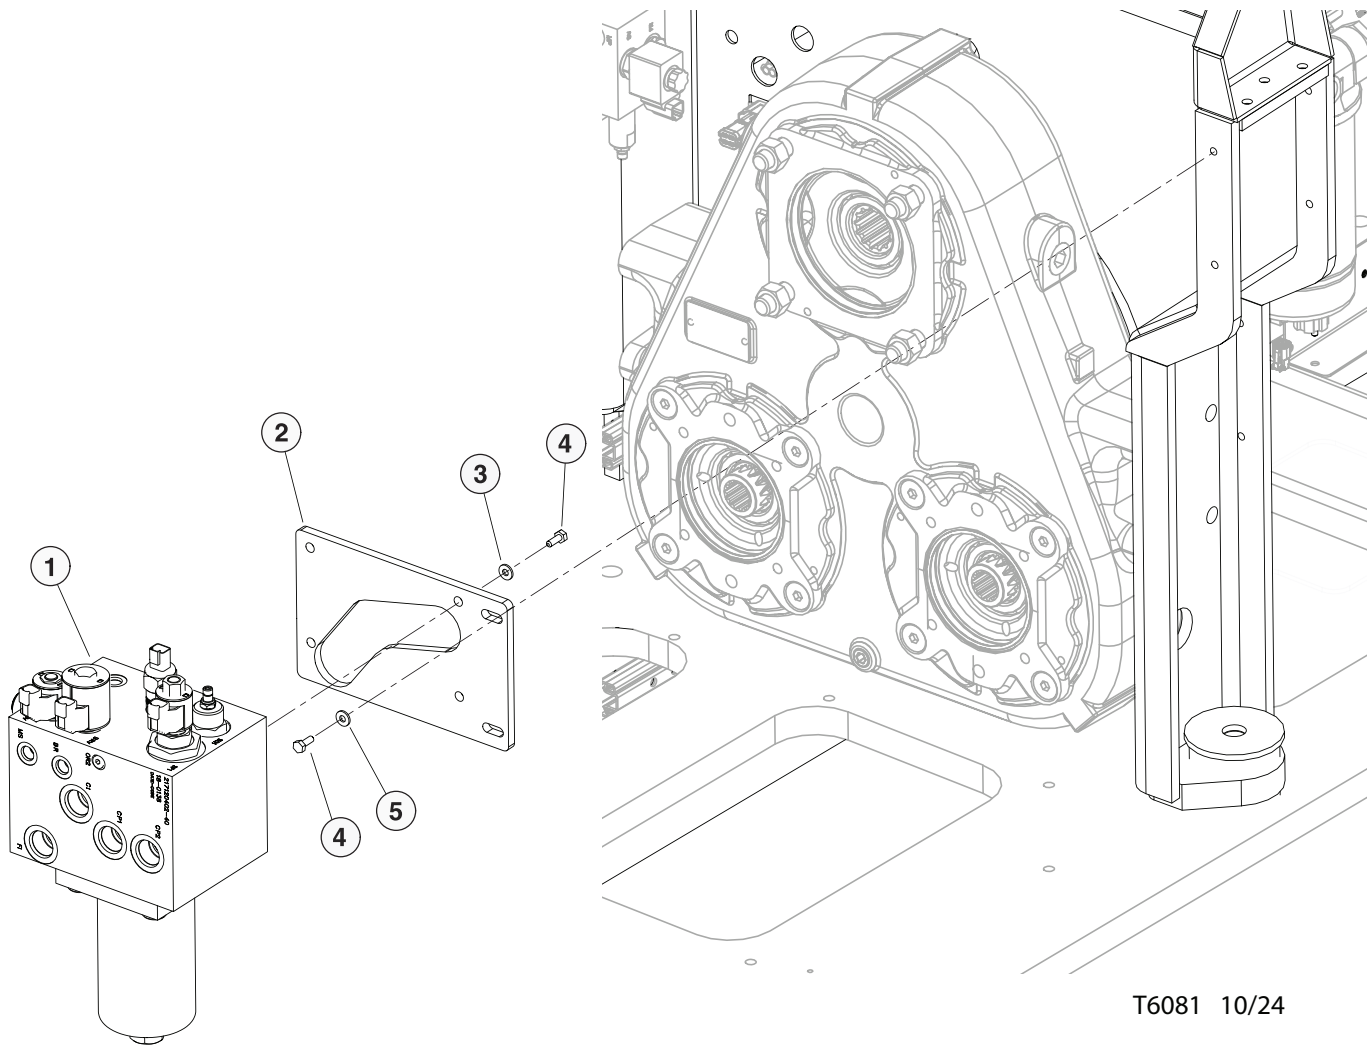


T6081 10/24

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	57881	1	MANIFOLD, CHARGE / COOLER - D SERIES	
2	60391	1	PLATE, CHARGE BLOCK MOUNT - D	
3	15528	4	WASHER, SAE FLAT - .375"	
4	11707	6	BOLT - .375" X 1"	
5	10802	2	WASHER, FLAT - .375"	

PAGE INTENTIONALLY LEFT BLANK

UPPER TURNTABLE (CHARGE MANIFOLD BREAKDOWN)

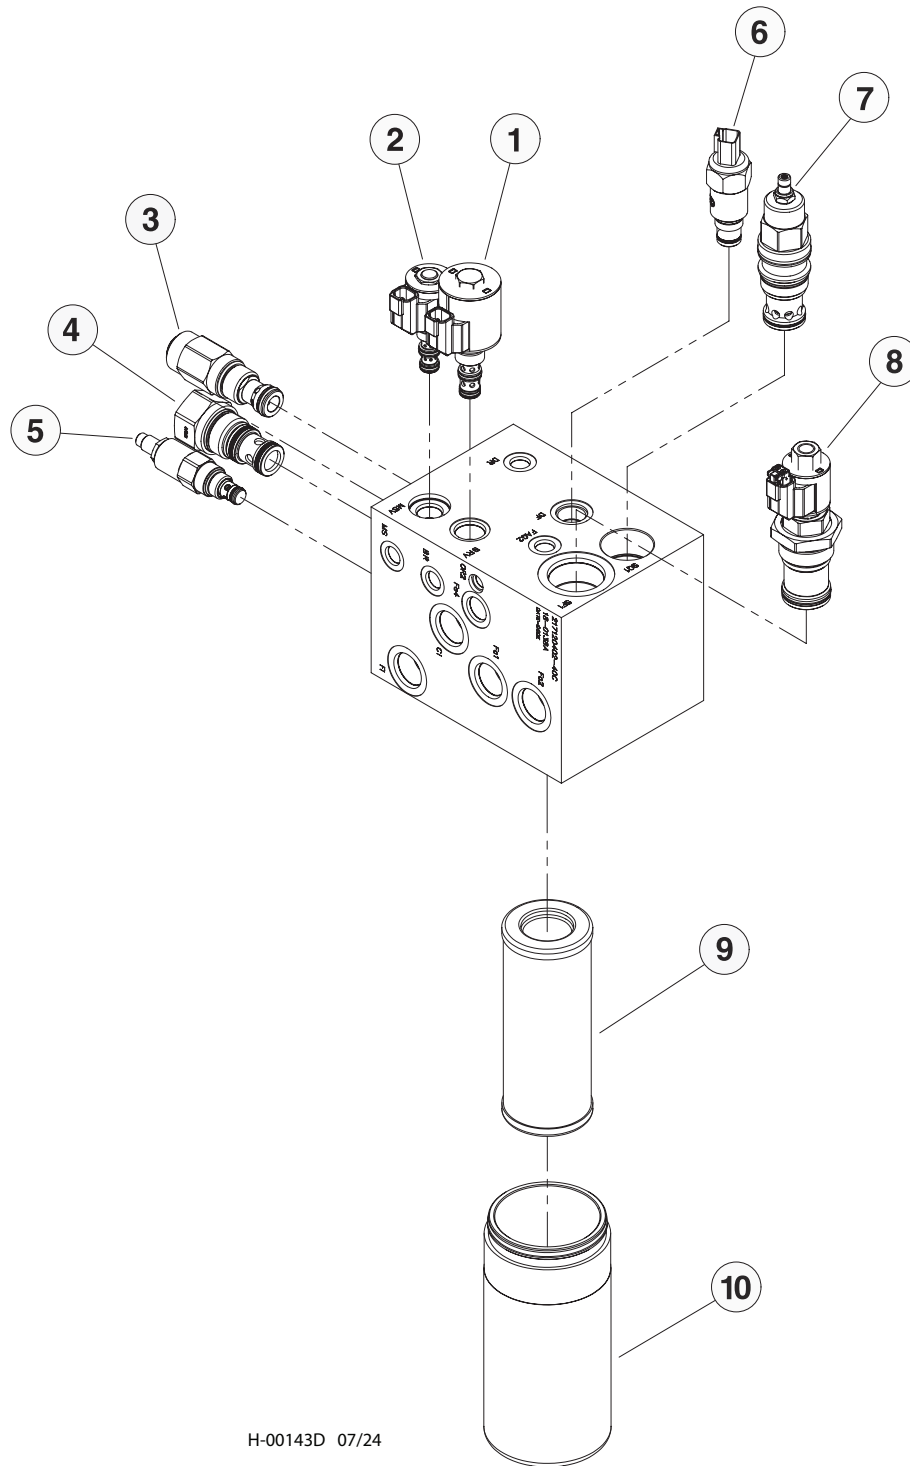

H-00143D 07/24


UPPER TURNTABLE

(CHARGE MANIFOLD BREAKDOWN)

Item	Part #	Description	Qty.
1	58362	CARTRIDGE, COIL COMBO PB	1
2	58363	CARTRIDGE, COIL COMBO MTR SFT	1
3	53882	CARTRIDGE, PRES. RELIEF	1
4	EP16-S35 - (57881)	CARTRIDGE	1
5	RV12-26H - (57881)	CARTRIDGE	1
6	62004	SWITCH, FILTER INDICATOR	1
7	52223	CARTRIDGE, FAN DRIVE	1
8	53737	COIL, PARK BRAKE	1
9	19861	ELEMENT, HYDROSTATIC FILTER	1
10	LF 240 BOWL - (57881)	BOWL	1

UPPER TURNTABLE

(SWING MOTOR & GEARBOX)

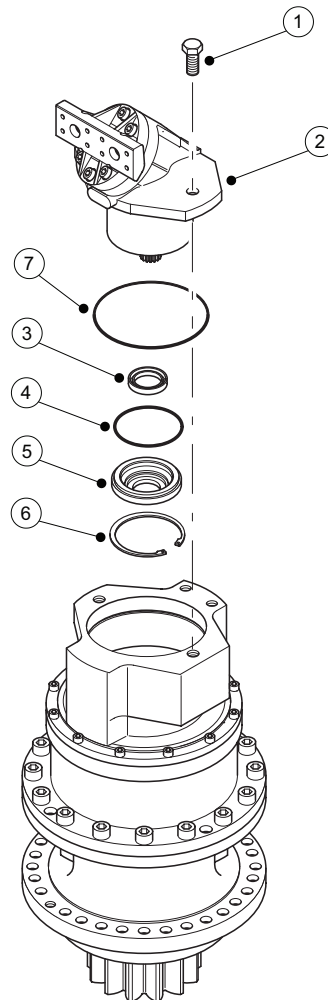

Parts T3839 05/23

REF	PART #	QTY	DESCRIPTION	SEE SECTION
-	57213	1	MOTOR, SWING - L&S 32.5:1 / 56CC	
1	20661	1	BOLT - 16mm-2.0P x 35mm	
2	17238	1	MOTOR, hydraulic - Rexroth A2FE56 cc	
3	21576	1	SEAL, shaft - 45cc	
	51638	1	SEAL, shaft - 56cc	
4	21577	1	O-RING, front cover - 45cc	
	51639	1	O-RING, front cover - 56cc	
5	21578	1	COVER, front	
6	21579	1	RING, seal retaining	
7	21580	1	O-RING, motor pilot	


Note:

Due to warranty policy restrictions imposed by component suppliers, it is not recommended that the component be disassembled further than is shown in the illustration.

PAGE INTENTIONALLY LEFT BLANK

UPPER TURNTABLE

(SWING GEARBOX)

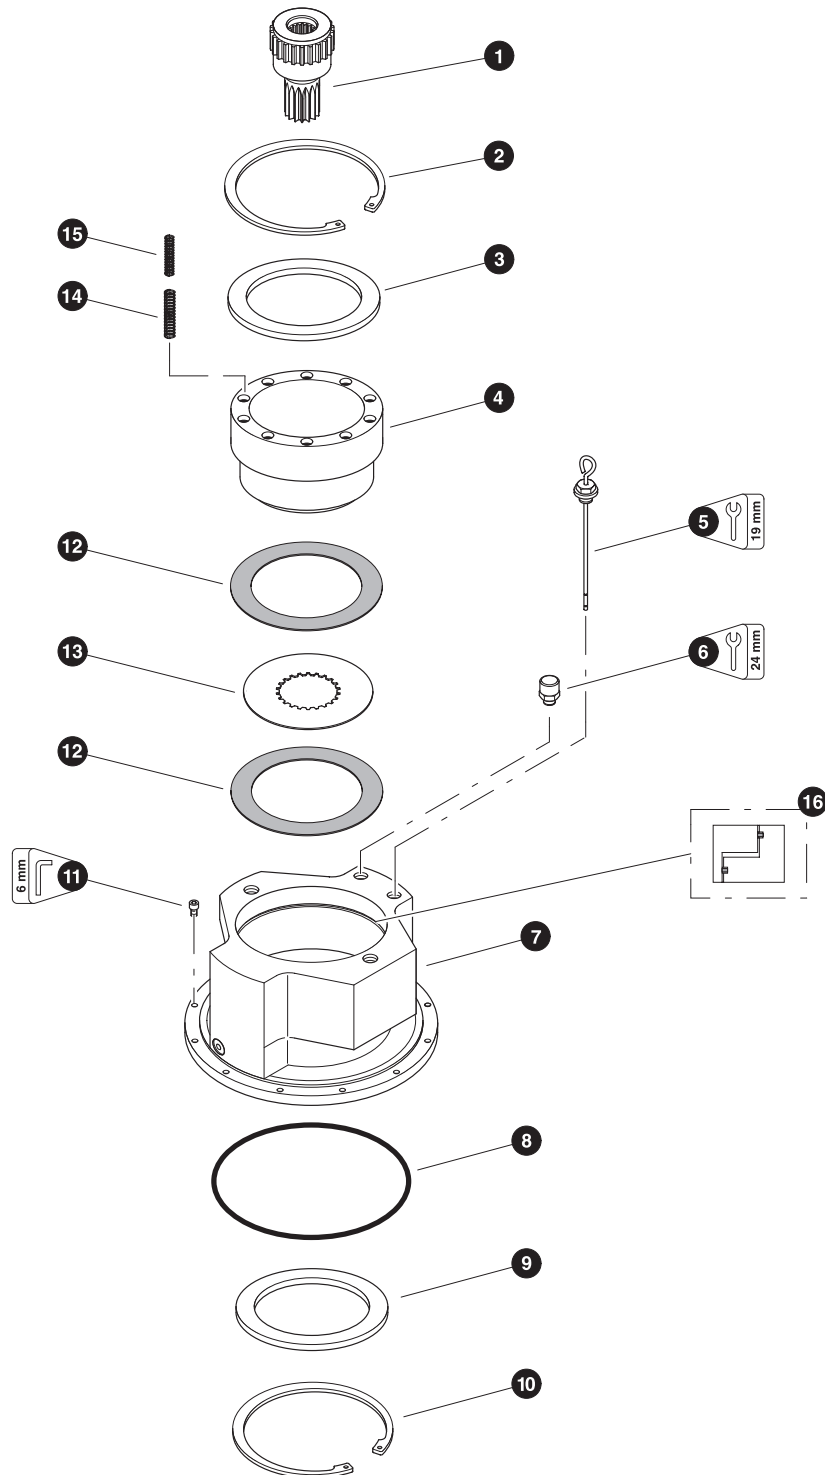

Parts 00626 11/10/2000
25.00

UPPER TURNTABLE

(SWING GEARBOX)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
-	54394	1	GEARBOX - Lohmann ECCENTRIC	
1	21565	1	SHAFT, brake	
2	21566	1	RING, snap - upper brake	
3	21567	1	PLATE, back-up - upper brake	
4	21568	1	PISTON, brake	
5	21569	1	DIPSTICK	
	21571	1	RING, seal	
6	21570	1	BREATHER	
	21571	1	RING, seal	
7	NSS	1	HOUSING, brake	
8	21572	1	O-RING, brake housing	
9	21573	1	PLATE, back-up - lower brake	
10	21574	1	RING, snap - lower brake	
11	21575	12	BOLT, allen head - 8mm x 25mm	
12	NSS	5	DISC, brake	
13	NSS	4	DISC, spacer	
14	NSS	10	SPRING, outer	
15	NSS	10	SPRING, inner	
	57710	1	BRAKE DISC KIT	


Note:

Due to warranty policy restrictions imposed by component suppliers, it is not recommended that the component be disassembled further than is shown in the illustration.

THIS PAGE LEFT BLANK FOR NOTES


This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

SECTION UP-2 (UPPER TURNTABLE HYDRAULIC TANK)

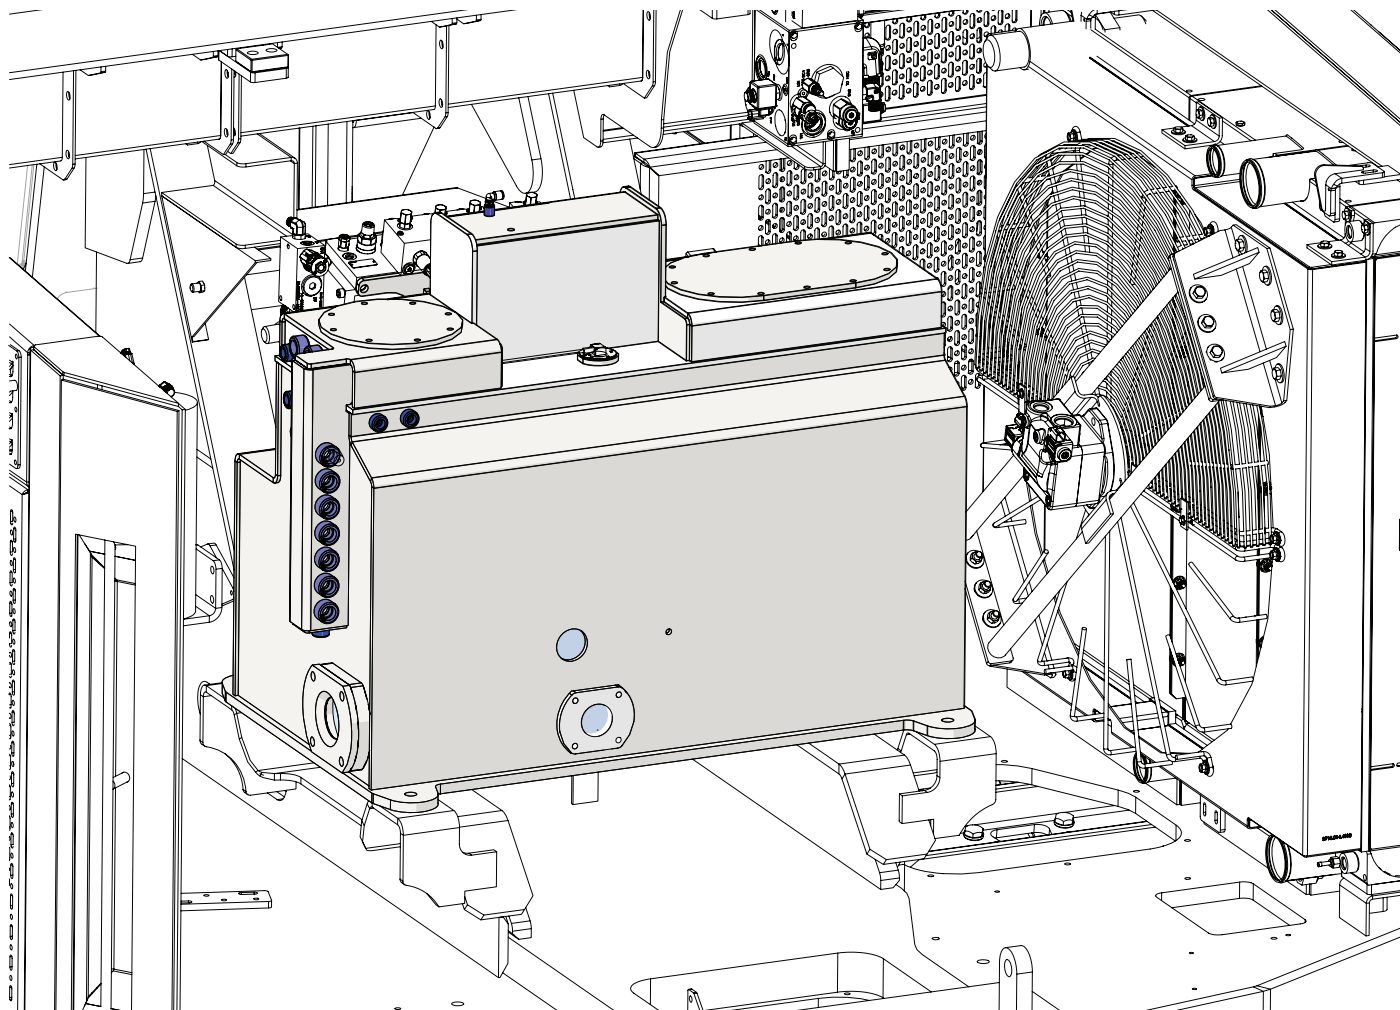

UPPER TURNTABLE

(HYDRAULIC TANK INSTALLATION)

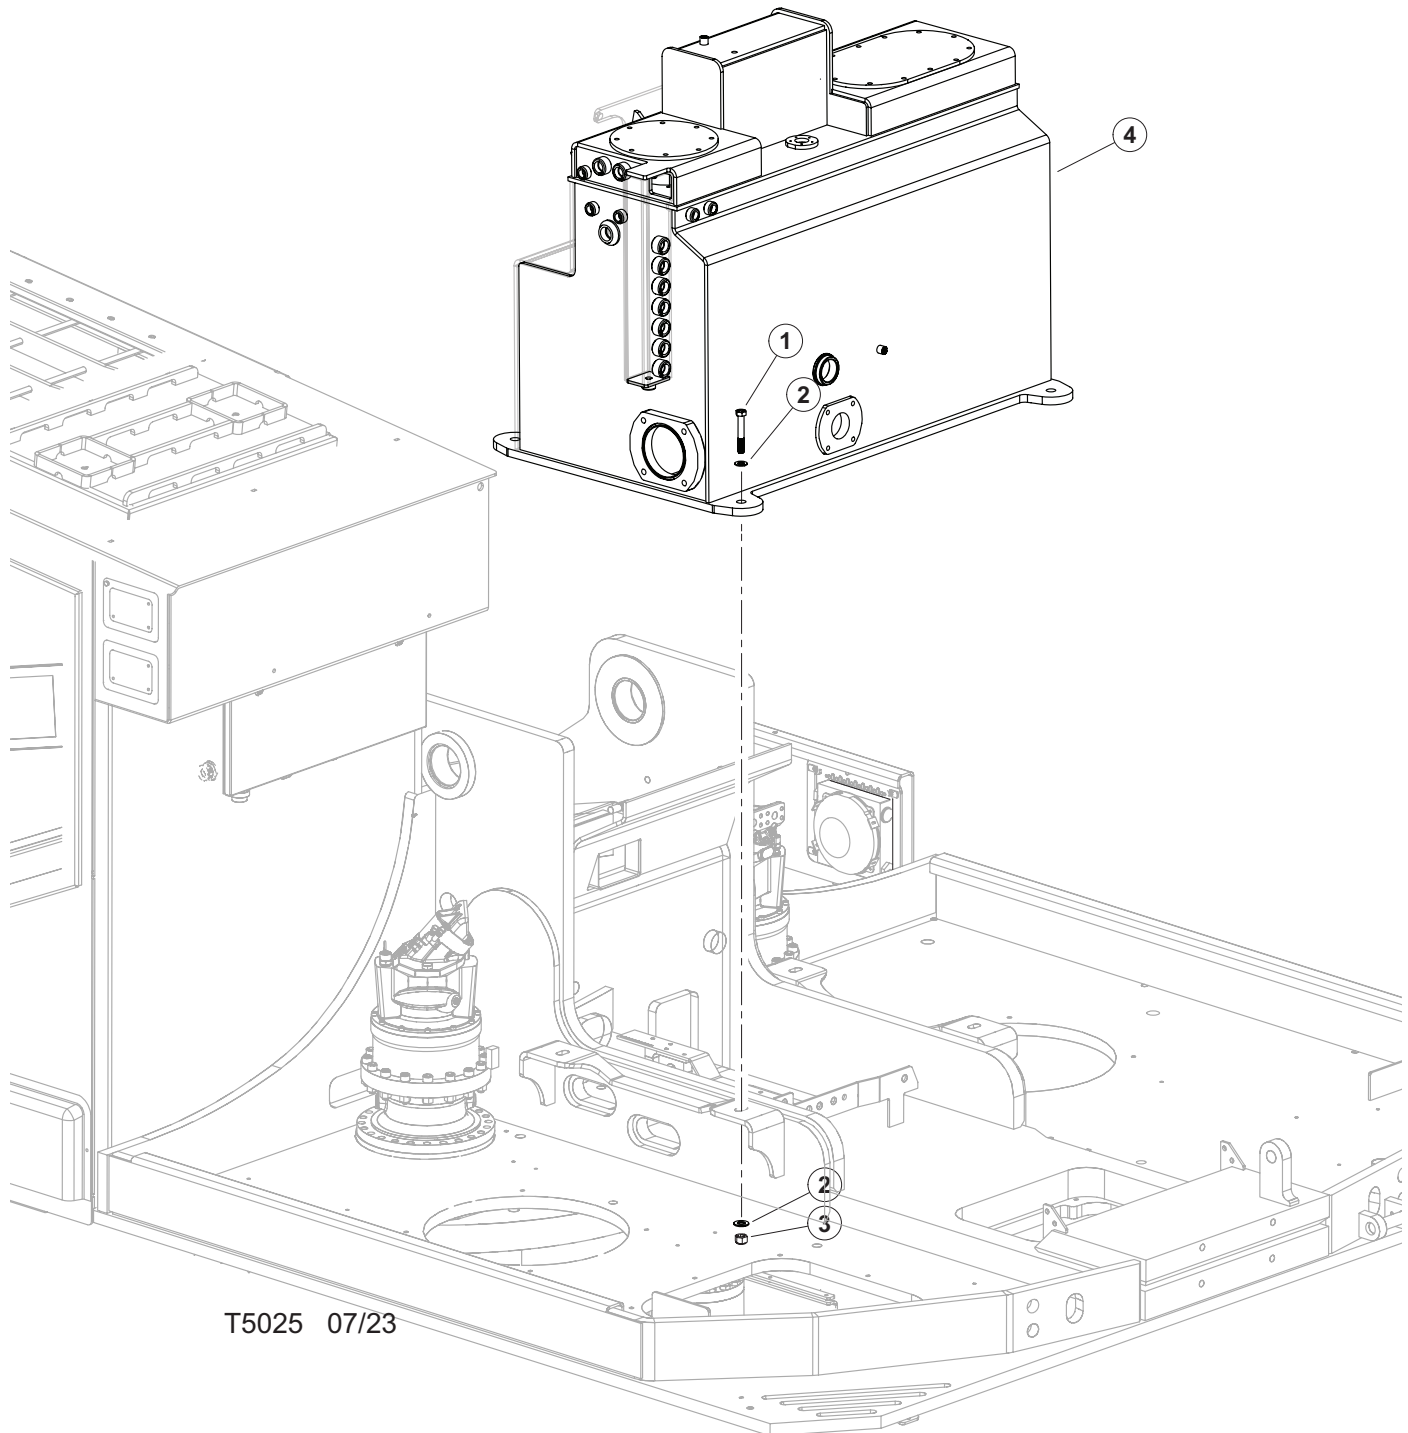


UPPER TURNTABLE

(HYDRAULIC TANK INSTALLATION)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	10775	4	BOLT - .75" X 2.5"	
2	15550	8	WASHER, SAE FLAT - .75"	
3	10817	4	NUT, LOCK - .75"	
4	(See Next Page)	1	HYDRAULIC TANK ASSEMBLY	See Next Page

UPPER TURNTABLE

(HYDRAULIC TANK COMPONENT INSTALLATION)

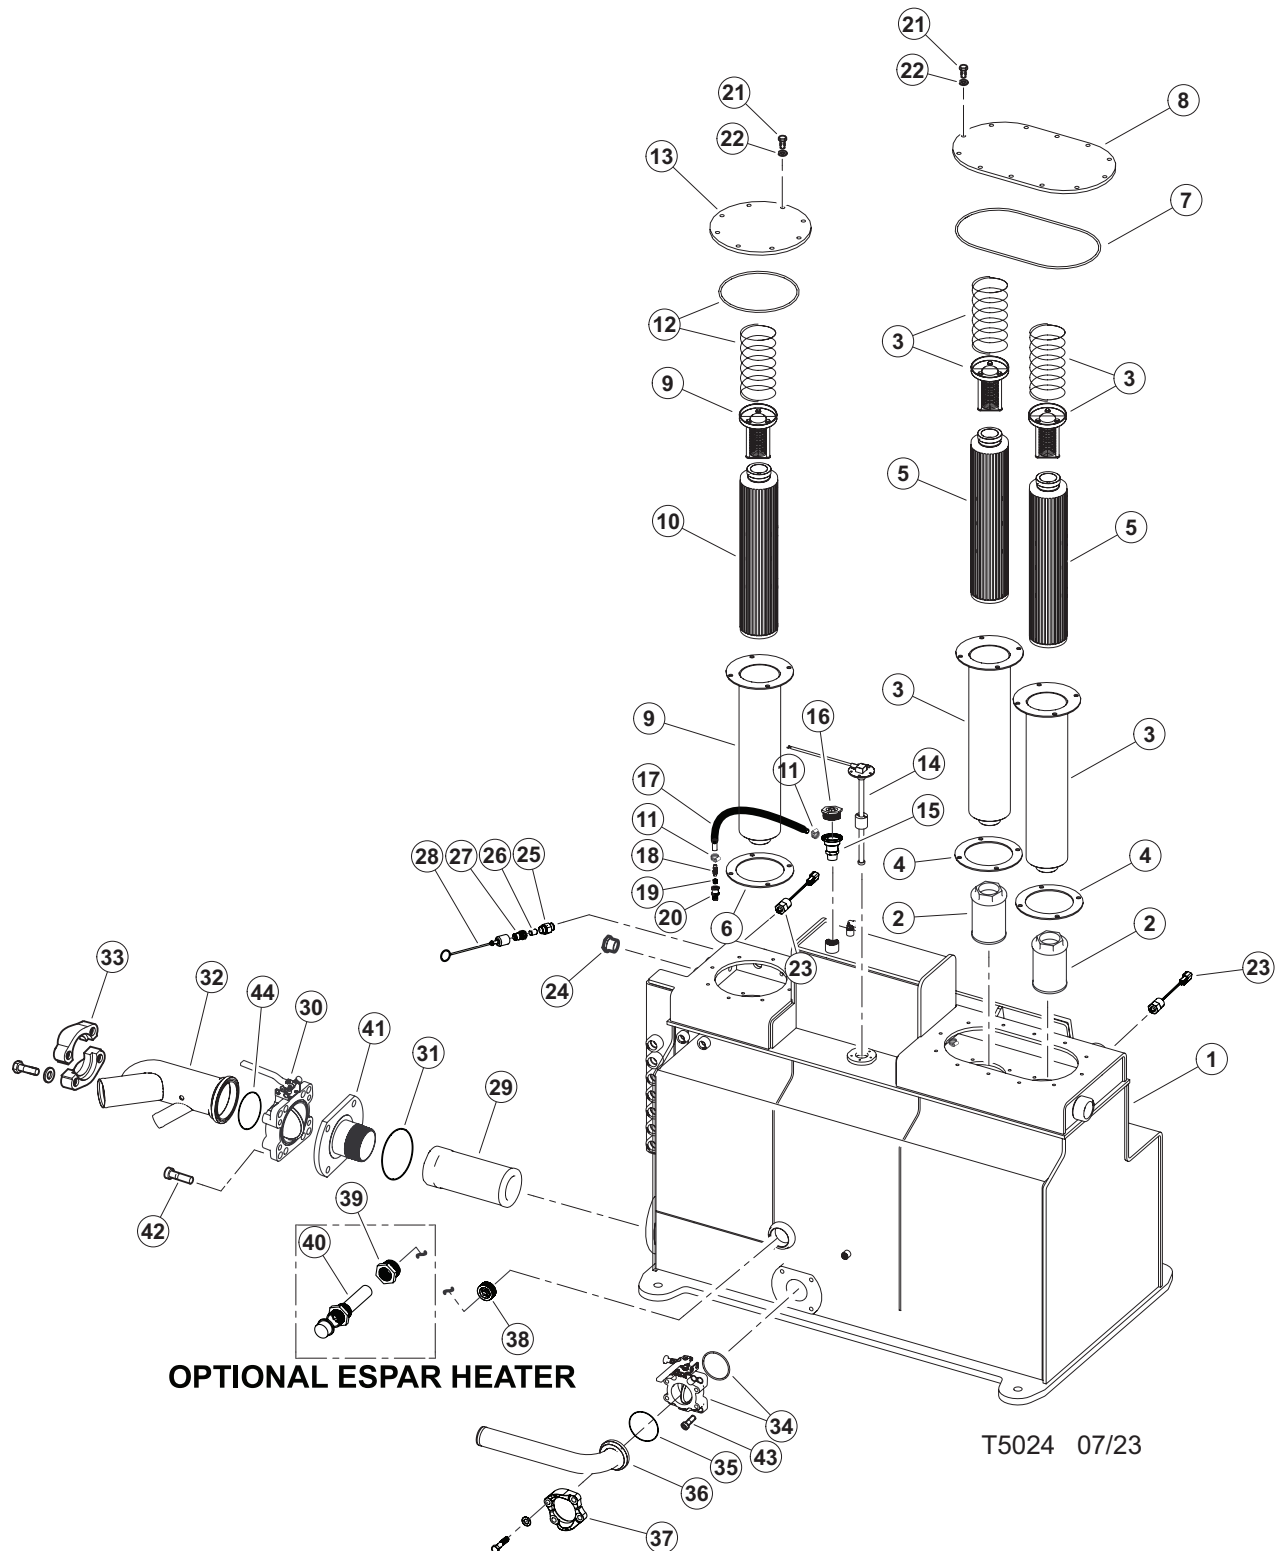

UPPER TURNTABLE

(HYDRAULIC TANK COMPONENT INSTALLATION)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	66320	1	WELDMENT, HYD TANK-LL- D	
2	66337	2	DIFFUSER, BFT FILTER 8 INCH	
3	51620	2	FILTER KIT, HYD. TANK MAIN RETURN	
4	52126	2	GASKET, MAIN RETURN FILTER - (51620)	
5	52350	2	ELEMENT, MAIN RETURN - HI EFF.	
6	16852	1	SEAL, Gasket (LFT-642)	
7	66340	1	O-RING, 16" DIA. -385	
8	66330	1	COVER, ACCESS FILTER-DUAL	
9	51621	1	FILTER KIT, HYD. TANK - CASE RETURN	
10	22647	1	ELEMENT, HYDRAULIC TANK - SMALL	
11	16202	2	CLAMP, HOSE - WORM STYLE - .625"	
12	15600	1	O-RING - 8" DIA. -369	
13	54414	1	COVER, HYDRAULIC TANK SINGLE	
14	57264	1	SENDER, HYD OIL LEVEL W/FLOAT	
15	17156	1	STEM, HYDRAULIC TANK RELIEF CAP	
16	18135	1	CAP, HYD. RESERVOIR RELIEF - 13 PSI	
17	16238	5ft.	HOSE, FUEL LINE (BULK ROLL) - .3125"	
18	16990	1	CONNECTOR, STR HOSE BARB - 4244-5-4	
19	11318	1	BUSHING, REDUCER - 5406-6-4	
20	15652	1	VALVE, CHECK - HYDRAULIC/FUEL	
21	24088	20	BOLT - .5" X 1.25"	
22	10804	20	WASHER, FLAT - .5"	
23	57818	1	SWITCH, PRESSURE - SCHROEDER	
24	24308	1	SIGHT GLASS	
25	20067	1	BUSHING, REDUCER - 6410-12-8	
26	55698	1	FITTING, 8-1/2 F50F-S	
27	55620	1	NIPPLE, 60 SERIES - H6-63-T12	
28	55617	1	CAP, QUICK CONNECT - RUBBER (RED)	
29	15842	1	FILTER, SCREEN - IMPLEMENT	
30	54786	1	VALVE, SHUT OFF - BUTTERFLY (4")	
31	51726	1	O-RING, HDYRAULIC TANK	
	23095	4	BOLT, ALLEN HEAD - .625" x 2" (51726)	
32	42461	1	TUBE, SUCTION - 4" FLANGE - W/O DISC SAW	
33	51625	1	KIT, FLANGE - SUCTION TUBE (4")	
	(See Description)	4	BOLT (Supplier Part # 1-246-90)	
	51725	1	O-RING	
34	57834	1	VALVE, BUTTERFLY (2.5") - (AUX. PUMP)	
	(See Description)	1	1/2-13 X 1 1/4" UNC - PART # 3551 (LAWSON #)	
35	(CALL)	1	O-RING - UCTION TUBE (AUX. PUMP)	
36	62618	1	WELDMENT, SUCTION TUBE(AUX. PUMP)	
37	15193	1	KIT, SPLIT FLANGE - 2.5" (CODE 61)	
	15551	1	BOLT - 12MM-1.75P X 40MM (15193)	
38	53105	1	PLUG, BLACK PIPE - 2.0" HYD. TANK	
39	26397	1	BUSHING, BLACK - 2" X 1.25" (OPTIONAL)	
40	20069	1	ELEMENT, HEATER - HYD. TANK (120V 600W) (OPTIONAL)	
41	42306	1	PLATE, INTER.-SUCTION PORT 100mm VALVE	
42	23095	4	BOLT, ALLEN HEAD - .625" x 2"	
43	15551	4	BOLT - 12MM-1.75P X 40MM	



This technical drawing is an exploded view of a mechanical assembly, likely a pump or motor unit. The components are numbered 1 through 16. The main assembly consists of a central housing (8) with a motor or actuator (7) on the left. The top of the housing features a circular cover (1) secured by four screws (2). Below the cover is a gasket (3) and a mounting plate (4) with a central bracket (5) and a small component (6). The bottom of the housing has a flange (9) with a central hub (10). To the right, there is a fan assembly (11) with a fan blade (12) and a fan housing (13). The fan housing is connected to a motor or actuator (14) which is mounted on a base (15). A separate view at the bottom shows a detailed view of the mounting plate (4) with the central bracket (5) and the small component (6). The entire assembly is shown in an exploded view to illustrate the relationship between the parts.

UPPER TURNTABLE (VACUUM PUMP BREAKDOWN)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
-	51615	1	VACUUM PUMP	
1	(CALL)	1	HEAD	
2		1	O-RING, HEAD	
3		2	FILTER, MUFFLER	
4		1	VALVE, LIMITER	
5		2	VALVE, LEAF	
6		1	PLATE, VALVE	
7		1	RETAINER, VALVE	
8		1	SCREW, VALVE	
9		1	PLATE, RETAINER	
10		1	DIAPHRAGM, COMPRESSOR	
10		1	DIAPHRAGM, VACUUM	
11		3	SPACER, FELT	
12		1	SPACER	
13		1	FAN	
14		1	GRILL	
15		4	RIVET)	
16	(CALL)	1	ASSEMBLY, VALVE PLATE	

UPPER TURNTABLE

(VACUUM PUMP ASSEMBLY, FITTINGS & COMPONENTS)

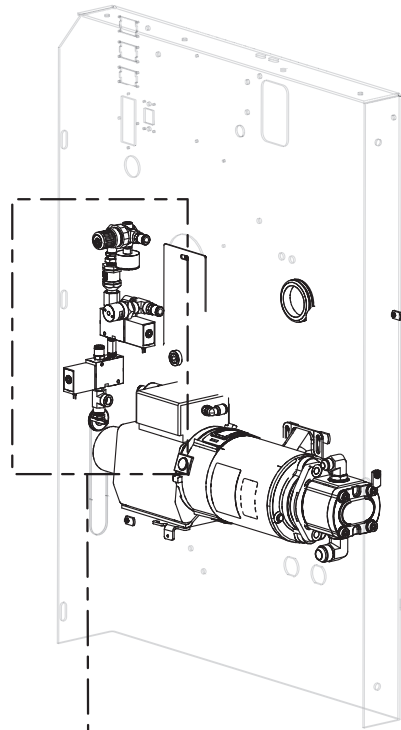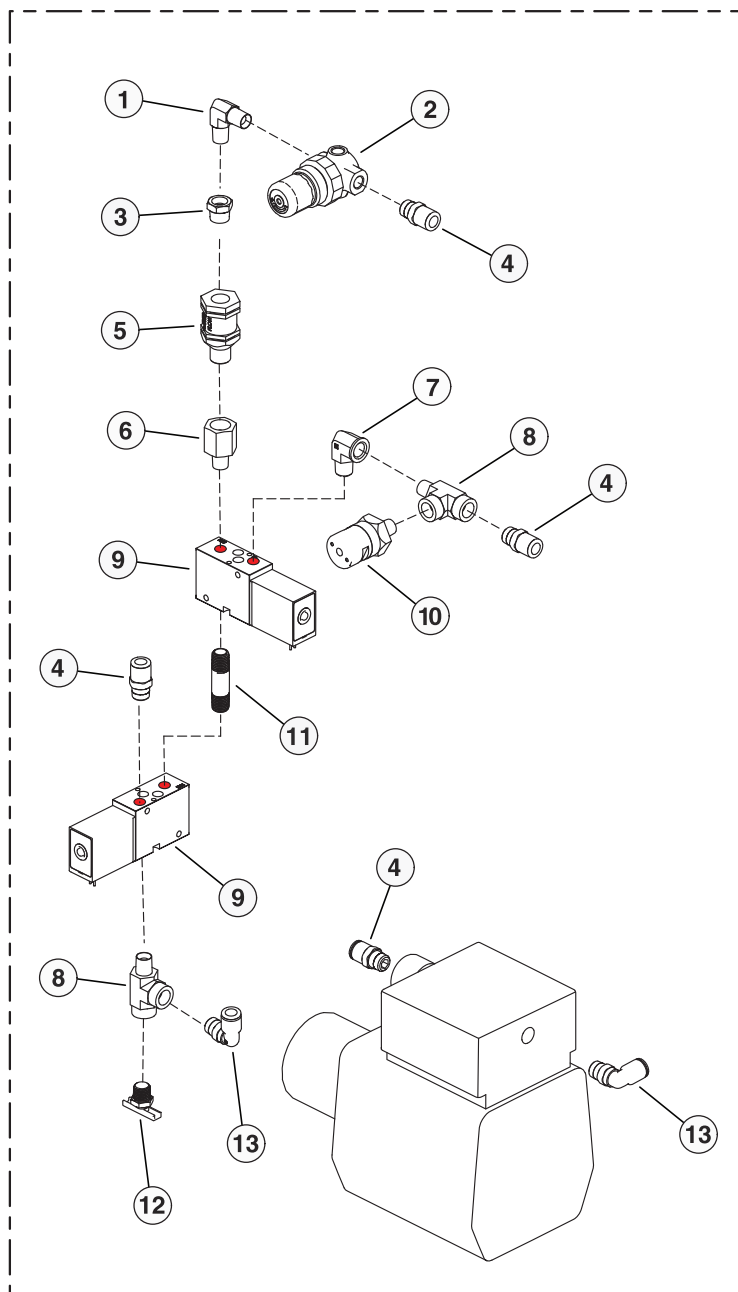

T5082 10/23

UPPER TURNTABLE


(VACUUM PUMP ASSEMBLY, FITTINGS & COMPONENTS)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	52741	1	ELBOW, MALE PIPE - 1/4 CR-S	
2	15649	1	REGULATOR, TURBO BOOST	
3	11318	1	BUSHING, REDUCER - 5406-6-4	
4	52506	4	CONNECTOR, STR - PUSH HOSE - 1/4" VACUUM	
5	15652	1	VALVE, CHECK - HYDRAULIC/FUEL	
6	52145	1	ADAPTER, EXPANDER - 3/8 X 1/4 FG-S	
7	21147	1	ELBOW, 90 STREET .25" NPT - BRASS	
8	10393	2	TEE - 1/4 MRO	
9	51616	2	VALVE, 3-WAY VACUUM PUMP	
10	51737	1	SWITCH, PRESSURE - VACUUM PUMP	
11	16314	1	NIPPLE, PIPE - .25" X 2"	
12	15650	1	VALVE, TANK VENT - DC602-6	
13	51739	2	CONNECTOR, ELBOW -PUSH ON (VACUUM) (1/4")	


This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

SECTION UP-2

(UPPER TURNTABLE RADIATOR & OIL COOLER)

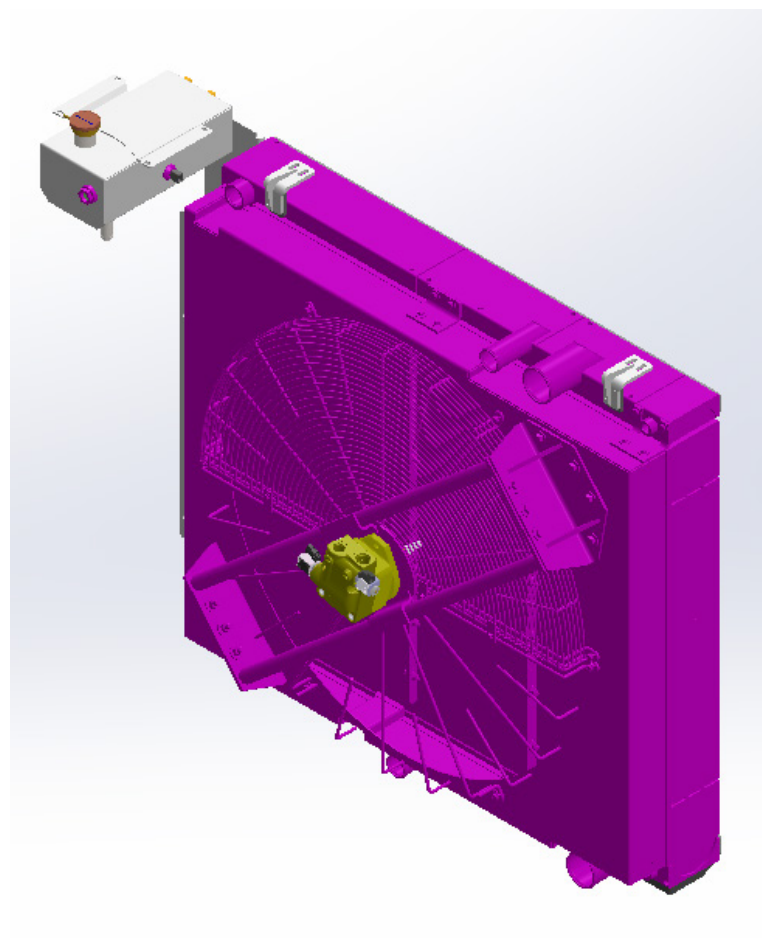

UPPER TURNTABLE (RADIATOR / OIL COOLER INSTALLATION)

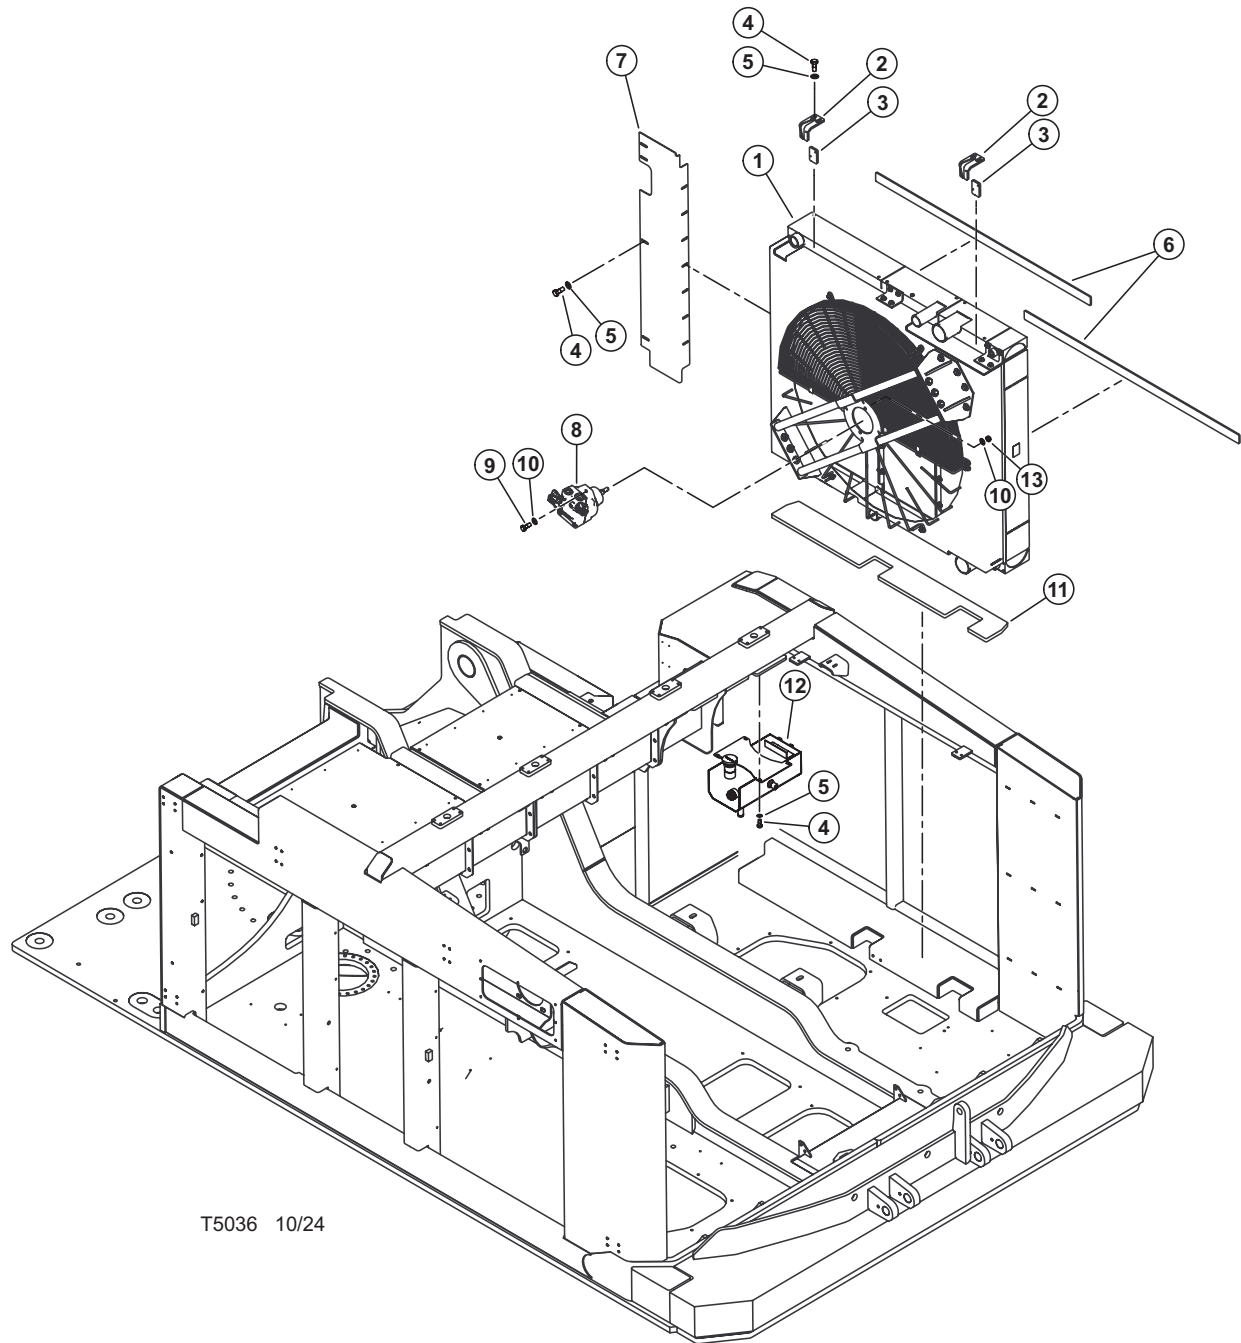

T5036 10/24


UPPER TURNTABLE

(RADIATOR / OIL COOLER INSTALLATION)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	58128	1	RADIATOR / OIL COOLER - STAGE V TAIL SWING (COMPLETE UNIT)	
2	62140	2	WELDMENT, COOLER TOP CLAMP	
3	60106	2	RUBBER, COOLER TOP CLAMP	
4	10402	9	BOLT - .375" X 1.25"	
5	10802	9	WASHER, FLAT - .375"	
6	62149	2	RUBBER, COOLER FRONT	
7	62563	1	PLATE, COOLER FILL PANEL	
8	55215	1	MOTOR, FAN DRIVE - RADIATOR W/FAN CONTROL	
9	18933	2	BOLT - .5" X 1.75"	
10	15534	4	WASHER, SAE FLAT - .5"	
11	62148	1	RUBBER, COOLER BASE	
12	60665	1	TANK, SURGE	
13	10815	2	NUT, LOCK - .5" (NOT SHOWN)	

UPPER TURNTABLE

(RADIATOR / OIL COOLER BREAKDOWN)

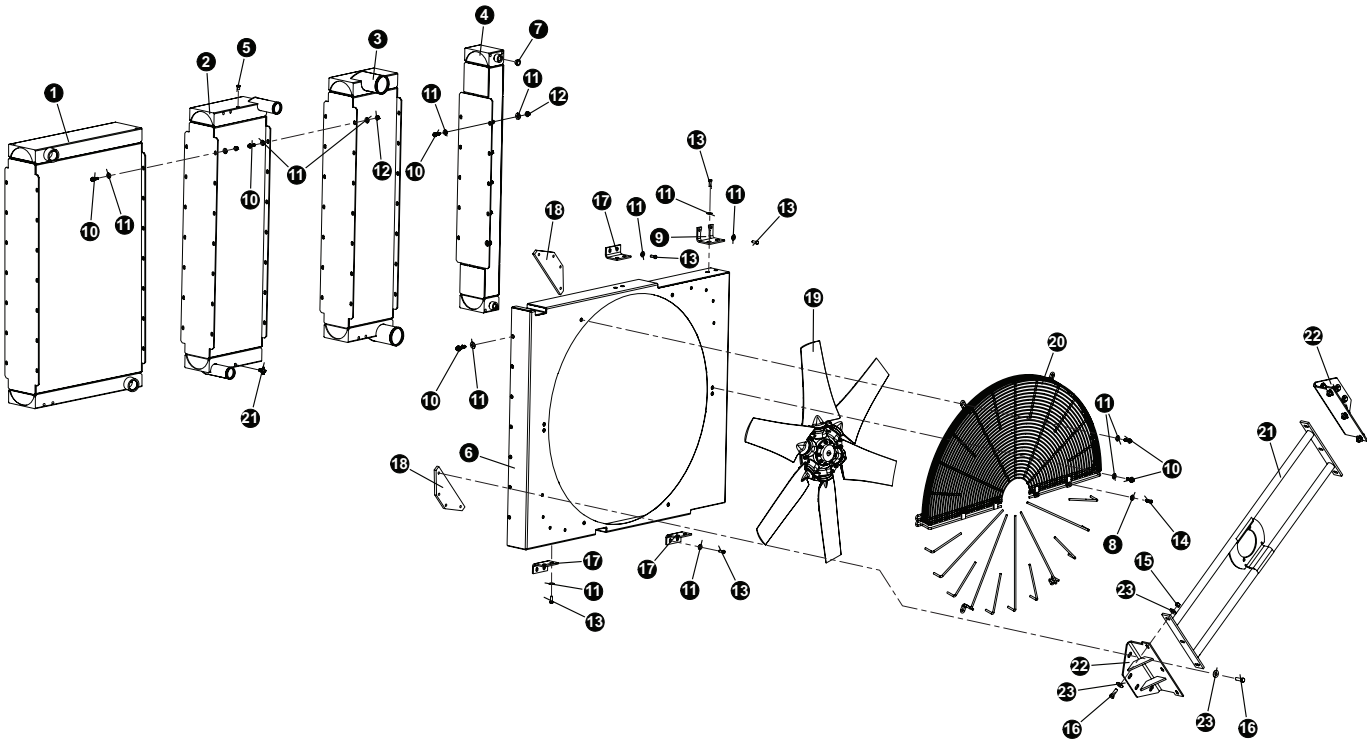


UPPER TURNTABLE

(RADIATOR / OIL COOLER BREAKDOWN)


REF	PART #	QTY	DESCRIPTION	SEE SECTION
-	58128	1	RADIATOR / OIL COOLER - STAGE V TAIL SWING (COMPLETE UNIT)	
1	58168	1	Core Hyd Oil Cooler	
2	(CALL)	1	Radiator	
3		1	Charge Air Cooler	
4		1	Gearbox Oil Cooler	
5		1	Insert	
6		1	Fan Shroud	
7		1	Adaptor Insert	
8		1	Washer	
9		1	Bracket	
10		68	Bolt	
11		118	Washer	
12		38	Nut	
13		18	Bolt	
14		4	Bolt	
15		6	Nut	
16		14	Bolt	
17		3	Bracket	
18		2	Support	
19	58146	1	FAN, RADIATOR - 44" D-TAIL SWING STAGE V	
20	(CALL)	1	Fan Cover	
21		1	Fan Motor Mount	
22		2	Mounting Bracket)	
23	(CALL)	20	Washer	

UPPER TURNTABLE
(RADIATOR / OIL COOLER FAN DRIVE MOTOR)

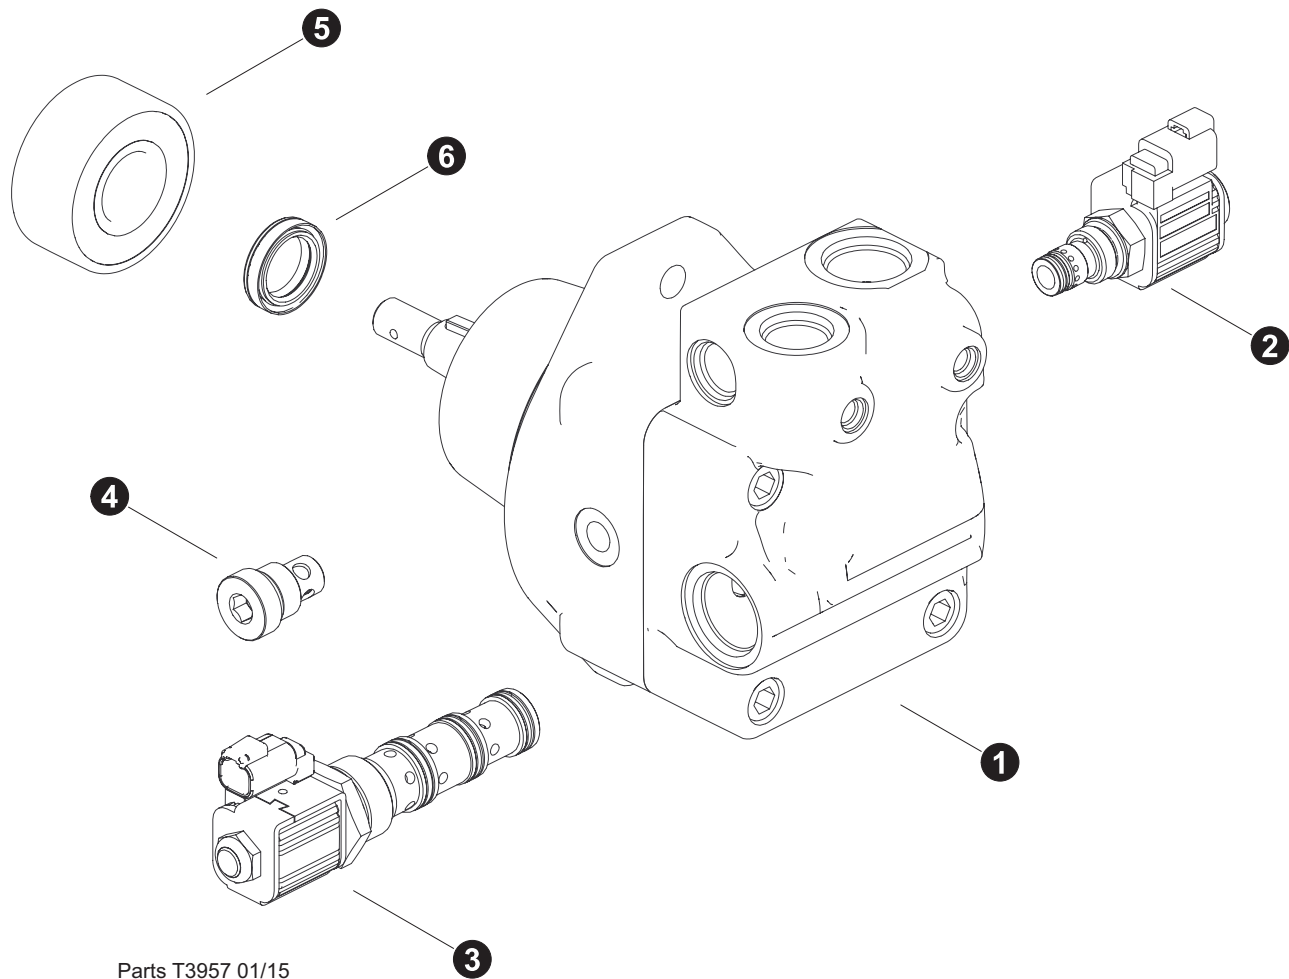

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	55215	1	MOTOR, FAN DRIVE - RADIATOR W/FAN CONTROL	
2	57603	1	ASSEMBLY, Fan Reverse Valve	
3	57604	1	ASSEMBLY, Fan Control	
4	(CALL)		ASSEMBLY, Check Valve	
5	(CALL)	1	BEARING	
6	57670	1	SHAFT SEAL	


UPPER TURNTABLE
(RADIATOR OVERFLOW TANK)

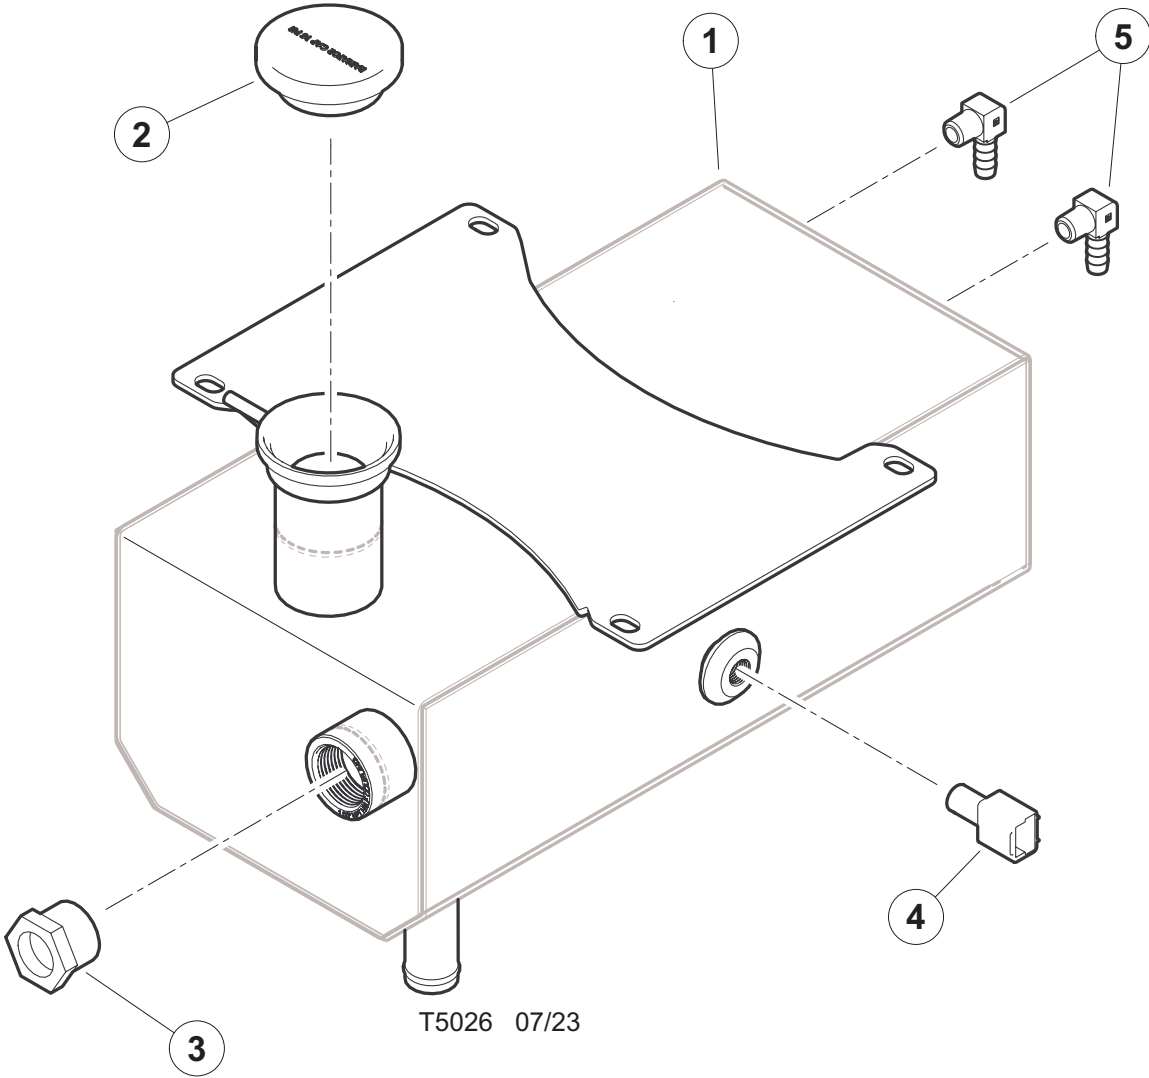

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	60665	1	WELDMNT, D-SERIES SURGE TANK	
2	57893	1	CAP, RADIATOR 15 LB	
3	24308	1	SIGHT GLASS - HYDRAULIC TANK	
4	58117	1	SENSOR, LOW COOLANT - STAGE 5	
5	52586	2	ELBOW, 90 MALE HOSE BARB 6-4	


[illegible]

SECTION UP-4 UPPER TURNTABLE DECALS

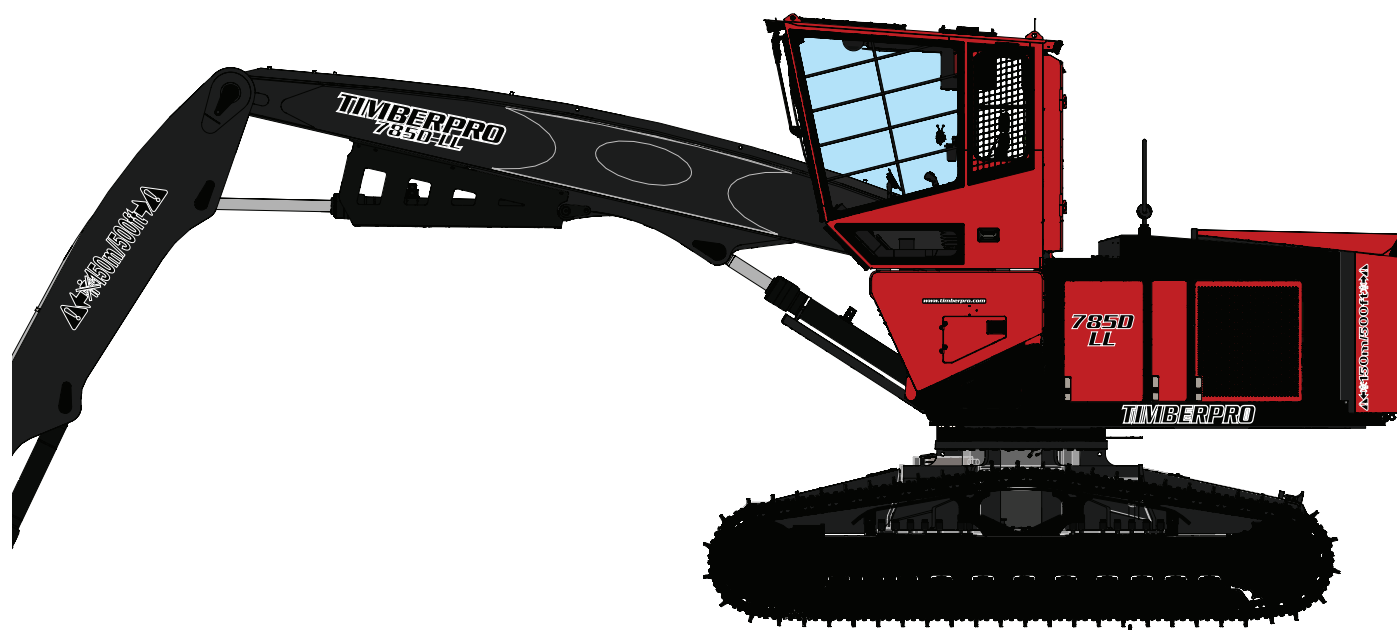

UPPER TURNTABLE - NV & LV

UPPER TURNTABLE AND BOOM EXTERIOR DECALS

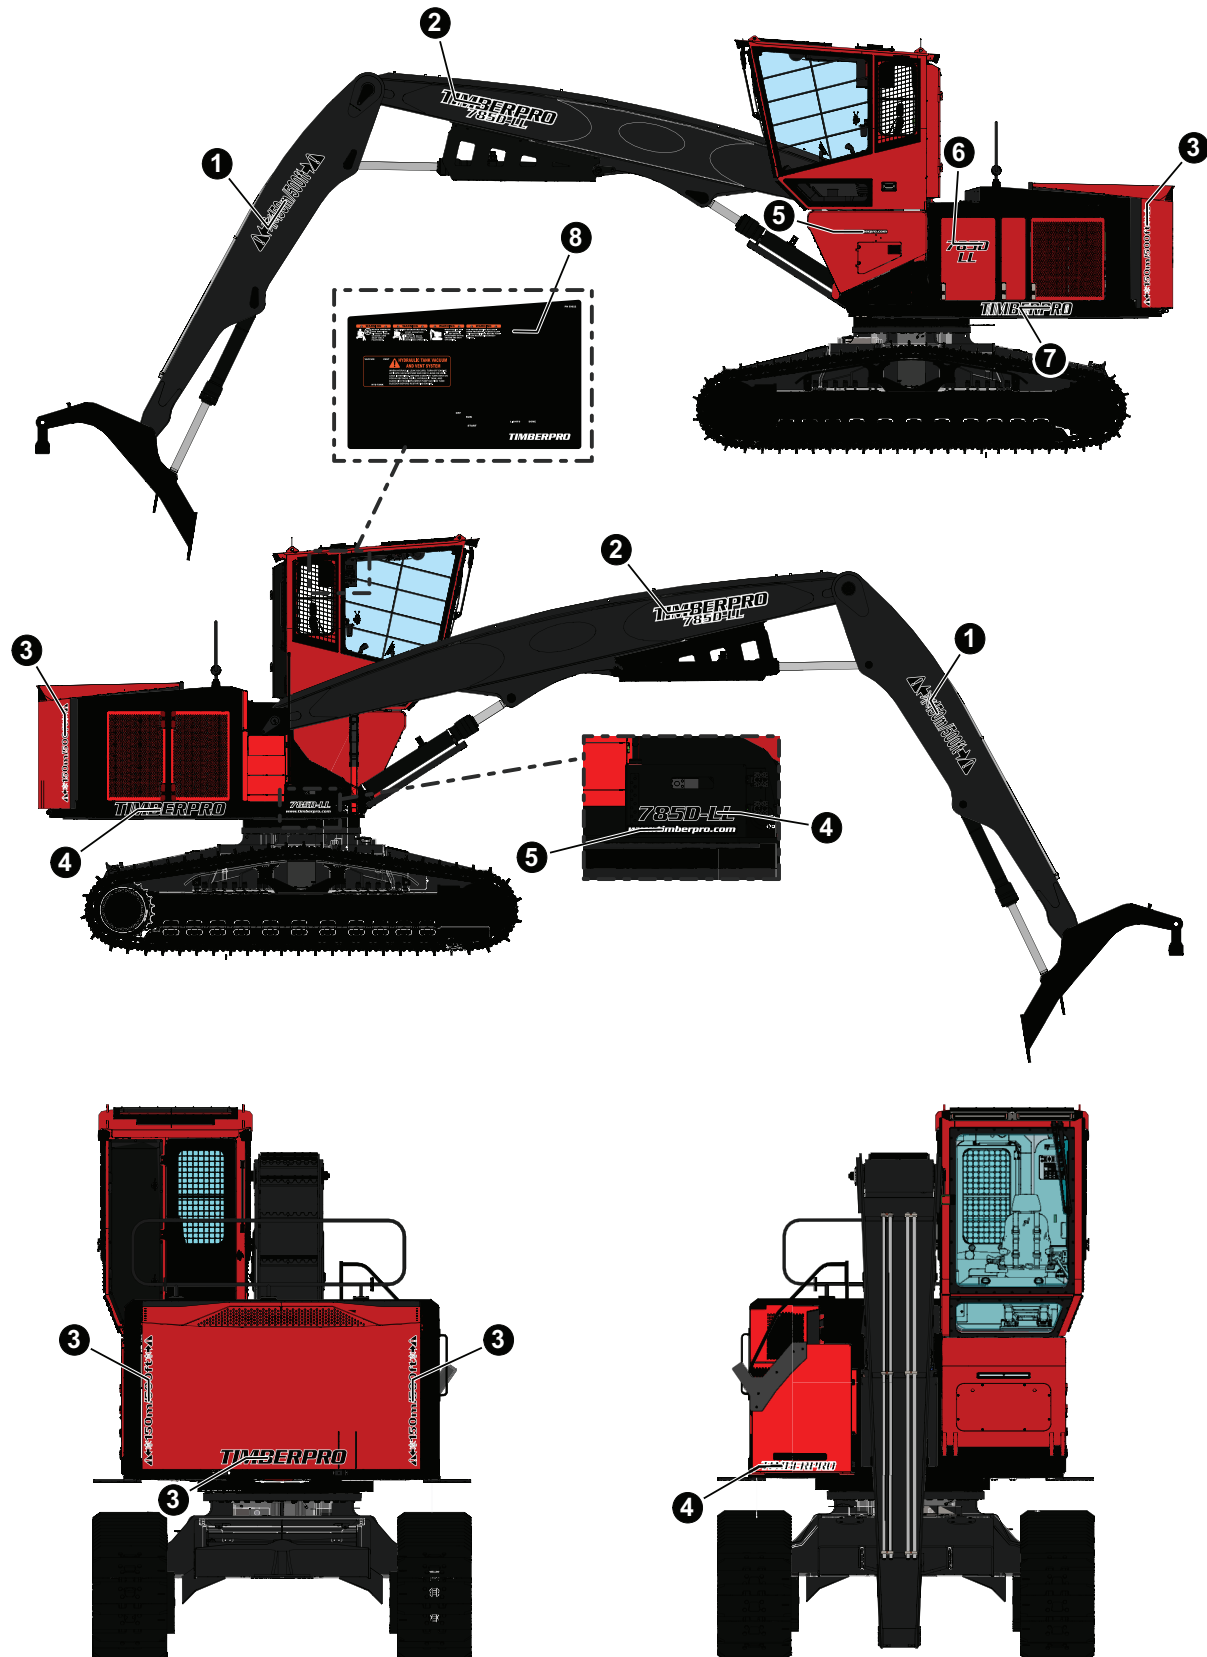

UPPER TURNTABLE - NV & LV

UPPER TURNTABLE AND BOOM EXTERIOR DECALS

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	57920 (Kit #)	1	DECAL, BOOM Universal Keep Clear (Kit Includes 2 Decals)	
2	59040 (Kit #)	1	DECAL, MODEL # - 785D-LL (Kit Includes 5 Decals; Two TimberPro/785D-LL Decals and Three 785D-LL Decals)	
3	57628 (Kit #)	1	KIT, DECAL - "D" SERIES Outside (Kit Includes 3 Decals:) Two Warning Decals One TimberPro Decal	
4	57628 (Kit #)	1	DECAL, KEEP CLEAR - GULLWING (Kit Includes 3 Decals; Two " Keep Clear " Decals and One " TimberPro " Gullwing Decal)	
5	57908 (Kit #)	1	DECAL, Logos-Web Address (Kit Includes 2 " www.timberpro.com " Decals)	
6	59053	1	DECAL, MODEL # - 785D-LL	
7			NO PART # - No Kit# Shawn says it was custom made.	
8	59022	1	DECAL, DASH - LogLoader	

UPPER TURNTABLE - NV & LV

UPPER TURNTABLE CAB DECALS

1
(KIT ONLY)

TIMBERPRO

CAUTION

SEVERE STRUCTURAL DAMAGE CAN OCCUR IF TAPERED HUB ASSEMBLIES ARE NOT KEPT TIGHT

2


DO NOT tighten 1" bolt

Torque Tapered Hub Retaining Bolts to 100 ft.lbs. (135 Nm)

THE FOLLOWING BREAK-IN PROCEDURE MUST BE PERFORMED:

1. Torque tapered hub retaining bolts after the first 2 hours of operation (5 pivots, 1 pivot if no cab level system).
2. Torque tapered hub retaining bolts each day of operation until the tapered hub is seated (the tapered hub is seated when the retaining bolts no longer loosen with operation).
3. Torque tapered hub retaining bolts after every 50 hours of operation.
4. Visually inspect tapered hub pivots daily.

PN 1000C

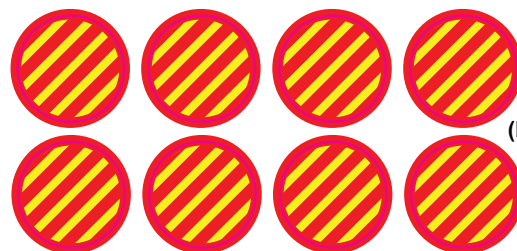

3
(KIT ONLY)

WARNING: USE OF THIS ROPS IN A DAMAGED, MODIFIED OR ABUSED CONDITION OR WITH PROPER OVERTURN IS UNSAFE AND THE OPERATOR PROTECTION IS NO LONGER SUITABLE AND MUST BE REPLACED. ANY ALTERATIONS, MODIFICATIONS, ADD-ONS OR REPAIR WITHOUT THE WRITTEN CONSENT OF MANUFACTURE WILL VOID THE PRODUCT'S WARRANTY, LIABILITY AND CERTIFICATION.

MANUFACTURED FOR: TimberPro, Inc. 1407 Industrial Dr. Shawano, WI 54166 USA MANUFACTURED BY: Guthrie Welding 1345 Broadway Rd. Shawano, WI 54166 USA	ROLLOVER PROTECTION STRUCTURE (ROPS) CERTIFICATION This ROPS, when properly installed in accordance with TimberPro, INC. installation instructions and a procedure which is not altered to exceed the certification test weight and distribution criteria established by: ISO 883-2:2007 - 883:2005 - 883:2003 FIC 5012 - 5012 - 5014 - 5015 OR-OSHA 431-567-4775 ISO-OSHA 2007C 1912:2006 TimberPro ROPS #9140 ROPS WPU YEAR: 2018	MODELS: 680-SERIES 700-SERIES 800-SERIES MAXIMUM MACHINE MASS: 101,615 LBS (46,092 Kg)
--	--	--

4
(KIT ONLY)

NOTICE PN 51720

ALWAYS REPLACE FUSE WITH THE ONE THAT IS SPECIFIED. THIS MACHINE IS EQUIPPED WITH A 24 VDC ELECTRICAL SYSTEM

6

TIMBERPRO TimberPro Inc.
1407 Industrial Dr.
Shawano WI 54166

US Pat. D523029
US Pat. Pending 11/306434
US Pat. Pending 12/741115

PN 52807

7

1
(KIT ONLY)

TIMBERPRO

NOTICE

FOR SAFETY, PRACTICE THE FOLLOWING SAFETY MEASURES.

GENERAL SAFETY RULES

1. To operate this piece of machinery YOU MUST BE TRAINED AND QUALIFIED.
2. Study the operator's manual and check your company's regulations and safety procedures.
3. Get to know capabilities and limitations of equipment and correct operating procedures.
4. Operate equipment only when you feel physically fit and not under the influence of alcohol or drugs.
5. Keep a serviceable first aid kit in good order on the vehicle.
6. Maintain a charged fire extinguisher on the vehicle AND KNOW HOW TO USE IT.
7. Do not remove mufflers, spark arrestors, protection guards.
8. Clean out debris from high heat areas, such as engine compartment, on at least a daily basis and always after quitting operations for the day.
9. Keep floor, steps and running boards clean and free of oil, ice, mud and loose objects.
10. Inspect equipment daily for signs of failure or beginning of failure.
11. When fueling, servicing or repairing, set booms on the ground and shut down engine.
12. Controls should not be changed without written consent from the factory.

OPERATING SAFETY MEASURES

1. Check all controls and functions for correct response before beginning work cycle with equipment.
2. Use seat belt at all times when operating the machine.
3. Operate all controls from the operator's station only.
4. Whenever leaving the operator's seat, stop the engine. Set booms on the ground so they are not supported by the hydraulics.
5. Be very careful when operating on slopes. Whenever possible, travel straight up or down to minimize possibility of rollover.
6. Be aware of people around the equipment at all times. When engine is running, maintain a safe operating distance between the equipment and other personnel and follow the approved signaling practices.
7. Use recommended protective clothing and devices such as gloves, safety boots, safety hats, goggles and ear protection when necessary.
8. Carry no passengers.

PN 1000C

WARNING

CALIFORNIA - Proposition 65 Warning
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

11

9
(KIT ONLY)

MADE IN U.S.A.

WARNING

Do not store tools or heavy items in this compartment.

10

(KIT ONLY)

8
(KIT ONLY)


EMERGENCY ESCAPE

EMERGENCY ESCAPE

EMERGENCY ESCAPE

UPPER TURNTABLE - NV & LV


UPPER TURNTABLE CAB DECALS

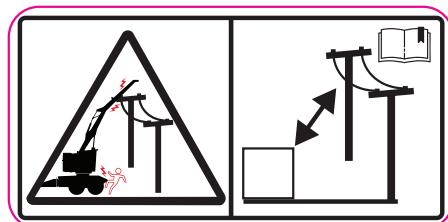

12



13

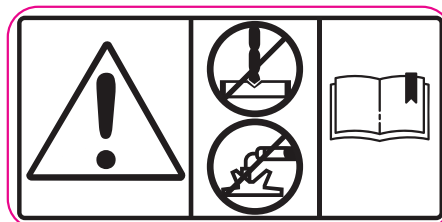

14


NOTE:
ALL DECALS ON THIS PAGE ARE
TO ORDERED AS A KIT ONLY



15



16

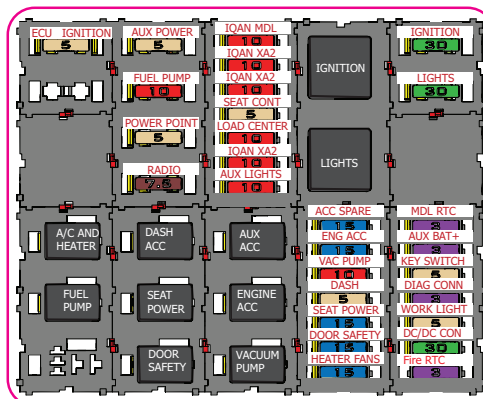

17

55493 KIT DECALS (REF. 1-17)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
-	55493EN	1	KIT, DECAL - "D" SERIES Outside (ENGLISH)	
	55493BR	1	KIT, DECAL - "D" SERIES Outside (BRAZILIAN PORTUGUESE)	
	55493FR	1	KIT, DECAL - "D" SERIES Outside (FRENCH)	
	55493SP	1	KIT, DECAL - "D" SERIES Outside (SPANISH)	
	55493SW	1	KIT, DECAL - "D" SERIES Outside (SWEEDISH)	

NOTE:

- Individual replaceable decals from Kit#55493 are listed below.
- Replaceable decals listed below are available in the languages listed above. To order an individual decal in a specific language use the two digit language extension from above. ie: 52827FR

KIT 55493 DECALS THAT CAN ORDERED INDIVIDUALLY

REF	PART #	QTY	DESCRIPTION	SEE SECTION
-	55493 NA		KIT, DECAL - "D" SERIES Outside	
2	18066 1		DECAL, TAPERED HUB TORQUE	
5	(CALL)		DECAL, CAB ROPS/OPS - (785)	
6	21570 1		FUSE NOTICE	
7	52827 1		DECAL, Patent Pend Logo	
11	18337 1		DECAL, CALIFORNIA DIESEL EXHAUST WARNING	

[illegible]

UPPER TURNTABLE - NV & LV

UPPER TURNTABLE WARNING, INFO, & CAUTION DECALS


KIT DECALS (REF. 1-39)

REF	PART #	QTY	DESCRIPTION	SEE SECTION
-	57909EN	1	KIT, DECAL - "D" SERIES Outside (ENGLISH)	
-	57909FR	1	KIT, DECAL - "D" SERIES Outside (FRENCH)	
-	57909SP	1	KIT, DECAL - "D" SERIES Outside (SPANISH)	
-	57909GR	1	KIT, DECAL - "D" SERIES Outside (GERMAN)	
-	57909BR	1	KIT, DECAL - "D" SERIES Outside (Brazilian Portuguese)	

KIT 57909 DECALS THAT CAN ORDERED INDIVIDUALLY

REF	PART #	QTY	DESCRIPTION	SEE SECTION
3	16060	1	DECAL, DANGER CRUSH ZONE	
8	57952	1	DECAL, GREASE POINTS - Upper	
9	53956	1	DECAL, lower man acc warning	
10	51424	1	DECAL, Fuel Filter Location Inside	
11	16607	1	DECAL, PRESSURIZED HYD. TANK	
13	52892	1	DECAL, TIE DOWN	
15	19678	1	DECAL, TIRE PRESSURE	
16	53231	1	DECAL, Aux Hyd Oil Tank	
17	53869	1	DECAL, MOVING PARTS WARNING	
23	52672	1	DECAL, GULLWING SUPPORT WEIGHT WARNING	
24	50424	1	DECAL, TORQUE 2" NUT NOTICE	
26	52715	1	DECAL, GREASE POINTS - squirt 630/830 (NOT USED ON 785 MODEL)	
27	52716	1	DECAL, GREASE POINTS - feller stick 630 (NOT USED ON 785 MODEL)	
28	54766	1	DECAL, Pressure Washing Warning	
29	25959	1	DECAL, DIESEL FUEL ONLY	
30	51927	1	DECAL, Fire Suppression actuator inside	
31	24286	1	DECAL, WELDING NOTICE - 300HP	
32	53869	1	DECAL, MOVING PARTS WARNING	
33	54766	1	DECAL, Pressure Washing Warning	
34	19765	2	DECAL, KEEP CLEAR OF MOVING PARTS	
35	23451	1	DECAL, GREASE FILTER CANISTER	
36	53008	1	DECAL, engine electrical center MDL	
37	51902	1	DECAL, Door Lift Pump Oil	
39	50359	1	DECAL, SECURE COVER CAUTION	

UPPER TURNTABLE - NV & LV
LOWER CARBODY DECALS

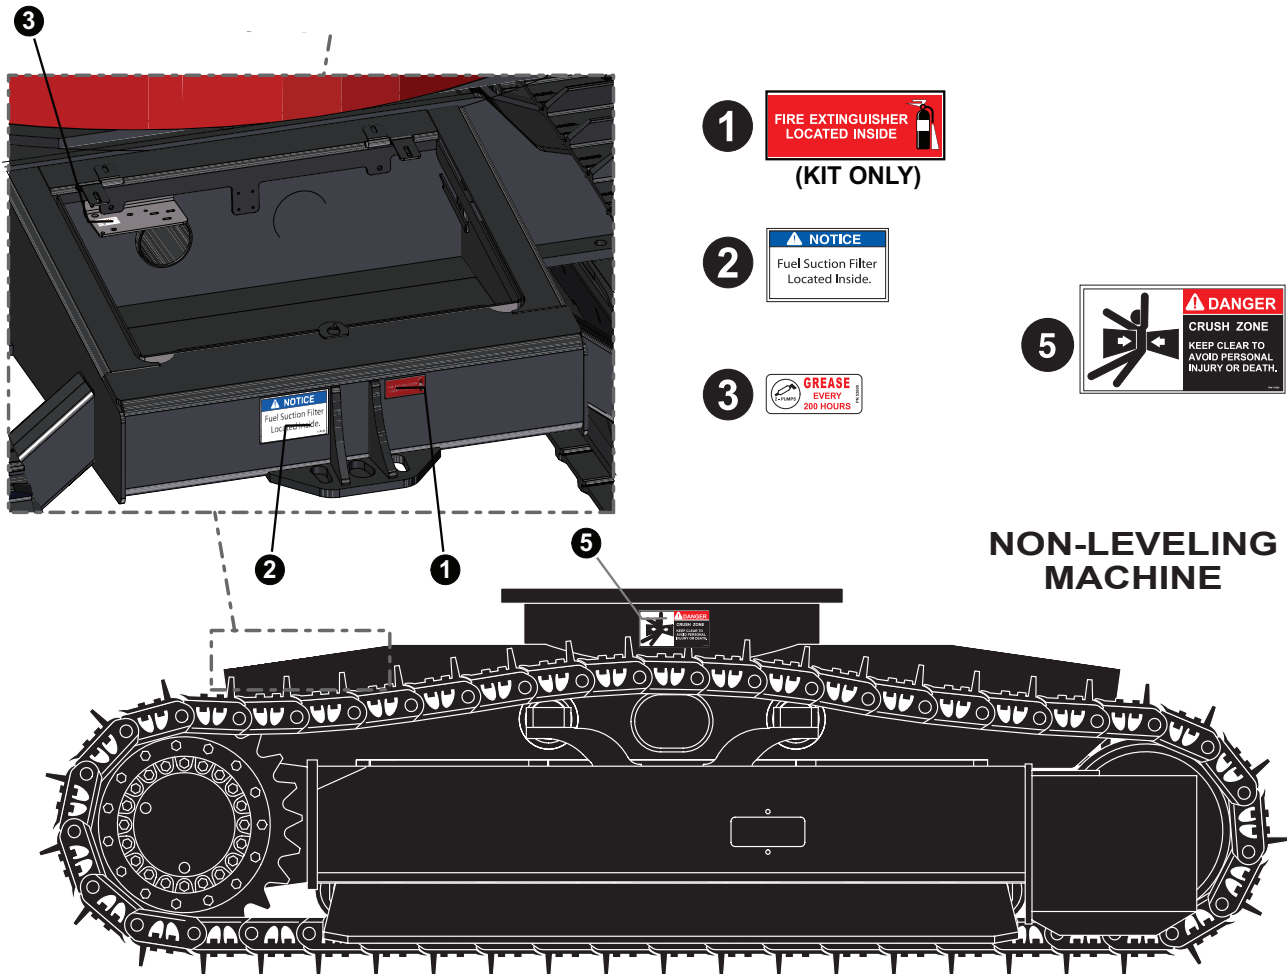

REF	PART #	QTY	DESCRIPTION	SEE SECTION
1	57909	1	DECAL, Fire Extinguisher Inside (KIT ONLY)	See previous Page
2	51424	1	DECAL, Fuel Suction Filter location	
3	53690	1	DECAL, 200 Hour Grease Notice	
4	50424	2	DECAL, TORQUE 2" NUT NOTICE	
5	16060	4	DECAL, DANGER CRUSH ZONE	

PAGE INTENTIONALLY LEFT BLANK

THIS PAGE LEFT BLANK FOR NOTES

[illegible]